



# BODY OUTSIDE MOULDING COMPONENTS

B002K-01

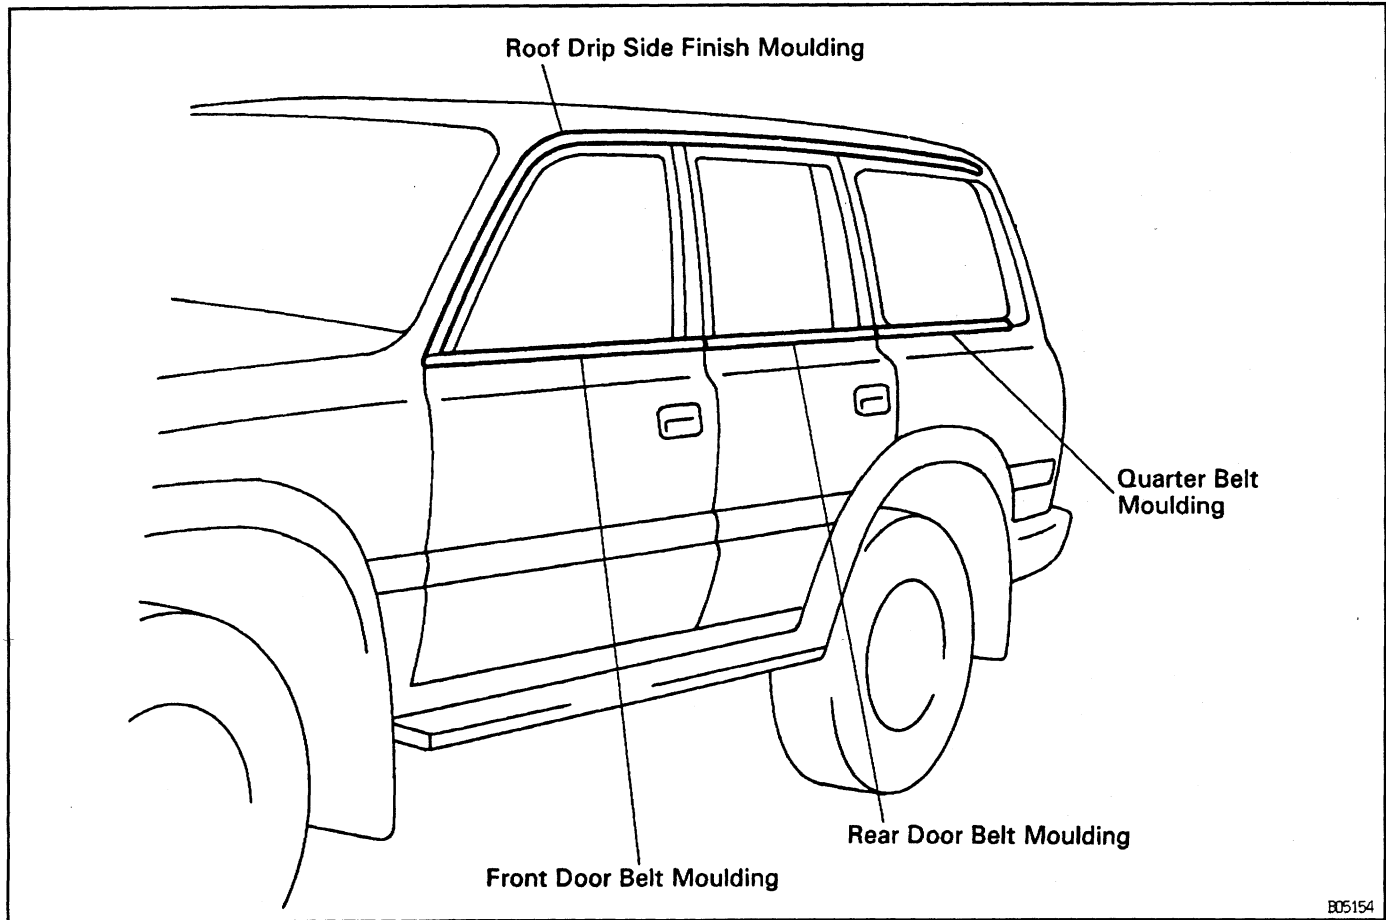

B05154

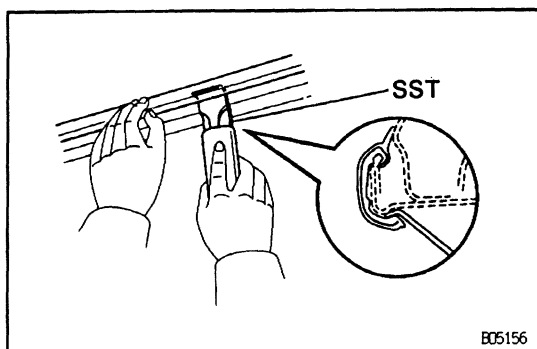

B05156


## ROOF DRIP SIDE FINISH MOULDING REMOVAL

B001B-06

### REMOVE ROOF DRIP MOULDING

Using SST, pull off the roof drip moulding from front ends.

SST 09806-30010

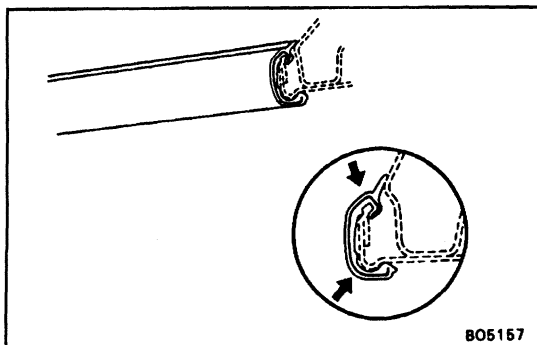


B05157

## ROOF DRIP SIDE FINISH MOULDING INSTALLATION

B001C-06


### INSTALL ROOF DRIP MOULDING

Attach the upper edge of the moulding to the body flange. Tap on the moulding by hand.

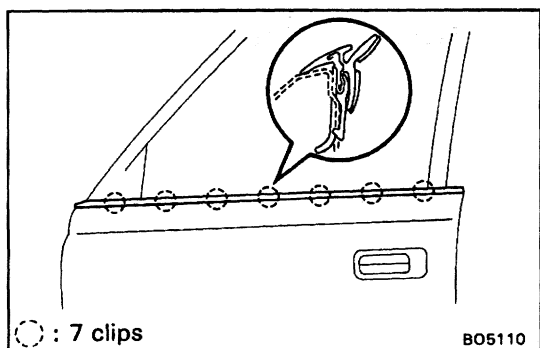

## DOOR BELT MOULDING REMOVAL AND INSTALLATION


### 1. REMOVE FRONT DOOR BELT MOULDING

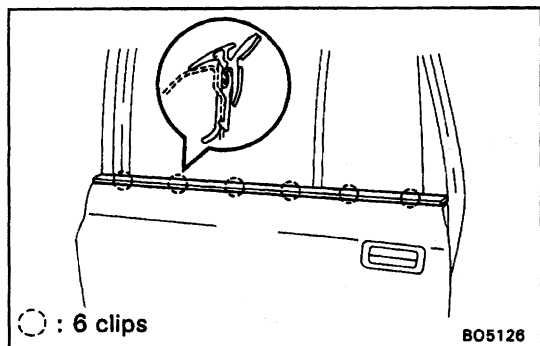

### 2. REMOVE REAR DOOR BELT MOULDING

### 3. INSTALL FRONT DOOR BELT MOULDING

### 4. INSTALL REAR DOOR BELT MOULDING

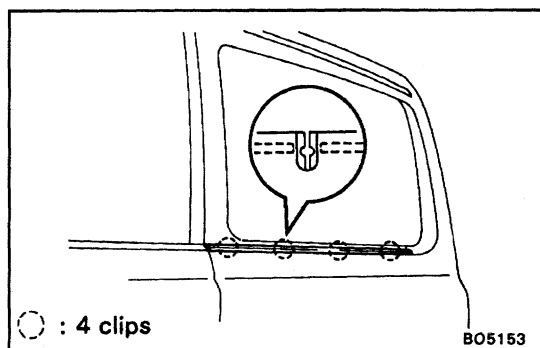

## QUARTER BELT MOULDING REMOVAL AND INSTALLATION

### REMOVE QUARTER BELT MOULDING

Pry out the clips from the edge of the panel, and remove the moulding.

### INSTALL QUARTER BELT MOULDING

Insert the claw of the clips into the upper panel slit and push the moulding onto the panel.