



SEAT BELT COMPONENTS

80046-03

Front Seat Belt

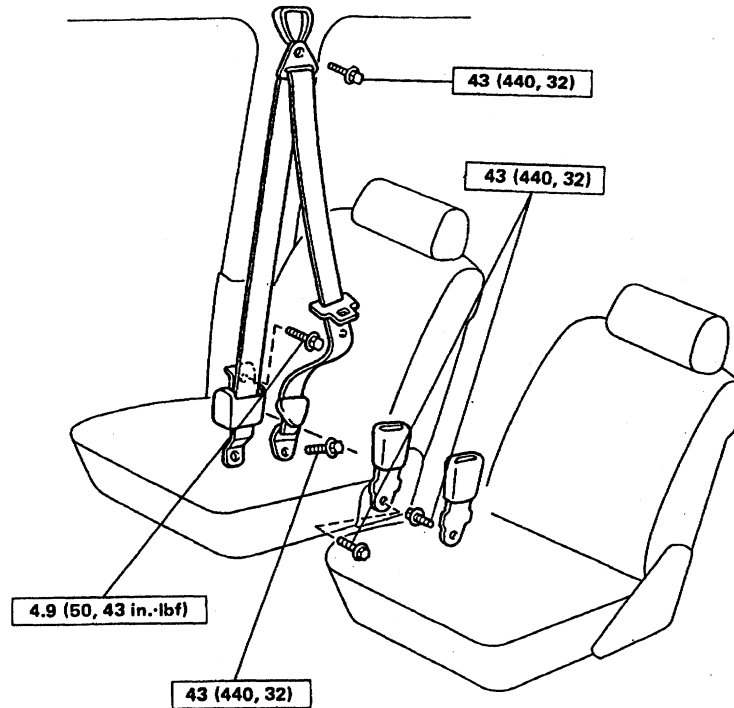

Second Seat Belt

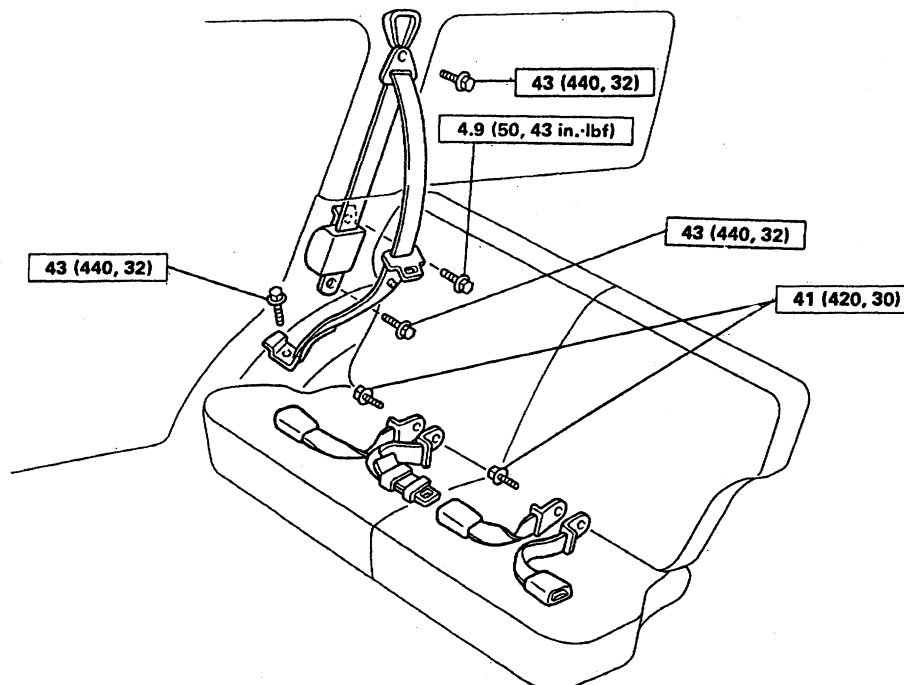


N09532
N09533


N·m (kgf·cm, ft·lbf) : Specified torque

COMPONENTS (Cont'd)

Third Seat Belt

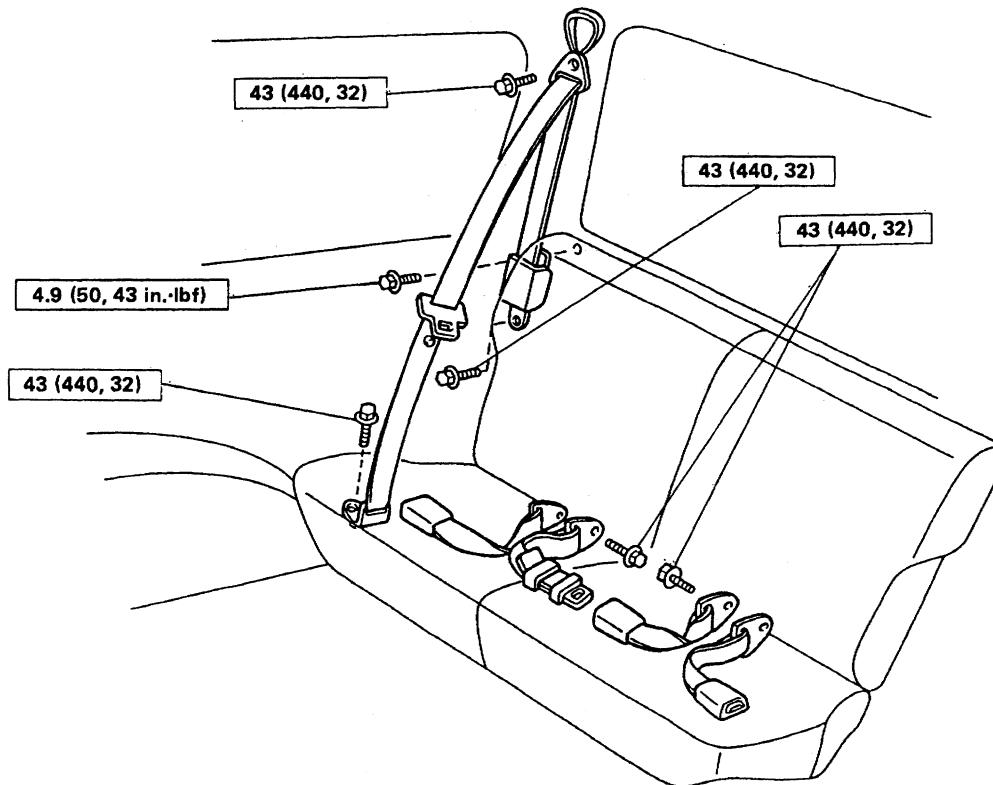

N·m (kgf·cm, ft·lbf) : Specified torque

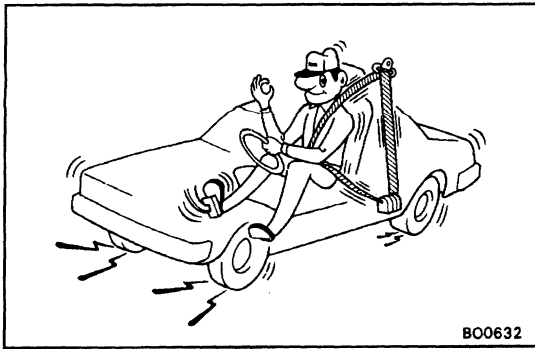

SEAT BELT INSPECTION


Emergency Locking Retractor (ELR) and Automatic Locking Retractor (ALR) type

1. RUNNING TEST (IN SAFE AREA)

for all seats:

- (a) Fasten the front seat belts.
- (b) Drive the car at 10 mph (16 km/h) and make a very hard stop.
- (c) Check that the belt is locked and cannot be extended at this time.

HINT: Conduct this test in a safe area. If the belt does not lock, remove the belt mechanism assembly and conduct the following static check. Also, whenever installing a new belt assembly, verify the proper operation before installation.

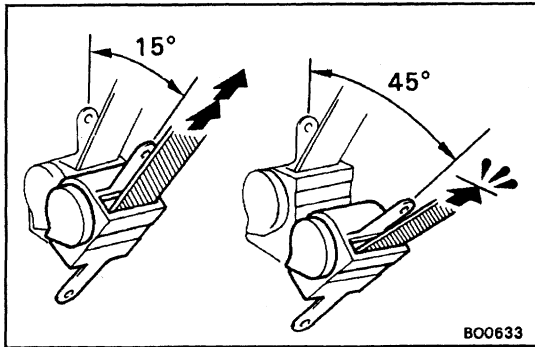


2. STATIC TEST

for all seats:

- (a) Verify that the belt locks when pulled out quickly.
- (b) Remove the locking retractor assembly.
- (c) Tilt the retractor slowly.
- (d) Verify that the belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out at over 45 degrees of tilt.

If a problem is found, replace the assembly.

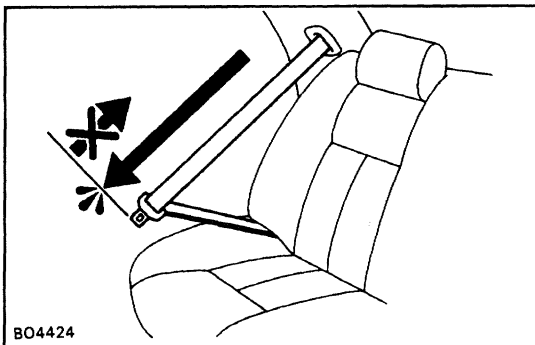

except for driver's seat:

- (e) Pull out the whole belt, release it slightly and then pull it out again.
 - (f) Verify that the belt cannot be extended further.
- If a problem is found, replace the assembly.