


WHEEL OPENING EXTENSION COMPONENTS

8002K-08

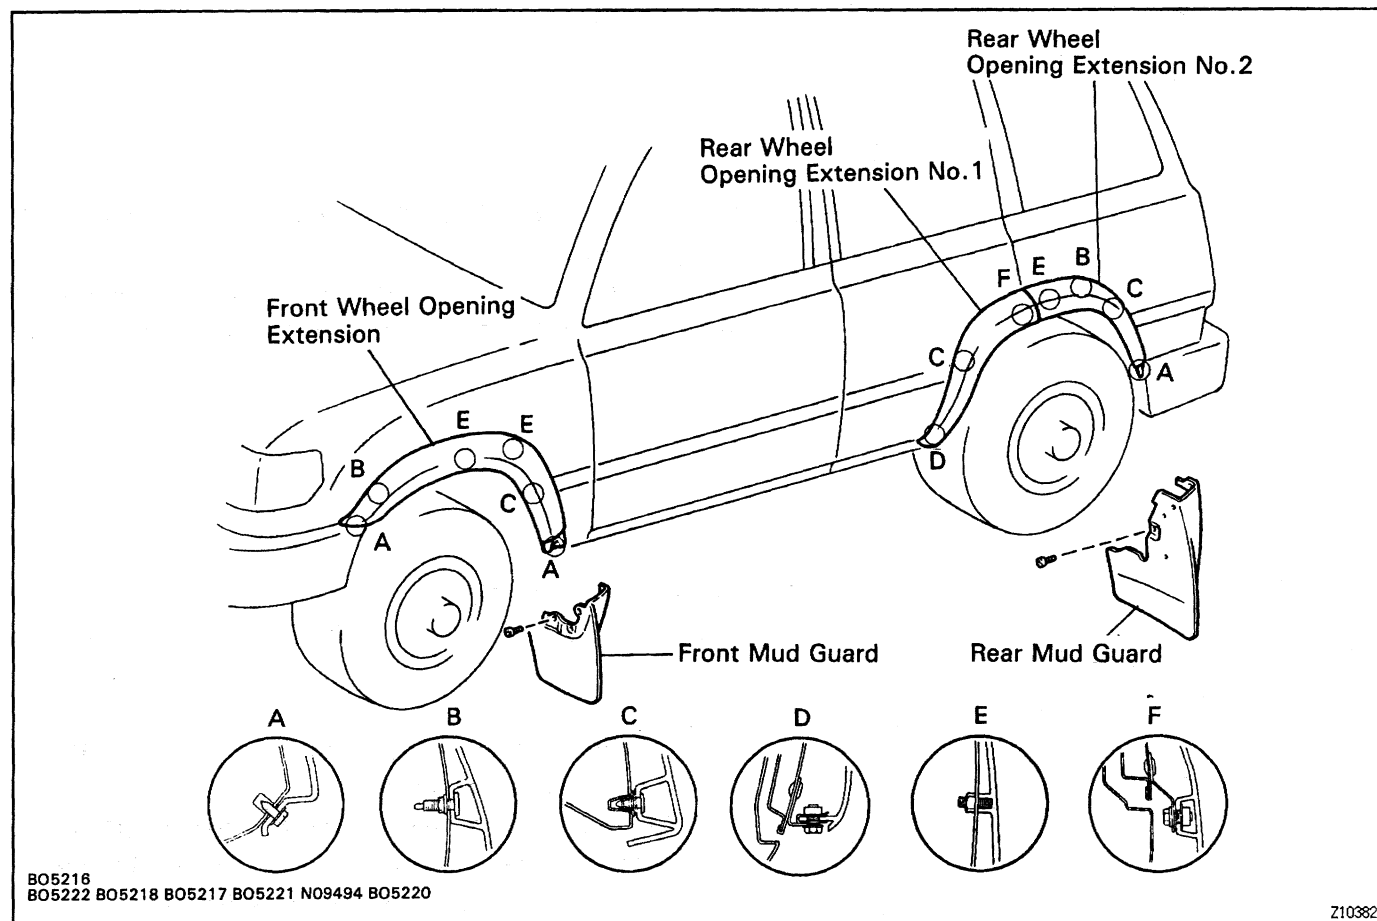

FRONT WHEEL OPENING EXTENSION

800U4-02

1. REMOVE FRONT MUD GUARD

Remove 6 screws and the mud guard.

2. REMOVE FRONT WHEEL OPENING EXTENSION

(a) Remove 2 bolts and 2 nuts.

(b) Remove the extension by pulling.

REAR WHEEL OPENING EXTENSION NO. 1 REMOVAL

REMOVE REAR WHEEL OPENING EXTENSION NO. 1

(a) Remove 2 bolts.

(b) Remove the extension by pulling.

REAR WHEEL OPENING EXTENSION NO. 2 REMOVAL

1. REMOVE REAR MUD GUARD

Remove 8 screws and the mud guard.

2. REMOVE REAR WHEEL OPENING EXTENSION NO. 2

(a) Remove 2 bolts and the nut.

(b) Remove the extension by pulling.

FRONT WHEEL OPENING EXTENSION^{100W-02} INSTALLATION

1. INSTALL FRONT WHEEL OPENING EXTENSION

(a) Tap the extension to install it.

(b) Install 2 bolts and 2 nuts.

2. INSTALL FRONT MUD GUARD

Install the mud guard with 6 screws.

^{100W-02}

REAR WHEEL OPENING EXTENSION NO. 1 INSTALLATION

INSTALL REAR WHEEL OPENING EXTENSION NO. 1

(a) Tap the extension to install it.

(b) Install 2 bolts.

REAR WHEEL OPENING EXTENSION NO. 2 INSTALLATION

1. INSTALL REAR WHEEL OPENING EXTENSION NO. 2

(a) Tap the extension to install it.

(b) Instal 2 bolt, and the nut.

2. INSTALL MUD GUARD

Install the mud guard with 8 screws.