


# OIL NOZZLE COMPONENTS FOR REMOVAL AND INSTALLATION

EG0NU-02

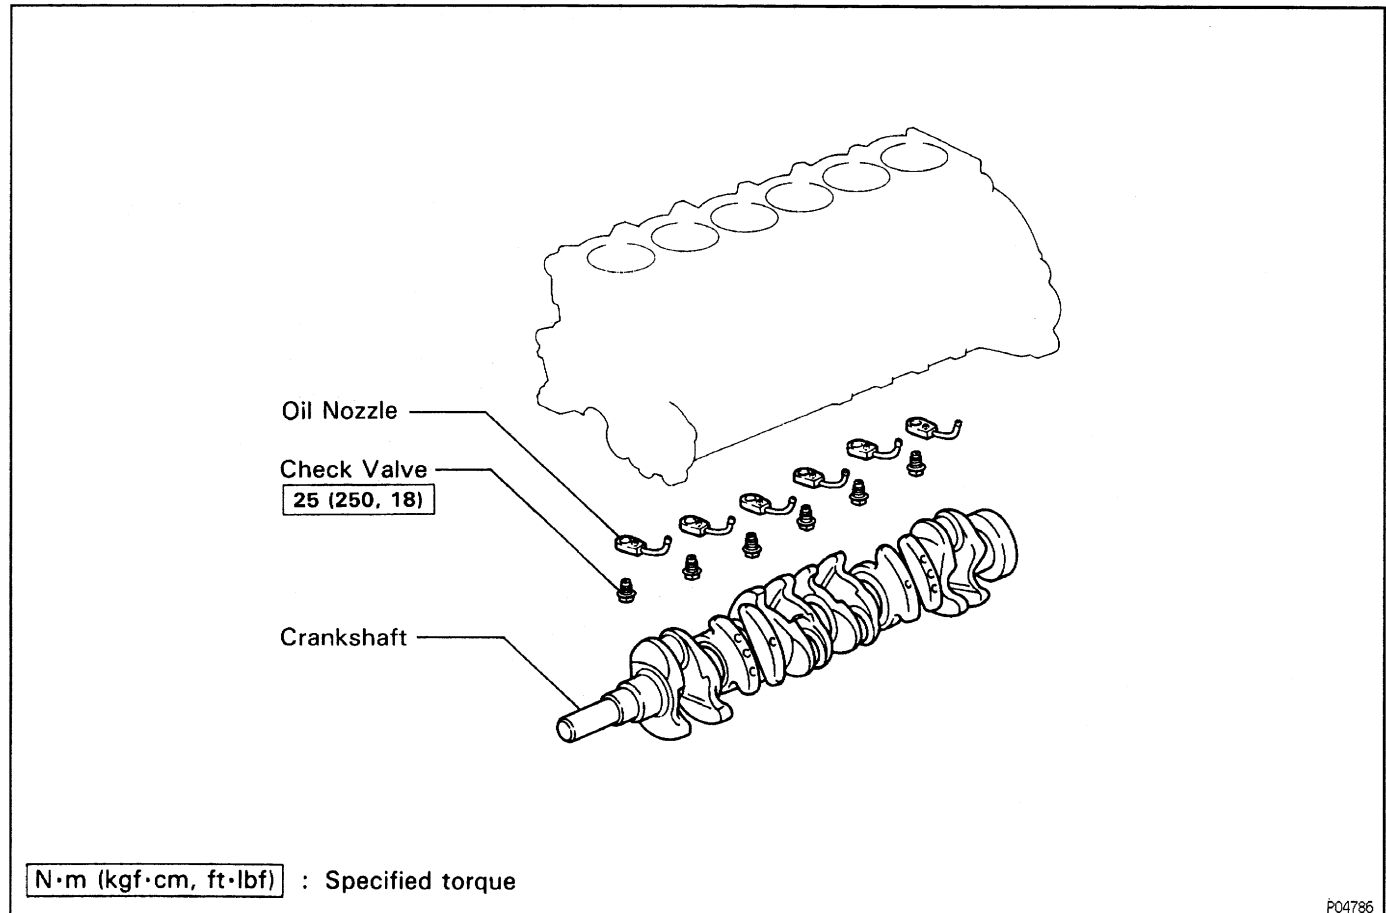


## OIL NOZZLES REMOVAL

EG0NV-03


### 1. REMOVE CRANKSHAFT

(See pages EG -106 to 129)

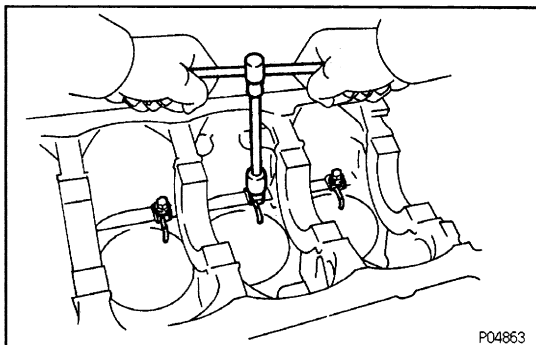

### 2. REMOVE OIL NOZZLES

Remove the 6 check valves and oil nozzles.

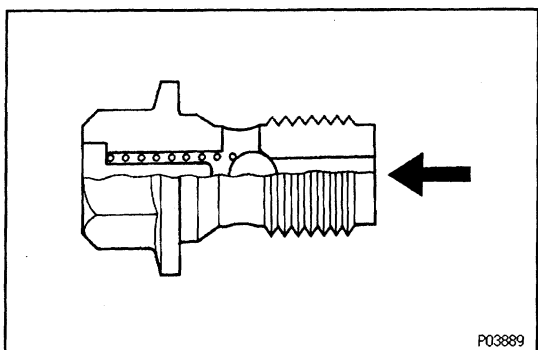


## OIL NOZZLES COMPONENTS INSPECTION

### 1. INSPECT CHECK VALVES

Push the valve with a wooden stick to check if it is stuck.


If stuck, replace the check valve.

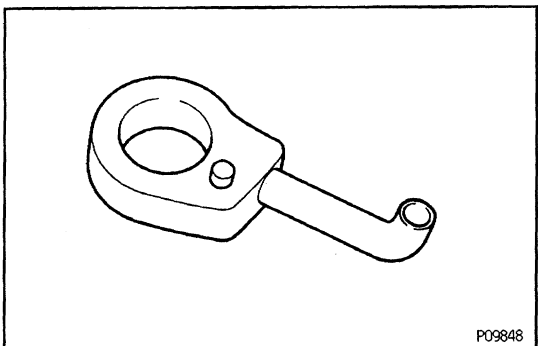

### 2. INSPECT OIL NOZZLES

Check the oil nozzles for damage or clogging.

If necessary, replace the oil nozzle.

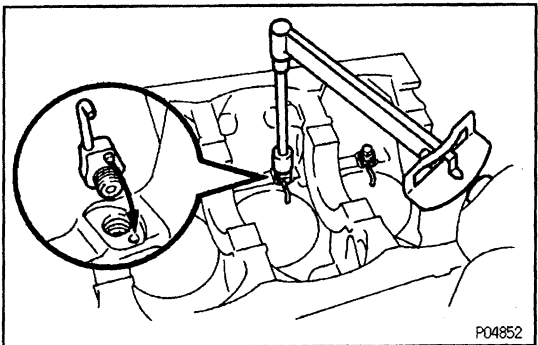

## OIL NOZZLES INSTALLATION

EGONX-03

(See Components for Removal and Installation)

### 1. INSTALL OIL NOZZLES

(a) Align the pin of the oil nozzle with the pin hole of the cylinder block.

(b) Install the oil nozzle with the check valve. Install the 6 oil nozzles.

Torque: 25 N-m (250 kgf-cm, 18 ft-lbf)

### 2. INSTALL CRANKSHAFT

(See pages [EG-145](#) to 163)