


CIRCUIT OPENING RELAY


EG00T-07

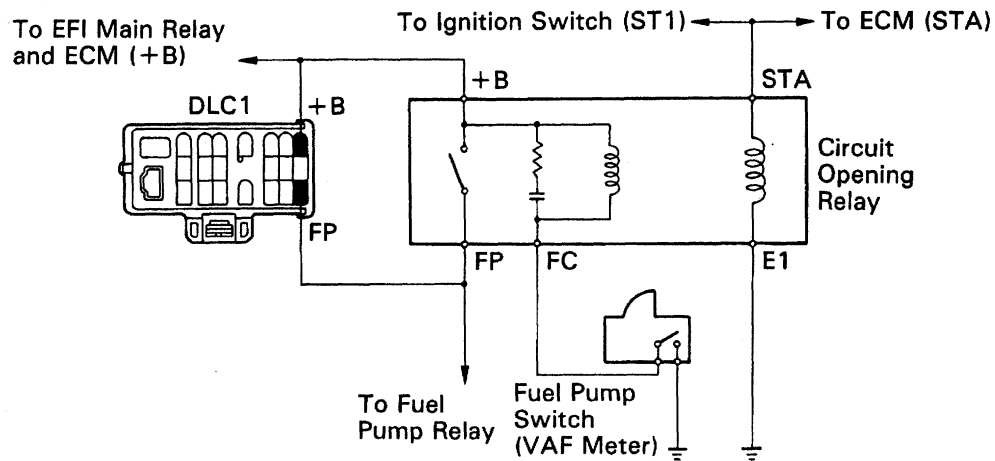

P03897

COMPONENTS FOR REMOVAL AND INSTALLATION

EG178-01

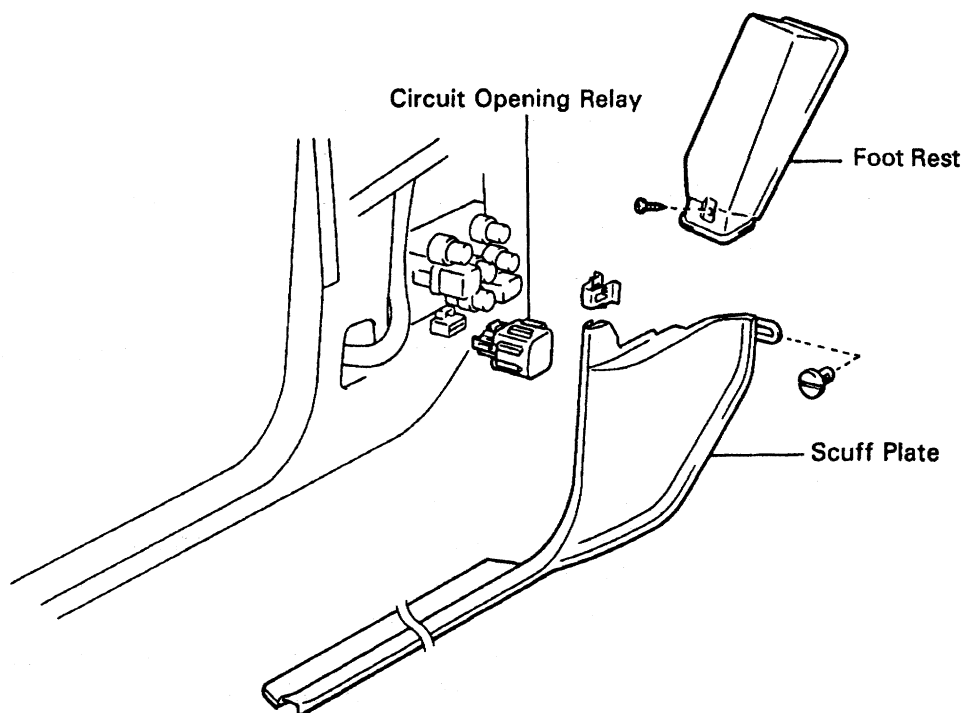


P09368

CIRCUIT OPENING RELAY INSPECTION

E018N-01

(See Components for Removal and Installation)

1. REMOVE FOOT REST
2. REMOVE SCUFF PLATE
3. REMOVE CIRCUIT OPENING RELAY

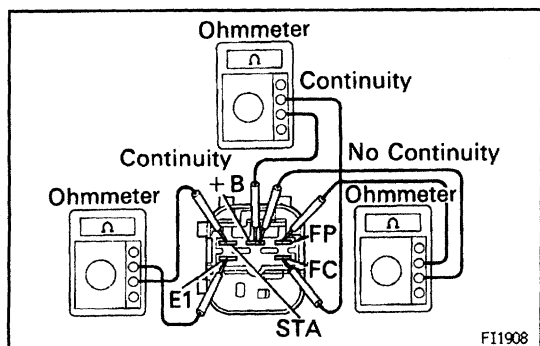


4. INSPECT CIRCUIT OPENING RELAY

A. INSPECT RELAY CONTINUITY


- (a) Using an ohmmeter, check that there is continuity between terminals STA and E1
- (b) Check that there is continuity between terminals +B and FC.
- (c) Check that there is no continuity between terminals +B and FP.

If continuity is not as specified, replace the relay.

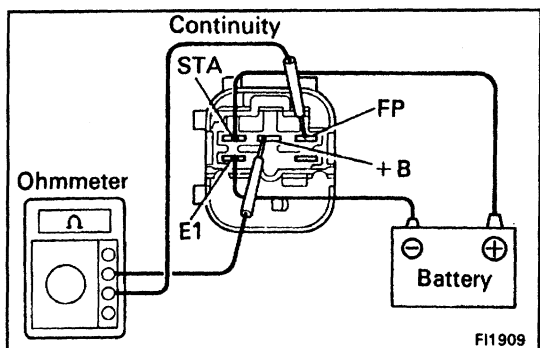

B. Inspect relay operation

- (a) Apply battery voltage across terminals STA and E1.
- (b) Using an ohmmeter, check that there is continuity between terminals +B and FP.

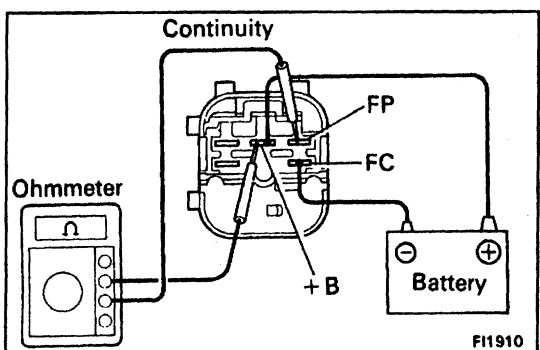

- (c) Apply battery voltage across terminals +B and FC.
- (d) Check that there is continuity between terminals +B and FP.

If operation is not as specified, replace the relay.

5. REINSTALL CIRCUIT OPENING RELAY

6. REINSTALL SCUFF PLATE

7. REINSTALL FOOT REST