
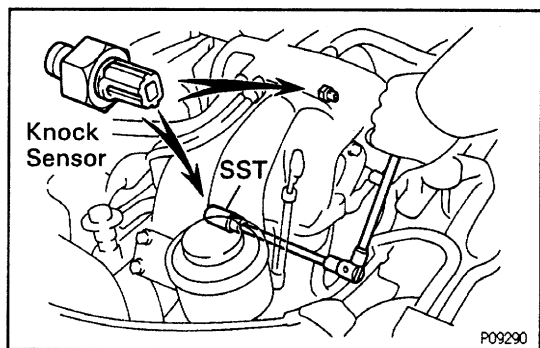


KNOCK SENSOR

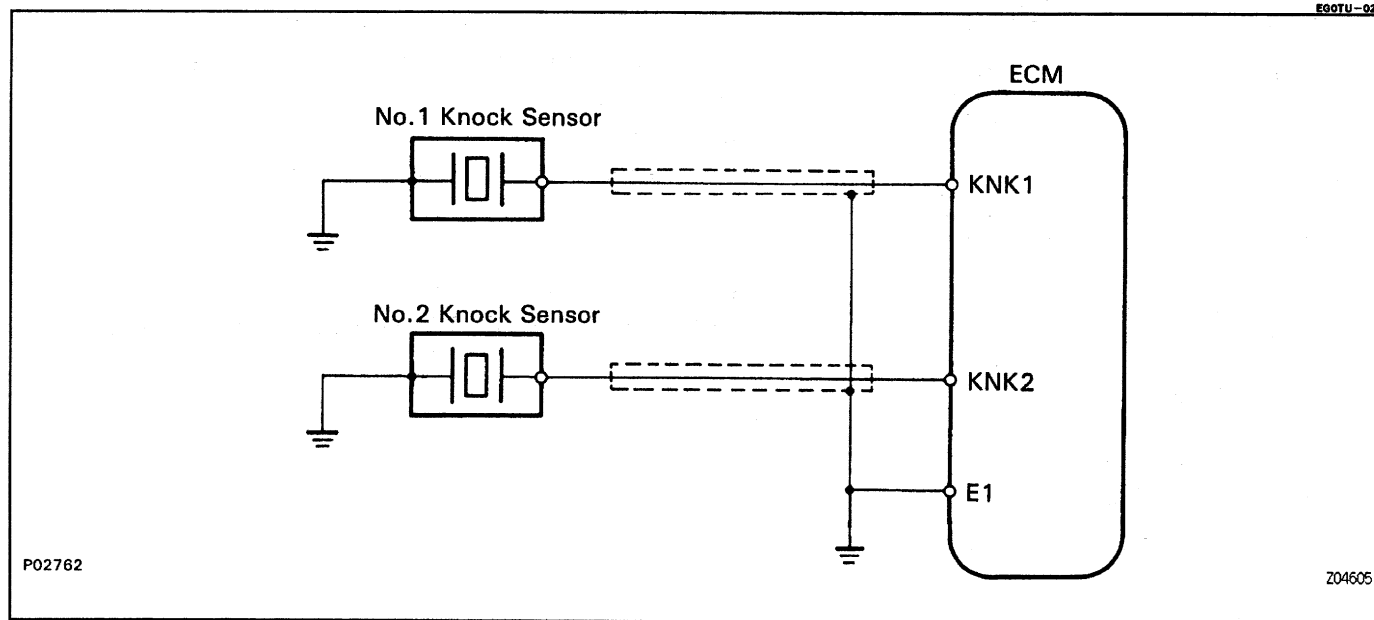


KNOCK SENSORS INSPECTION

EG0TV-02

1. REMOVE KNOCK SENSOR


- (a) Disconnect the knock sensor connector.
 - (b) Using SST, remove the knock sensor.
- SST 09816-30010

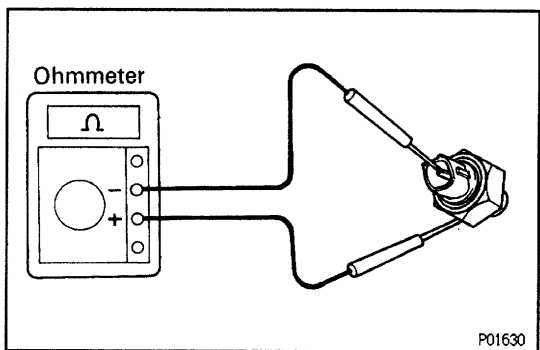

2. INSPECT KNOCK SENSOR

Using an ohmmeter, check that there is no continuity between the terminal and body.

If there is continuity, replace the sensor.

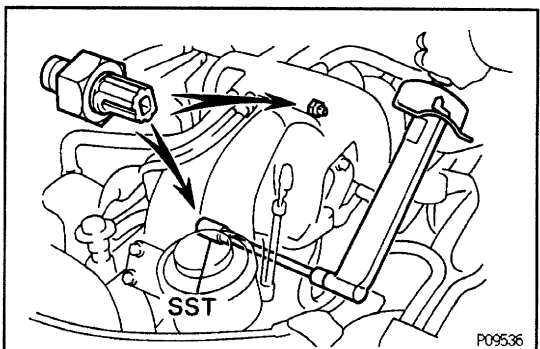

3. REINSTALL KNOCK SENSOR

- (a) Using SST, install the knock sensor.
- SST 09816 - 30010

Torque: 44 N·m (450 kgf·cm, 33 ft·lbf)

- (b) Connect the knock sensor connector.