



VSV FOR PAIR

EG000-04

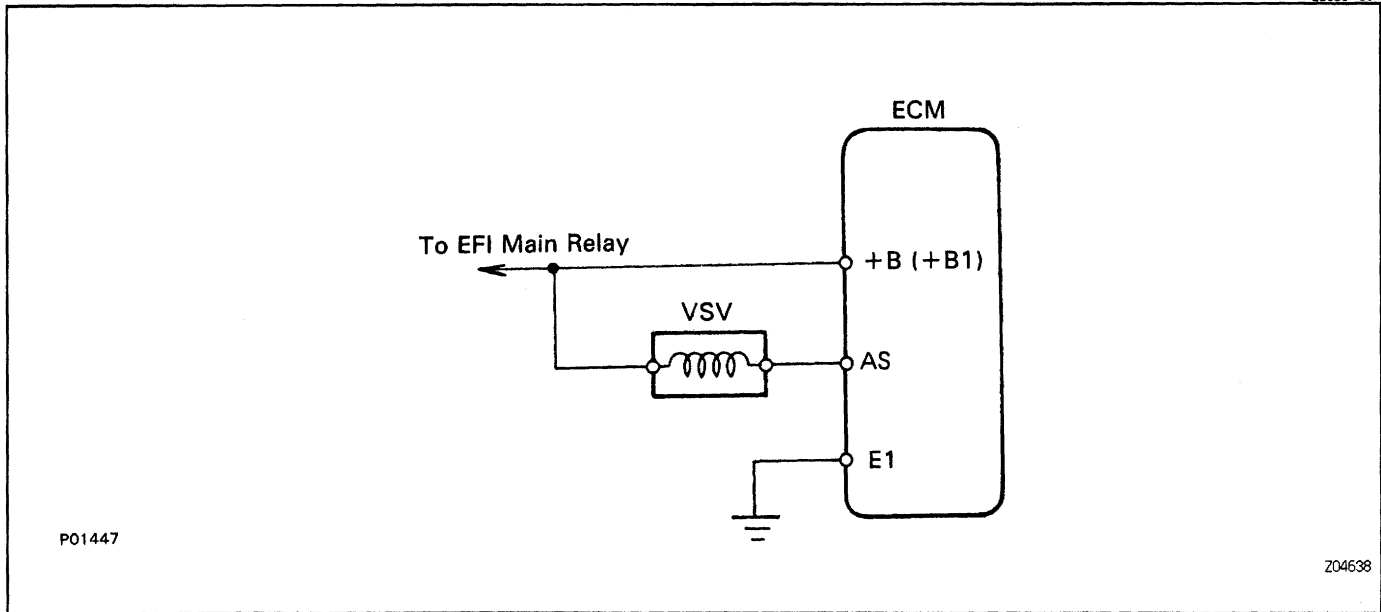

EG178-02

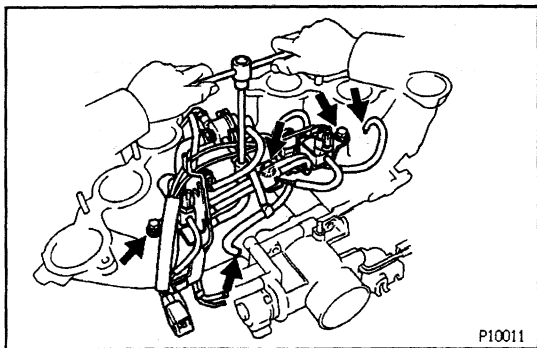

VSV INSPECTION


1. REMOVE AIR INTAKE CHAMBER

(See pages [EG-269](#) and 270)


2. REMOVE VSV

(a) Disconnect the air hose and vacuum hose from the air intake chamber.

(b) Remove the 4 bolts and emission control valve set assembly.

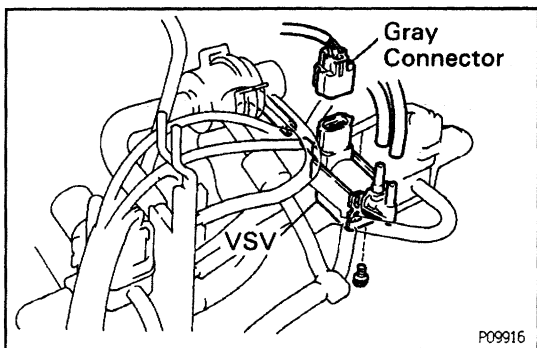

(c) Disconnect the connector and 3 vacuum hoses, and remove the screw and VSV.

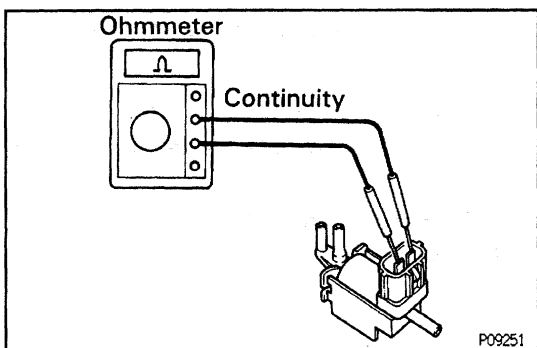

3. INSPECT VSV


A. Inspect VSV for open circuit

Using an ohmmeter, check that there is continuity between the terminals.

Resistance:


37 - 44Ω at 20° c (68° F)

If there is no continuity, replace the VSV.

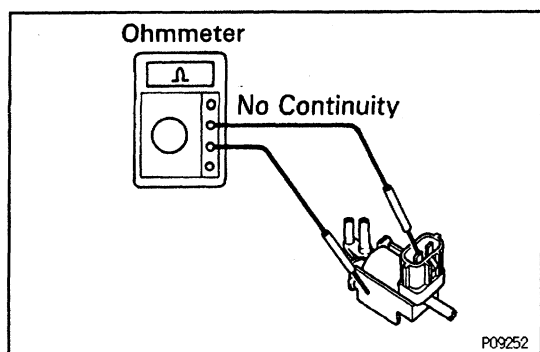


B. Inspect VSV for ground

Using an ohmmeter, check that there is no continuity between each terminal and the body. If there is continuity, replace the VSV.

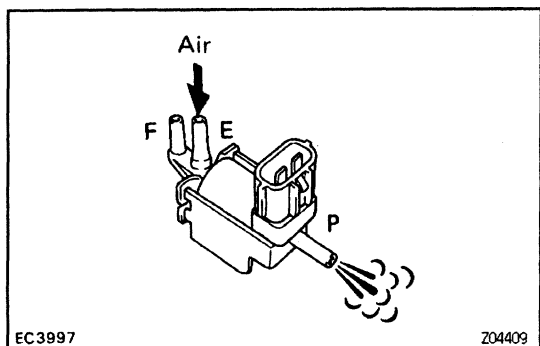

C. Inspect VSV operation


(a) Check that the air flows from pipe E to the pipe P.

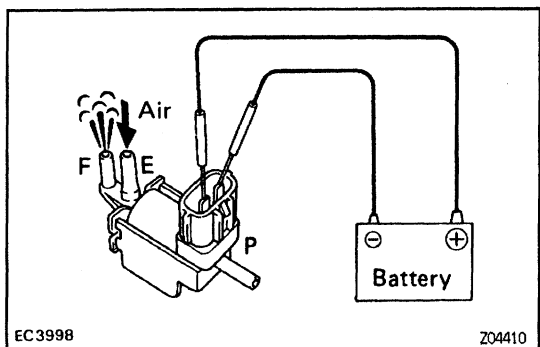

(b) Apply battery voltage across the terminals.

(c) Check that the air flows from pipe E to pipe F.


If operation is not as specified, replace the VSV.

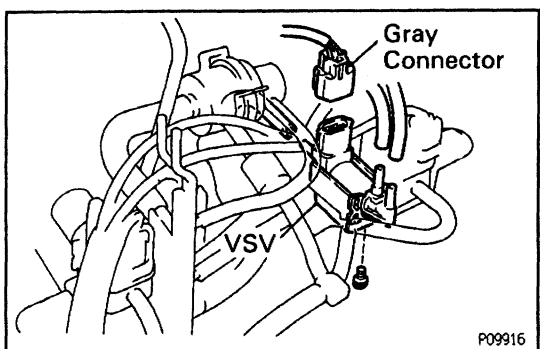

4. REINSTALL VSV

(a) Install the VSV with the screws.

(b) Connect the connector and 3 vacuum hoses to the vsv.

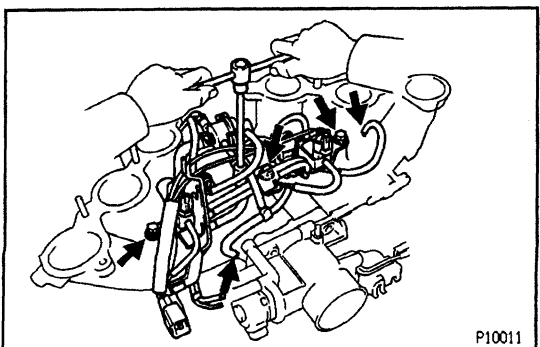

(c) Install the emission control valve set assembly with the 4 bolts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

(d) Connect the air hose and vacuum hose to the air intake chamber.

5. REINSTALL AIR INTAKE CHAMBER

(See pages [EG-276](#) and [277](#))