
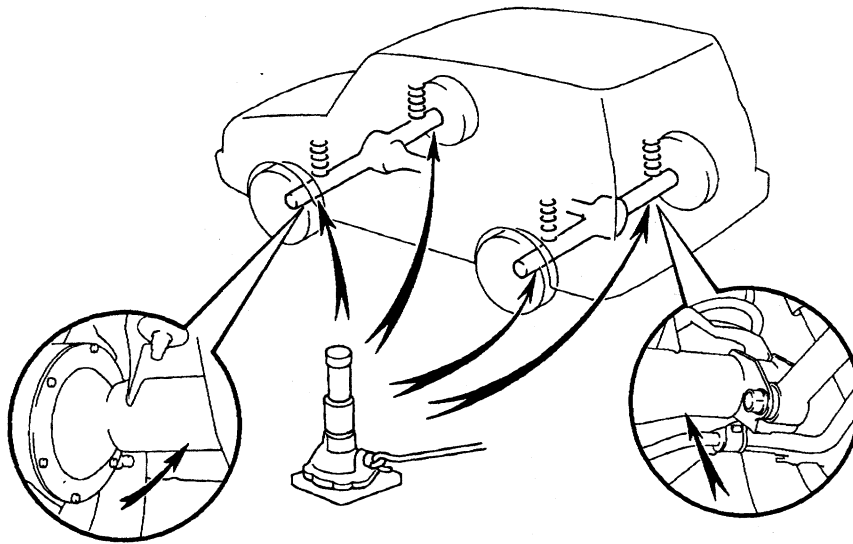


VEHICLE LIFT AND SUPPORT LOCATIONS

IN007-01

←
Front

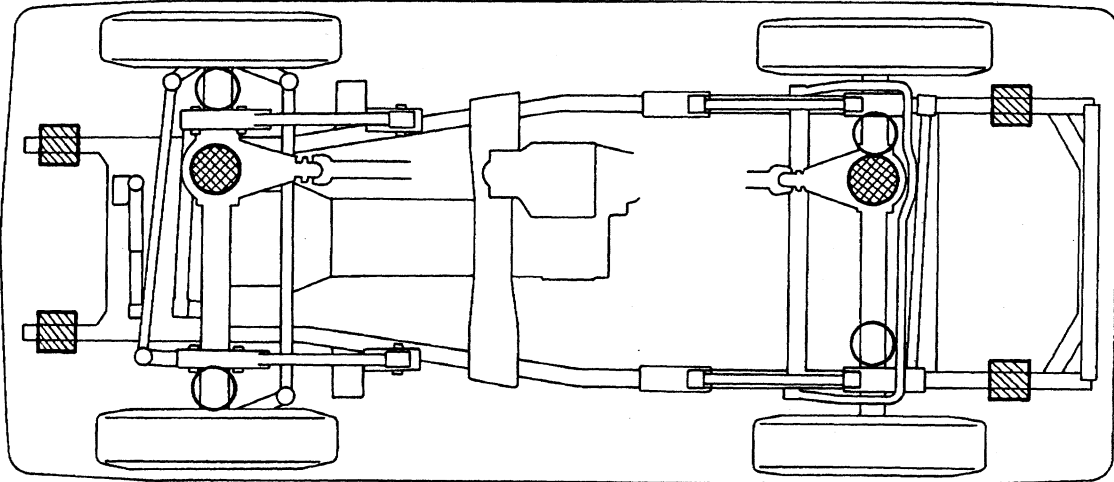

JACK POSITION _____ ●

Front Under the front differential

Rear Under the rear differential

SCREW TYPE JACK POSITION _____ ○

SUPPORT POSITION

Safety stand ▨