


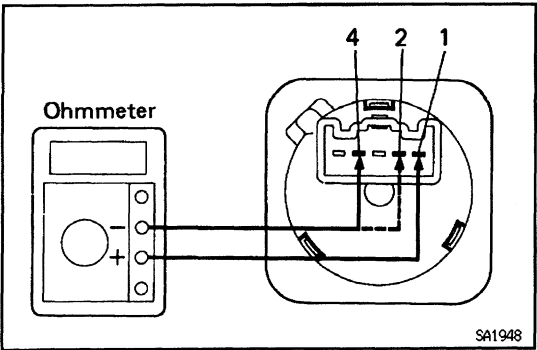

DIFFERENTIAL LOCK CONTROL SWITCH

SA04B-01


DIFF. LOCK CONTROL SWITCH INSPECTION

INSPECT SWITCH CONTINUITY

Inspect switch continuity between terminals as shown.

Terminal	1	2	4
Switch position	(B)	(RF)	(R)
OFF			
RR	○	○	○
FR-RR	○	○	○

V03069

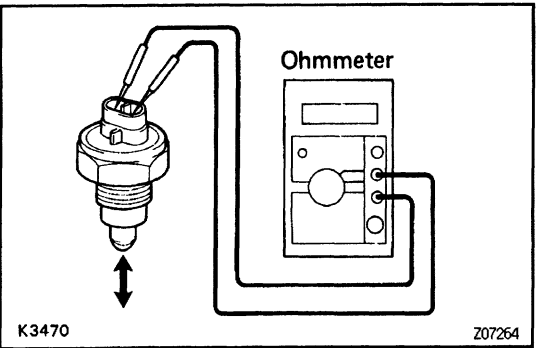

If continuity is not as specified, replace the switch.

DIFFERENTIAL LOCK POSITION SWITCH

SA04C-01

DIFF. LOCK POSITION SWITCH INSPECTION

1. INSPECT DIFF. LOCK POSITION SWITCH (FRONT AND REAR)

(a) Check that there is continuity between terminals when the switch is pushed (differential connected position).

(b) Check that there is no continuity when the switch is free (differential disconnected position).

If operation is not as specified, replace the switch.

2. INSPECT CENTER DIFF. INDICATOR SWITCH

(See page [TR-16](#))

COMBINATION METER SPEED SENSOR AND INDICATOR LIGHT INSPECTION

1. INSPECT SPEED SENSOR

(SEE PAGE [BE-48](#))

2. INSPECT INDICATOR LIGHT