 
 
 
 
 
 
 


PREPARATION

SST (SPECIAL SERVICE TOOLS)

 
 
SAOTB-02

	09308-00010 Oil Seal Puller	
	09605-60010 Steering Knuckle Bearing Cup Replacer	
	09606-60020 Steering Knuckle Bearing Remover	
	09607-80020 Front Wheel Adjusting Nut Wrench	
	09608-35014 Axle Hub & Drive Pinion Bearing Tool Set	
	(09608-06020) Handle	
	(09608-06150) Rear Hub Outer Bearing Cup Replacer	
	(09608-06200) Rear Axle Bearing Replacer	
	(09608-06210) Rear Axle Bearing Replacer	
	09611-22012 Tie Rod End Puller	
	09612-65014 Steering Worm Bearing Puller	
	(09612-01010) Claw "A"	
	(09612-01050) Hanger Pin with Nut	

	09618-60010 Front Axle & Drive Shaft Bearing Replacer	
---	---	--

RECOMMENDED TOOLS

SA0TC-01

	09905-00012 Snap Ring No. 1 Expander	
	09905-00013 Snap Ring Pliers	

EQUIPMENT

SA0TD-01

Dial indicator	
Torque wrench	
Spring tension gauge	