
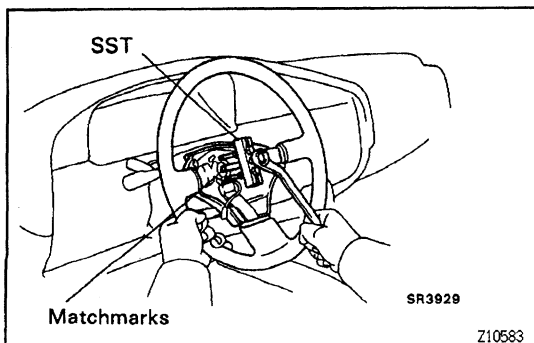


# ASSEMBLY REMOVAL AND INSTALLATION

Remove and install the parts, as shown.


SR0D3-02

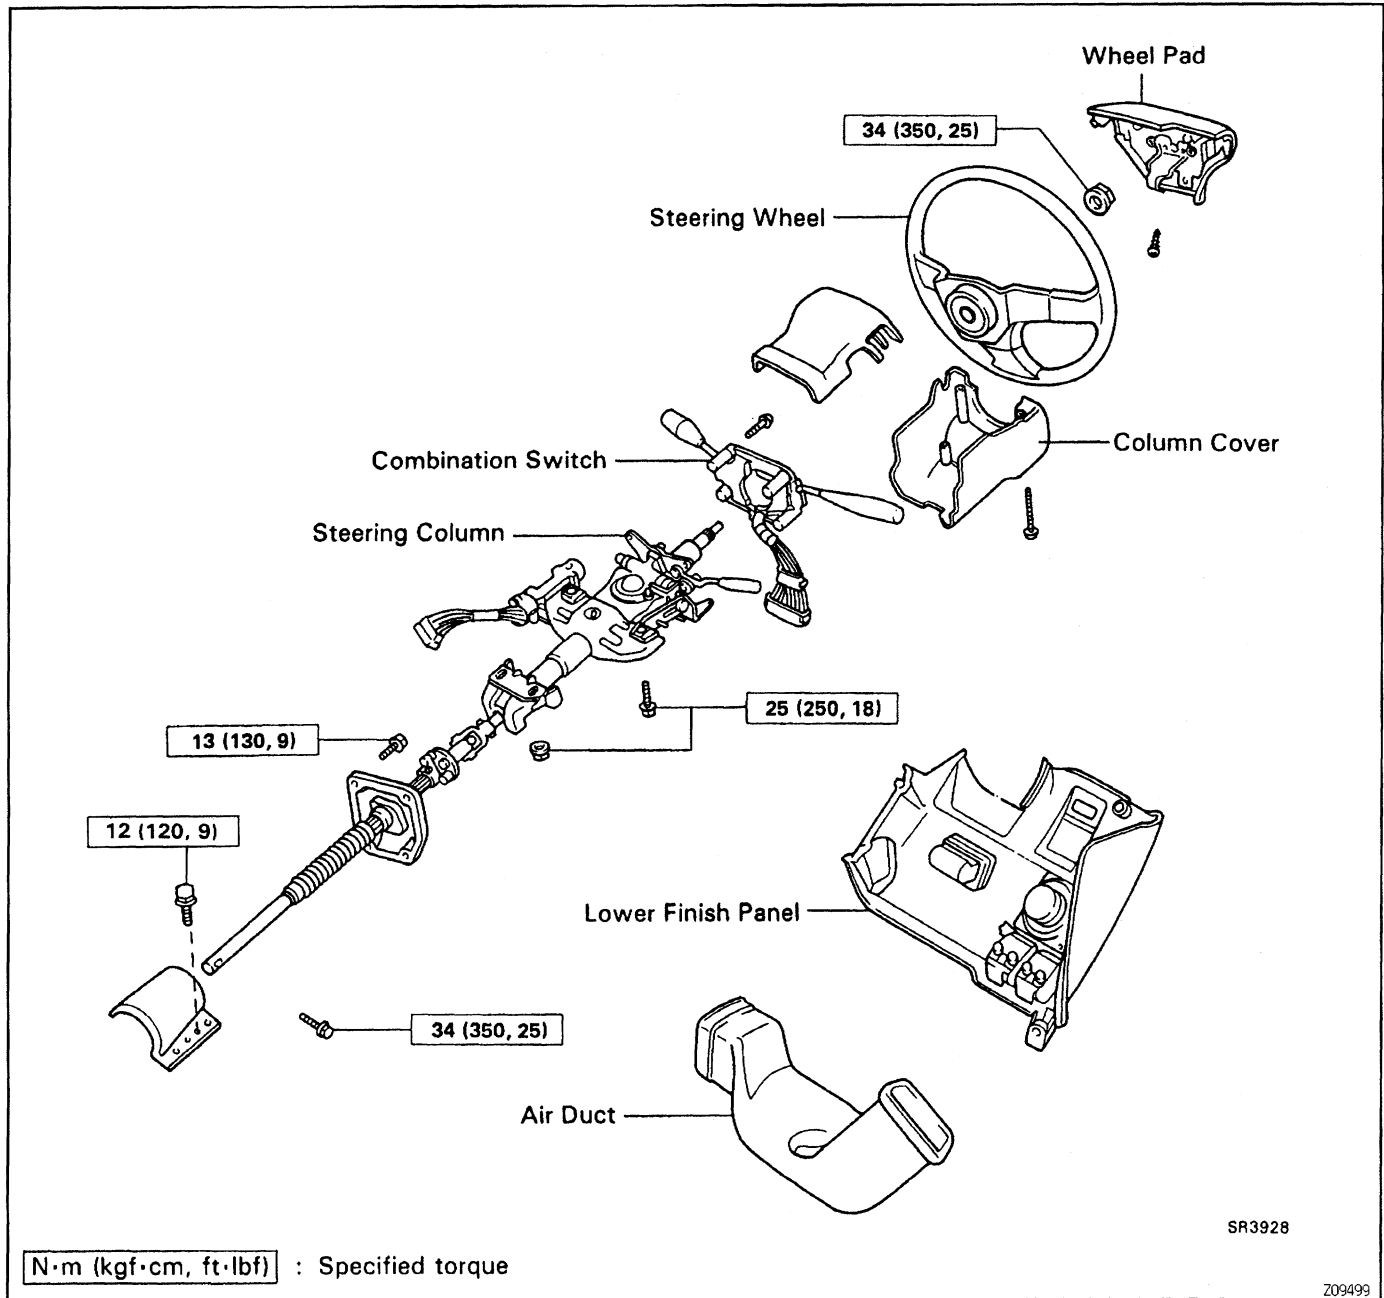

## MAIN POINT OF REMOVAL AND INSTALLATION

### 1. REMOVE STEERING WHEEL

- Remove the steering wheel pad.
  - Place matchmarks on the steering wheel and main shaft.
  - Using SST, remove the steering wheel.
- SST 09609-20011

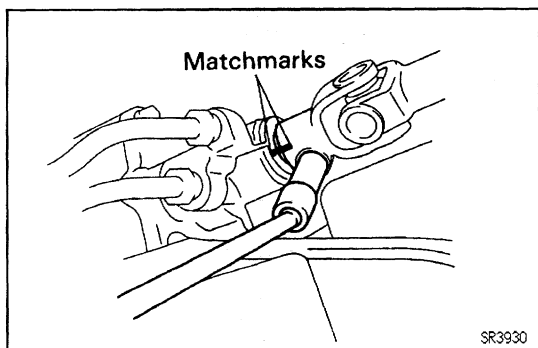**2. DISCONNECT UNIVERSAL JOINT**

- (a) Place matchmarks on the worm shaft and main shaft.
- (b) Loosen the universal joint upper bolt.
- (c) Remove the universal joint lower bolt.
- (d) Slide the joint backward to disconnect the joint from the worm shaft.

**3. CHECK STEERING WHEEL CENTER POINT INSTALLING STEERING COLUMN**