


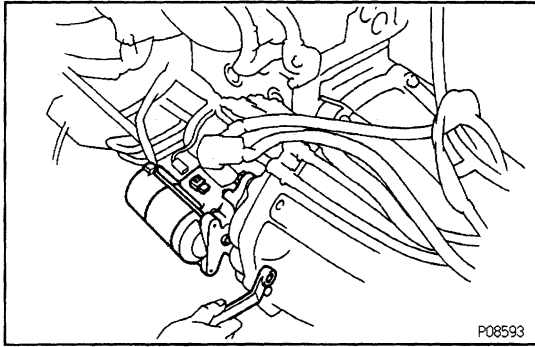

STARTER INSTALLATION

(See Components for Removal and Installation)

1. INSTALL STARTER

- (a) Install the starter with the bolt and nut.

Torque: 39 N-m (400 kgf-cm, 29 ft-lbf)

- (b) Connect the starter wire with the nut.

Torque: 8.8 N-m (90 kgf-cm, 78 in.-lbf)

- (c) Connect the starter connector.

2. CONNECT NEGATIVE TERMINAL CABLE TO BATTERY

3. CHECK THAT ENGINE STARTS

PARK/NEUTRAL POSITION (PNP) SWITCH

(See AT section)