 
 
 
 


PREPARATION**SST (SPECIAL SERVICE TOOLS)**

 
 
TR037-01

	09223-15020 Oil Seal & Bearing Replacer	
	09223-41020 Crankshaft Rear Oil Seal Replacer	
	09316-12010 Transfer Bearing Replacer	
	09316-20011 Transfer Bearing Replacer	
	09316-60010 Transmission & Transfer Bearing Replacer	
	(09316-00010) Replacer Pipe	
	(09316-00020) Replacer -A-	
	(09316-00020) Replacer -B-	
	(09316-00020) Replacer -C-	
	(09316-00020) Replacer -E-	
	(09316-00020) Replacer -F-	
	09325-12010 Transmission Oil Plug	
	09527-30010 Rear Axle Shaft Bearing Remover	

	09555-55010 Differential Drive Pinion Bearing Replacer	
	09608-20012 Front Hub & Drive Pinion Bearing Tool Set	
	(09608-00080) Replacer	
	(09608-03020) Handle	
	09950-00020 Bearing Remover	
	09950-20017 Universal Puller	

TR038-02

RECOMMENDED TOOLS

	09031-00030 Pin Punch	
	09905-00012 Snap Ring No. 1 Expander	

EQUIPMENT

TR039-02

Dial indicator	
Straight edge	
Torque wrench	

LUBRICANT

TR03A-01

Item	Capacity	Classification
Transfer oil	HF2A: 1.3 liters (1.4 US qts, 1.1 Imp.qts) HF2AV: 1.7 liters (1.8 US qts, 1.5 Imp.qts)	API GL-4 or GL-5 SAE 75W-90

SSM(SPECIAL SERVICE MATERIALS)

TR03B-01

08826-00090 Seal Packing 1281, THREE BOND 1281 or equivalent	Front case x Rear case Rear case x Case cover Case x Extension housing
08833-00080 Adhesive 1344, THREE BOND 1344, LOCTITE 242 or equivalent	Straight screw plug Case cover set bolt