

ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	=	Anti-Lock Brake System
A/C	=	Air Conditioning
A/T	=	Automatic Transmission
COMB.	=	Combination
DIFF.	=	Differential
ECU	=	Electronic Control Unit
EFI	=	Electronic Fuel Injection
EGR	=	Exhaust Gas Recirculation
Ex.	=	Except
FL	=	Fusible Link
ISC	=	Idle Speed Control
LH	=	Left-Hand
M/T	=	Manual Transmission
O/D	=	Overdrive
R/B	=	Relay Block
RH	=	Right-Hand
SW	=	Switch
TEMP.	=	Temperature
VSV	=	Vacuum Switching Valve
w/	=	With
w/o	=	Without
4WD	=	Four Wheel Drive

- * The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.