


ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

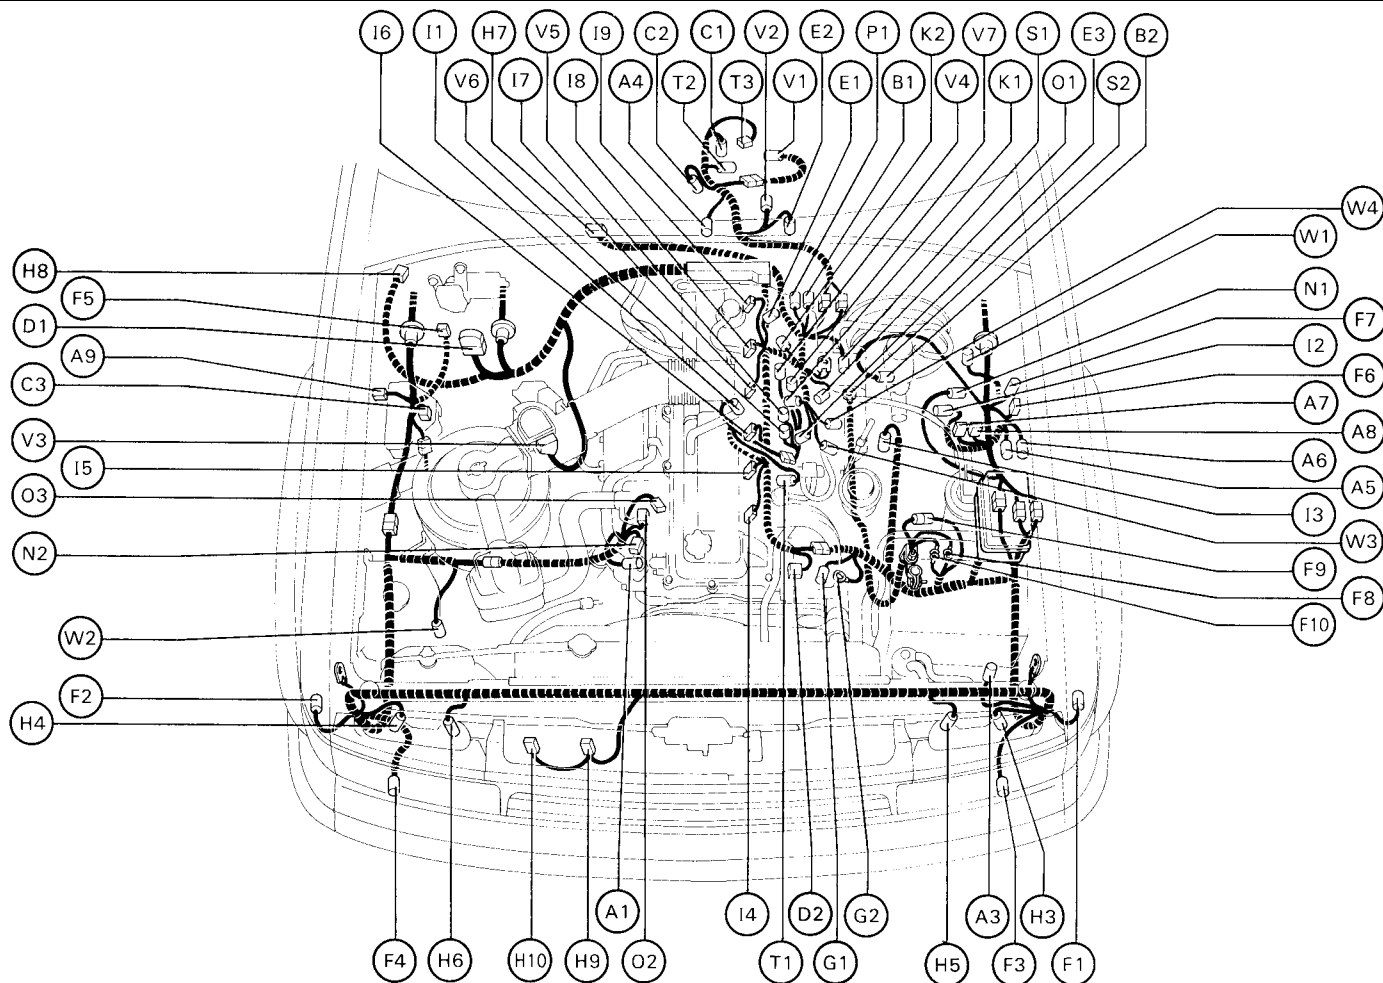


- A 1 A/C Magnetic Clutch
- A 3 A/C Pressure SW
- A 4 A/T Fluid Temp. Sensor
- A 5 ABS Actuator
- A 6 ABS Actuator
- A 7 ABS Relay
- A 8 ABS Relay
- A 9 Auto Antenna Control Motor
- B 1 Back-Up Light and A/T Indicator SW
- B 2 Brake Fluid Level SW
- C 1 Center Diff. Lock Control Motor
- C 2 Center Diff. Lock Indicator SW
- C 3 Cruise Control Actuator
- D 1 Data Link Connector 1 (Check Connector)
- D 2 Distributor
- E 1 EGR Gas Temp. Sensor (for California) or Short Pin (Ex. California)
- E 2 Electronic Controlled Transmission Solenoid
- E 3 Engine Coolant Temp. Sensor (EFI Water Temp. Sensor)
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Turn Signal Light LH
- F 4 Front Turn Signal Light RH
- F 5 Front Wiper Control Motor

- F 6 Fuel Pump Relay
- F 7 Fuel Pump Resistor
- F 8 Fusible Link (AM1)
- F 9 Fusible Link (AM2)
- F 10 Fusible Link (Main)
- G 1 Generator (Alternator)
- G 2 Generator (Alternator)
- H 3 Headlight No. 1 LH
- H 4 Headlight No. 1 RH
- H 5 Headlight No. 2 LH
- H 6 Headlight No. 2 RH
- H 7 Heated Oxygen Sensor Left (Oxygen Sensor Left)
- H 8 Heated Oxygen Sensor Right (Oxygen Sensor Right)
- H 9 Horn LH
- H 10 Horn RH
- I 1 Idle Air Control Valve (ISC Valve)
- I 2 Igniter
- I 3 Ignition Coil
- I 4 Injector No. 1
- I 5 Injector No. 2
- I 6 Injector No. 3
- I 7 Injector No. 4
- I 8 Injector No. 5
- I 9 Injector No. 6
- K 1 Knock Sensor Front
- K 2 Knock Sensor Rear
- N 1 Noise Filter (for Ignition System)
- N 2 Noise Filter (for Oil Pressure Sender Gauge)

- O 1 Oil Level Sensor
- O 2 Oil Pressure Sender Gauge
- O 3 Oil Pressure Sender Gauge
- P 1 Park/Neutral Position SW (Neutral Start SW)
- S 1 Starter
- S 2 Starter
- T 1 Throttle Position Sensor
- T 2 Transfer L4 Position SW
- T 3 Transfer Neutral Position SW
- V 1 Vehicle Speed Sensor (for Combination Meter) (Speed Sensor (for Combination Meter))
- V 2 Vehicle Speed Sensor (for Electronic Controlled Transmission) (Speed Sensor (for Electronic Controlled Transmission))
- V 3 Volume Air Flow (Air Flow Meter)
- V 4 VSV (for EGR)
- V 5 VSV (for EVAP)
- V 6 VSV (for Fuel Pressure Control)
- V 7 VSV (for PAIR)
- W 1 Washer Change Valve
- W 2 Washer Motor
- W 3 Water Temp. Sender
- W 4 Water Temp. SW (for A/C)

Position of Parts in Instrument Panel

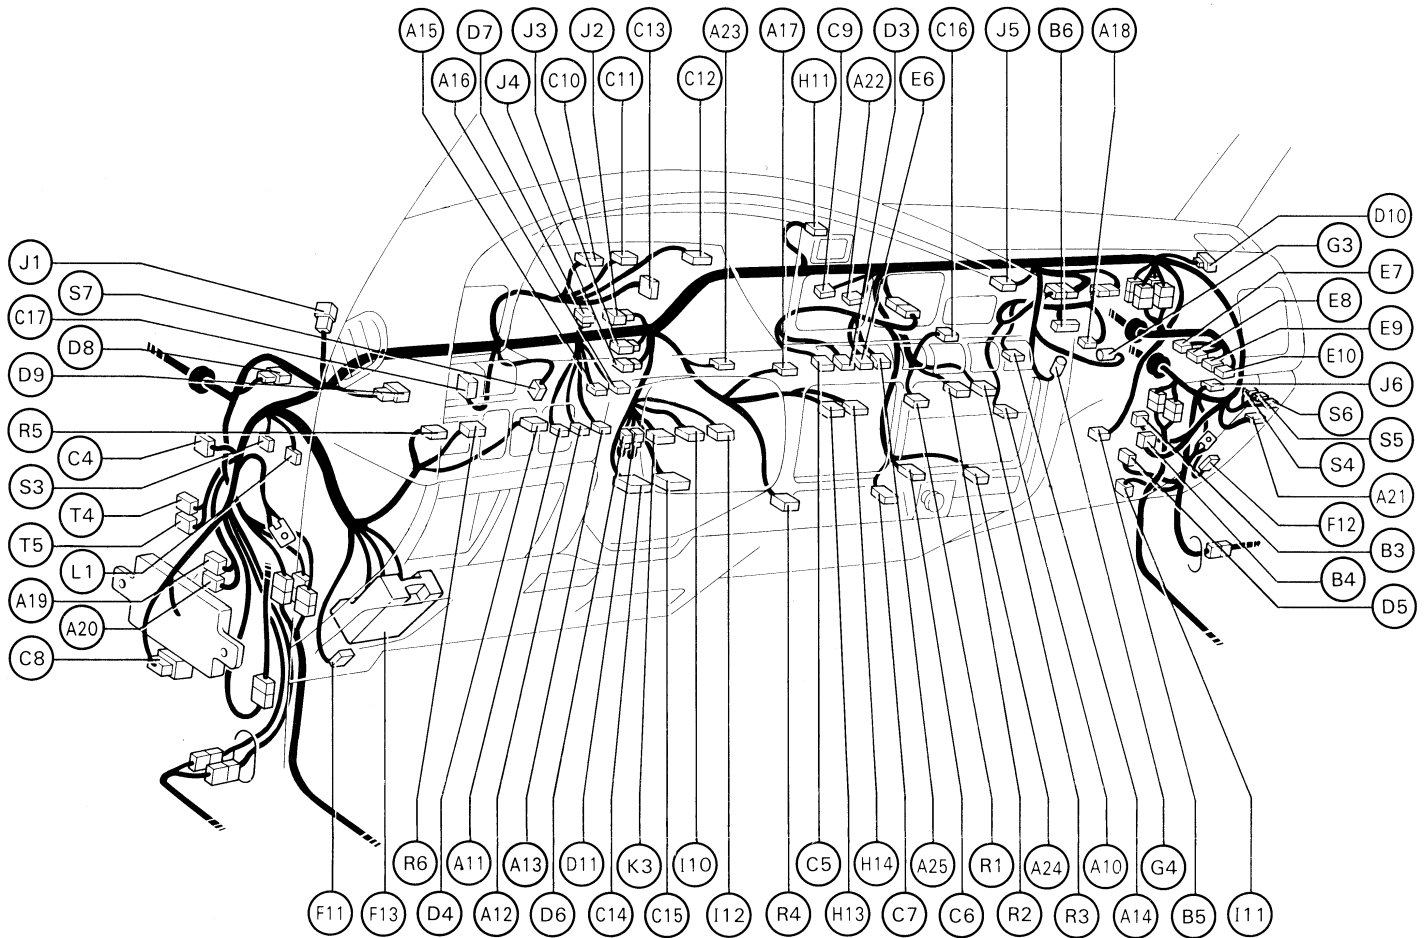

- A 10 A/C Amplifier
- A 11 A/C Connector (Not for Use in North America)
- A 12 A/C Connector (Not for Use in North America)
- A 13 A/C Connector (Not for Use in North America)
- A 14 A/C Cut Relay (for Water Temp.)
- A 15 A/C Short Connector
- A 16 A/C Short Connector
- A 17 A/C System Amplifier
- A 18 A/C Thermistor
- A 19 ABS ECU
- A 20 ABS ECU
- A 21 Air Inlet Servo Motor
- A 22 Air Mix Control Servo Motor
- A 23 Air Vent Mode Control Servo Motor
- A 24 Ashtray Illumination
- A 25 Auto Antenna Control SW

- B 3 Blower Motor (for A/C)
- B 4 Blower Motor (for Heater)
- B 5 Blower Resistor
- B 6 Blower Speed Control Relay

- C 4 Center Diff. Lock Control Relay
- C 5 Center Diff. Lock Control SW (w/o ABS) or Short Pin (w/ABS)
- C 6 Cigarette Lighter
- C 7 Cigarette Lighter Illumination
- C 8 Circuit Opening Relay
- C 9 Clock
- C 10 Combination Meter
- C 11 Combination Meter
- C 12 Combination Meter

- C 13 Combination Meter (for A/T Indicator)
- C 14 Combination SW
- C 15 Combination SW
- C 16 Cooling Fan (for Radio and Tape Player)
- C 17 Cruise Control ECU

- D 3 Defogger SW
- D 4 Diff. Lock Control SW
- D 5 Diff. Lock ECU
- D 6 Diode (for Front Washer)
- D 7 Diode (for Headlight)
- D 8 Diode (for Interior Light)
- D 9 Diode (for Interior Light)
- D 10 Diode (for Neutral Indicator)
- D 11 Diode (for Rear Washer)

- E 6 Electronic Controlled Transmission Pattern Select SW
- E 7 Engine Control Module (Engine ECU)
- E 8 Engine Control Module (Engine ECU)
- E 9 Engine Control Module (Engine ECU)
- E 10 Engine Control Module (Engine ECU)

- F 11 Front Speaker LH
- F 12 Front Speaker RH
- F 13 Fuse Block

- G 3 Glove Box Light
- G 4 Glove Box Light SW

- H 11 Hazard SW
- H 13 Heater Control SW and A/C SW

- H 14 Heater Control SW and A/C SW

- I 10 Ignition Key Cylinder Light
- I 11 Ignition Key Cylinder Light Relay
- I 12 Ignition SW and Unlock Warning SW

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector

- K 3 Key Interlock Solenoid

- L 1 Light Retainer Relay


- R 1 Radio and Player
- R 2 Radio and Player
- R 3 Radio and Player
- R 4 Rear Heater SW
- R 5 Remote Control Mirror SW
- R 6 Rheostat

- S 3 Seat Belt Warning Relay
- S 4 Stereo Component Amplifier
- S 5 Stereo Component Amplifier
- S 6 Stereo Component Amplifier
- S 7 Stop Light SW

- T 4 Transmission Control Module (Electronic Controlled Transmission ECU)
- T 5 Transmission Control Module (Electronic Controlled Transmission ECU)


ELECTRICAL WIRING ROUTING

Position of Parts in Body

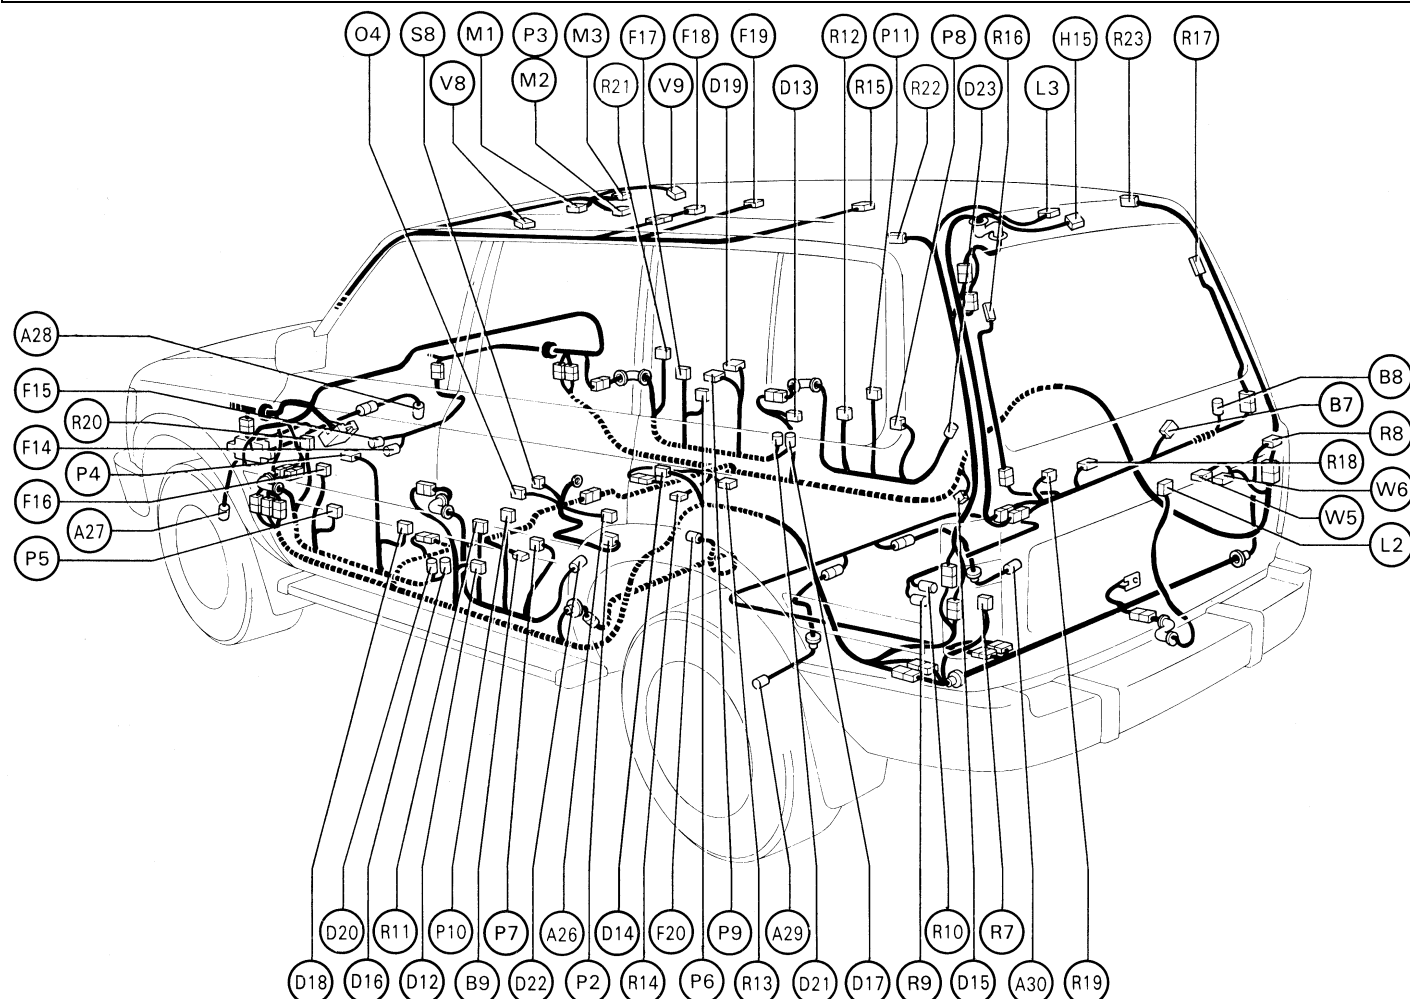

- | | | |
|-------------------------------------|---|-----------------------------------|
| A 26 ABS Deceleration Sensor | F 18 Front Interior Light (w/ Moon Roof) | R 7 Rear Combination Light LH |
| A 27 ABS Speed Sensor Front LH | F 19 Front Interior Light (w/o Moon Roof) | R 8 Rear Combination Light RH |
| A 28 ABS Speed Sensor Front RH | F 20 Fuel Sender and Pump | R 9 Rear Diff. Lock Control Motor |
| A 29 ABS Speed Sensor Rear LH | | R 10 Rear Diff. Lock Position SW |
| A 30 ABS Speed Sensor Rear RH | H 15 High Mount Stop | R 11 Rear Door Speakers LH |
| | | R 12 Rear Door Speakers RH |
| B 7 Back Door Courtesy SW | L 2 License Plate Light | R 13 Rear Heater |
| B 8 Back Door Lock Control Motor | L 3 Luggage Compartment Light | R 14 Rear Heater Relay |
| B 9 Buckle SW (w/o Power Seat) | | R 15 Rear Interior Light |
| | M 1 Moon Roof Control Relay | R 16 Rear Window Defogger (+) |
| D 12 Door Courtesy SW Front LH | M 2 Moon Roof Control SW and Personal Light | R 17 Rear Window Defogger (-) |
| D 13 Door Courtesy SW Front RH | M 3 Moon Roof Limit SW and Motor | R 18 Rear Wiper Control Motor |
| D 14 Door Courtesy SW Rear LH | | R 19 Rear Wiper Control Relay |
| D 15 Door Courtesy SW Rear RH | O 4 O/D Main SW | R 20 Remote Control Mirror LH |
| D 16 Door Key Lock and Unlock SW LH | | R 21 Remote Control Mirror RH |
| D 17 Door Key Lock and Unlock SW RH | P 2 Parking Brake SW | R 22 Roof Speaker LH |
| D 18 Door Lock Control Relay | P 3 Personal Light (w/o Moon Roof) | R 23 Roof Speaker RH |
| D 19 Door Lock Control SW RH | P 4 Power Window Master SW | |
| D 20 Door Lock Motor Front LH | P 5 Power Window Motor Front LH | S 8 Shift Lock ECU |
| D 21 Door Lock Motor Front RH | P 6 Power Window Motor Front RH | |
| D 22 Door Lock Motor Rear LH | P 7 Power Window Motor Rear LH | V 8 Vanity Light LH |
| D 23 Door Lock Motor Rear RH | P 8 Power Window Motor Rear RH | V 9 Vanity Light RH |
| | P 9 Power Window SW Front RH | |
| F 14 Front Diff. Lock Control Motor | P 10 Power Window SW Rear LH | W 5 Woofer Speaker |
| F 15 Front Diff. Lock Position SW | P 11 Power Window SW Rear RH | W 6 Woofer Speaker Amplifier |
| F 16 Front Door Speaker LH | | |
| F 17 Front Door Speaker RH | | |

Position of Parts in Seat

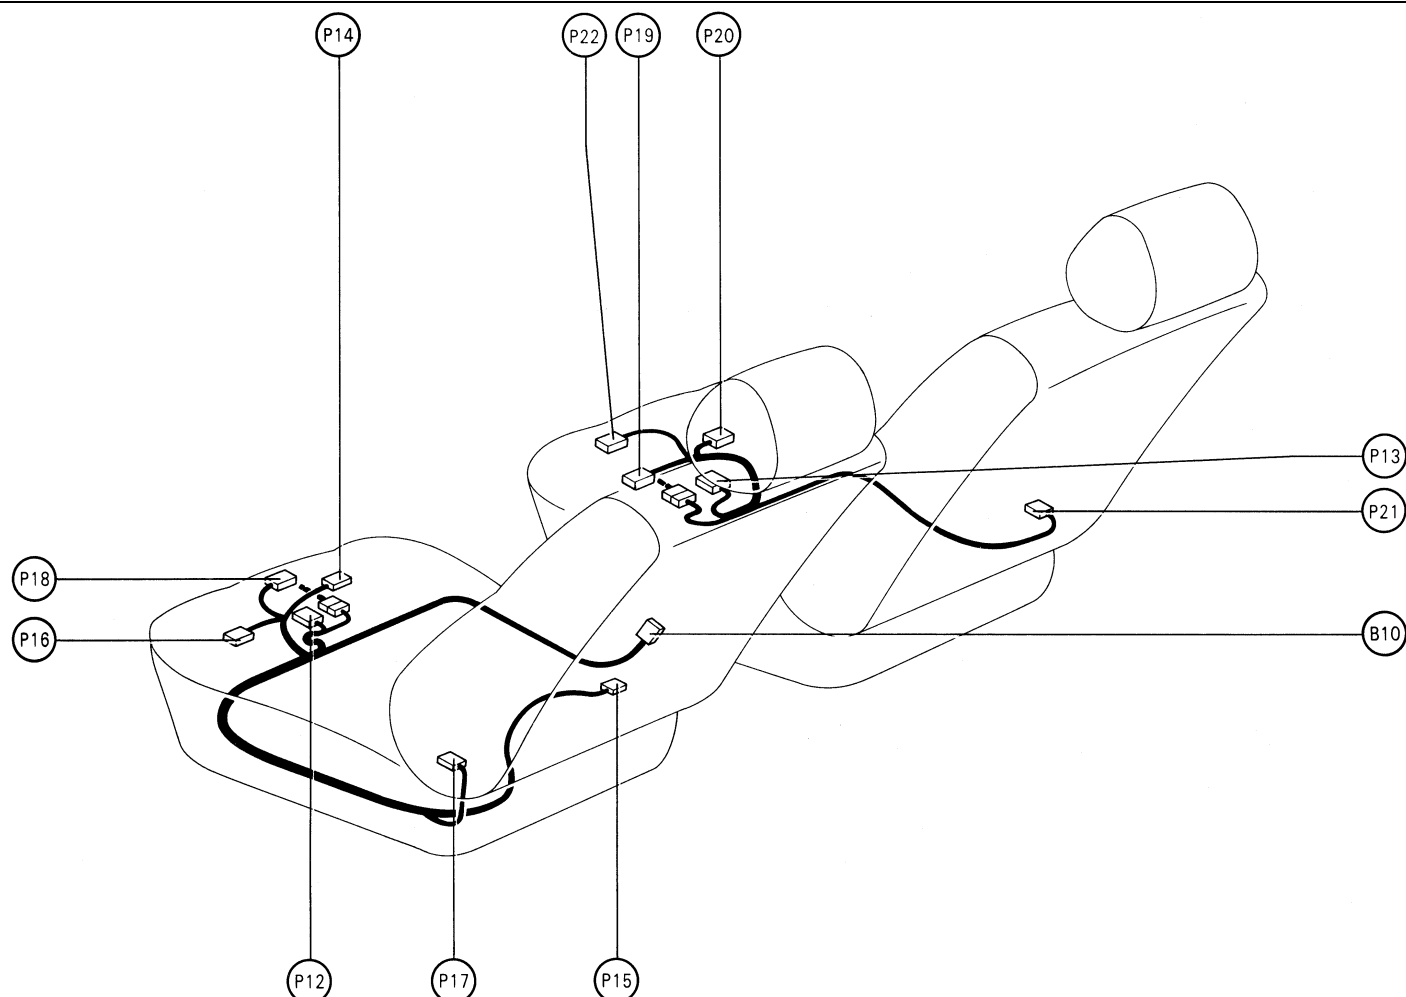

B 10 Buckle SW LH (w/ Power Seat)

- P 12 Power Seat Control SW (for Driver's Seat)
- P 13 Power Seat Control SW (for Passenger's Seat)
- P 14 Power Seat Motor (for Driver's Seat Front Vertical Control)
- P 15 Power Seat Motor (for Driver's Seat Lumbar Support Control)
- P 16 Power Seat Motor (for Driver's Seat Rear Vertical Control)

- P 17 Power Seat Motor (for Driver's Seat Reclining Control)
- P 18 Power Seat Motor (for Driver's Seat Slide Control)
- P 19 Power Seat Motor (for Passenger's Seat Front Vertical Control)
- P 20 Power Seat Motor (for Passenger's Seat Rear Vertical Control)
- P 21 Power Seat Motor (for Passenger's Seat Reclining Control)
- P 22 Power Seat Motor (for Passenger's Seat Slide Control)