




GROUND POINT

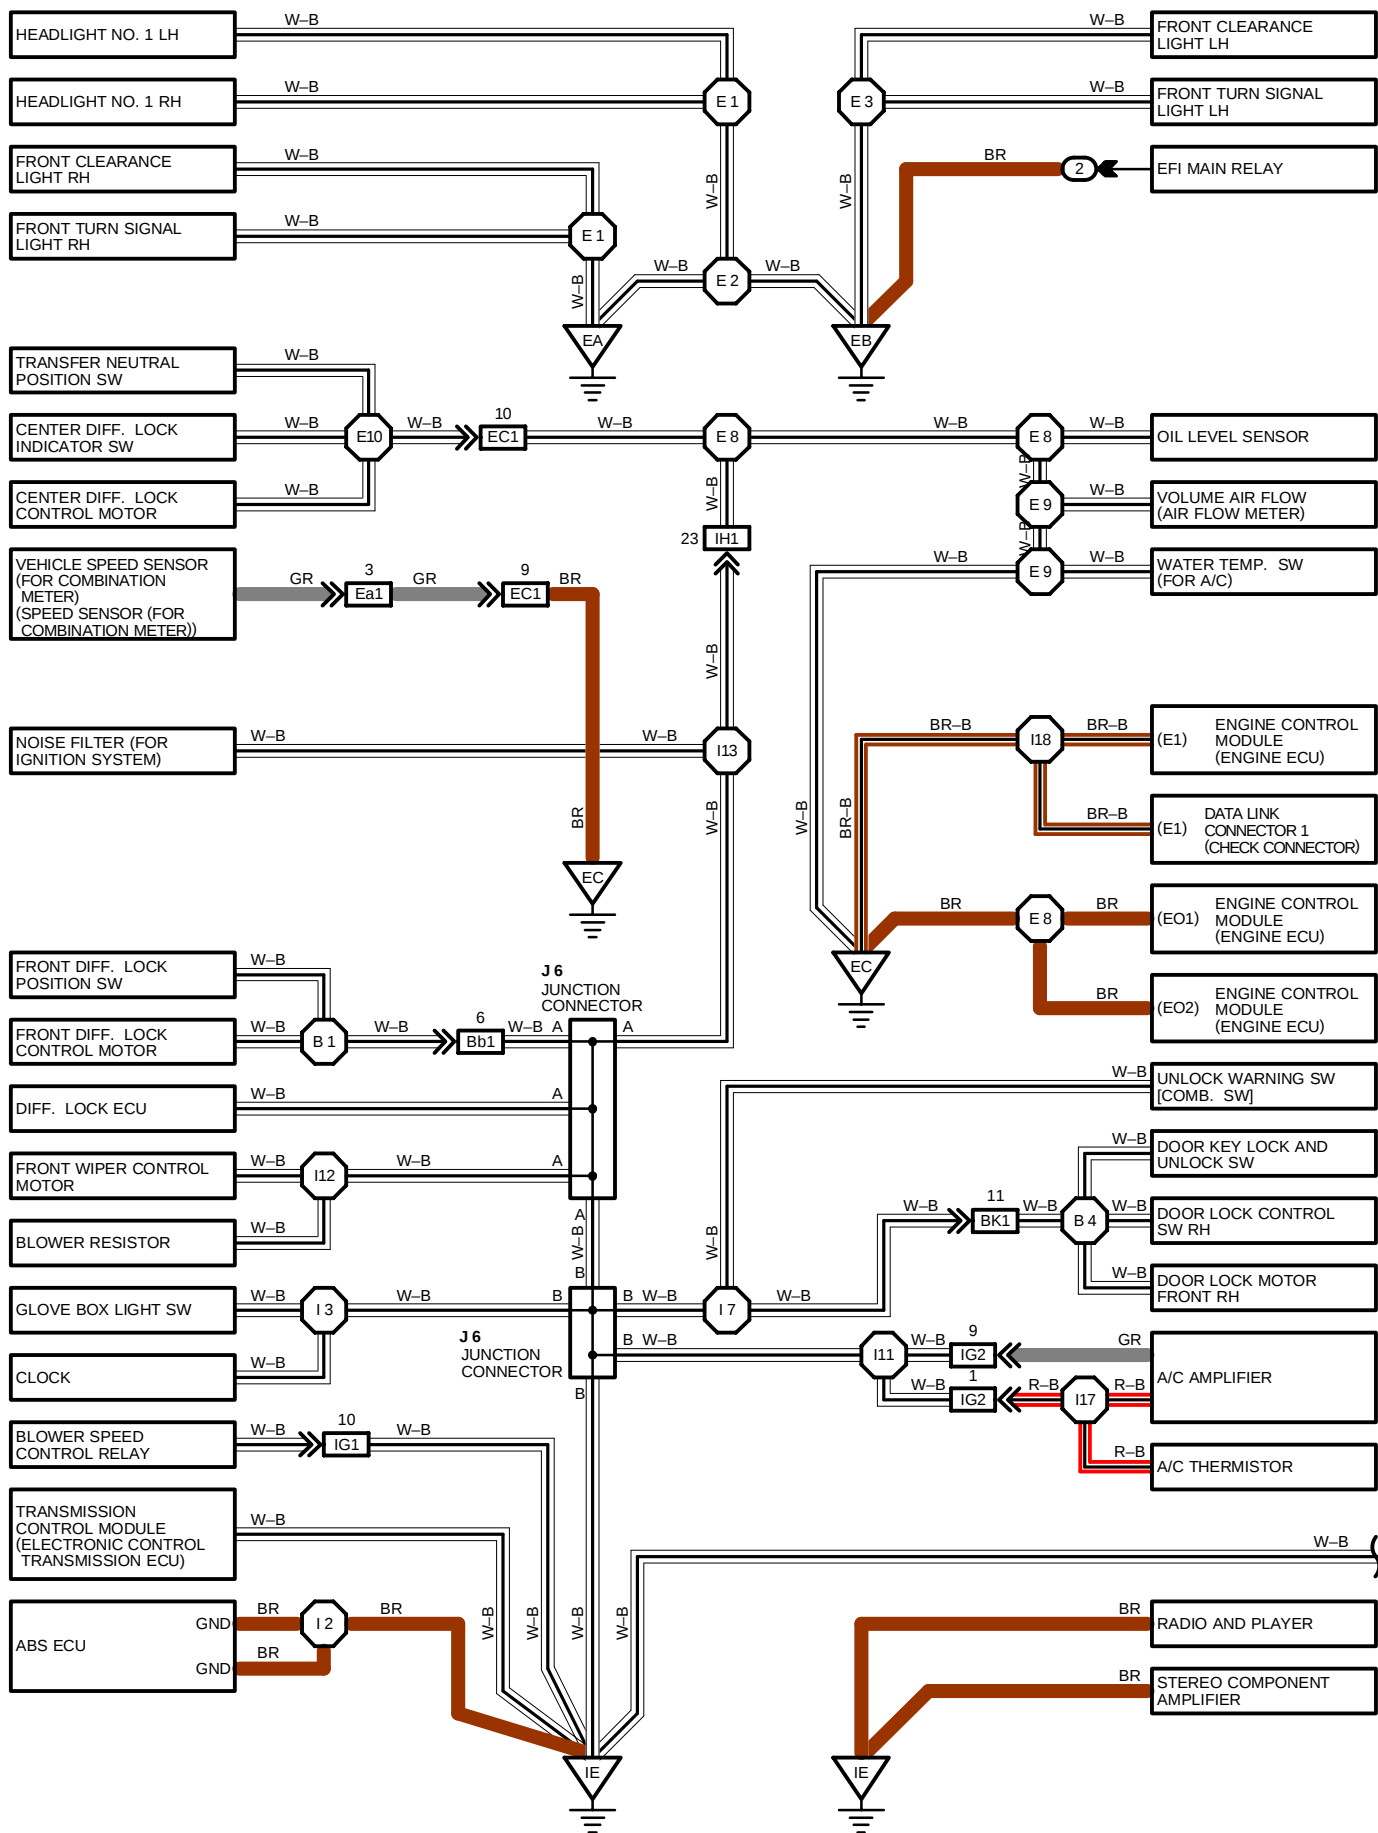

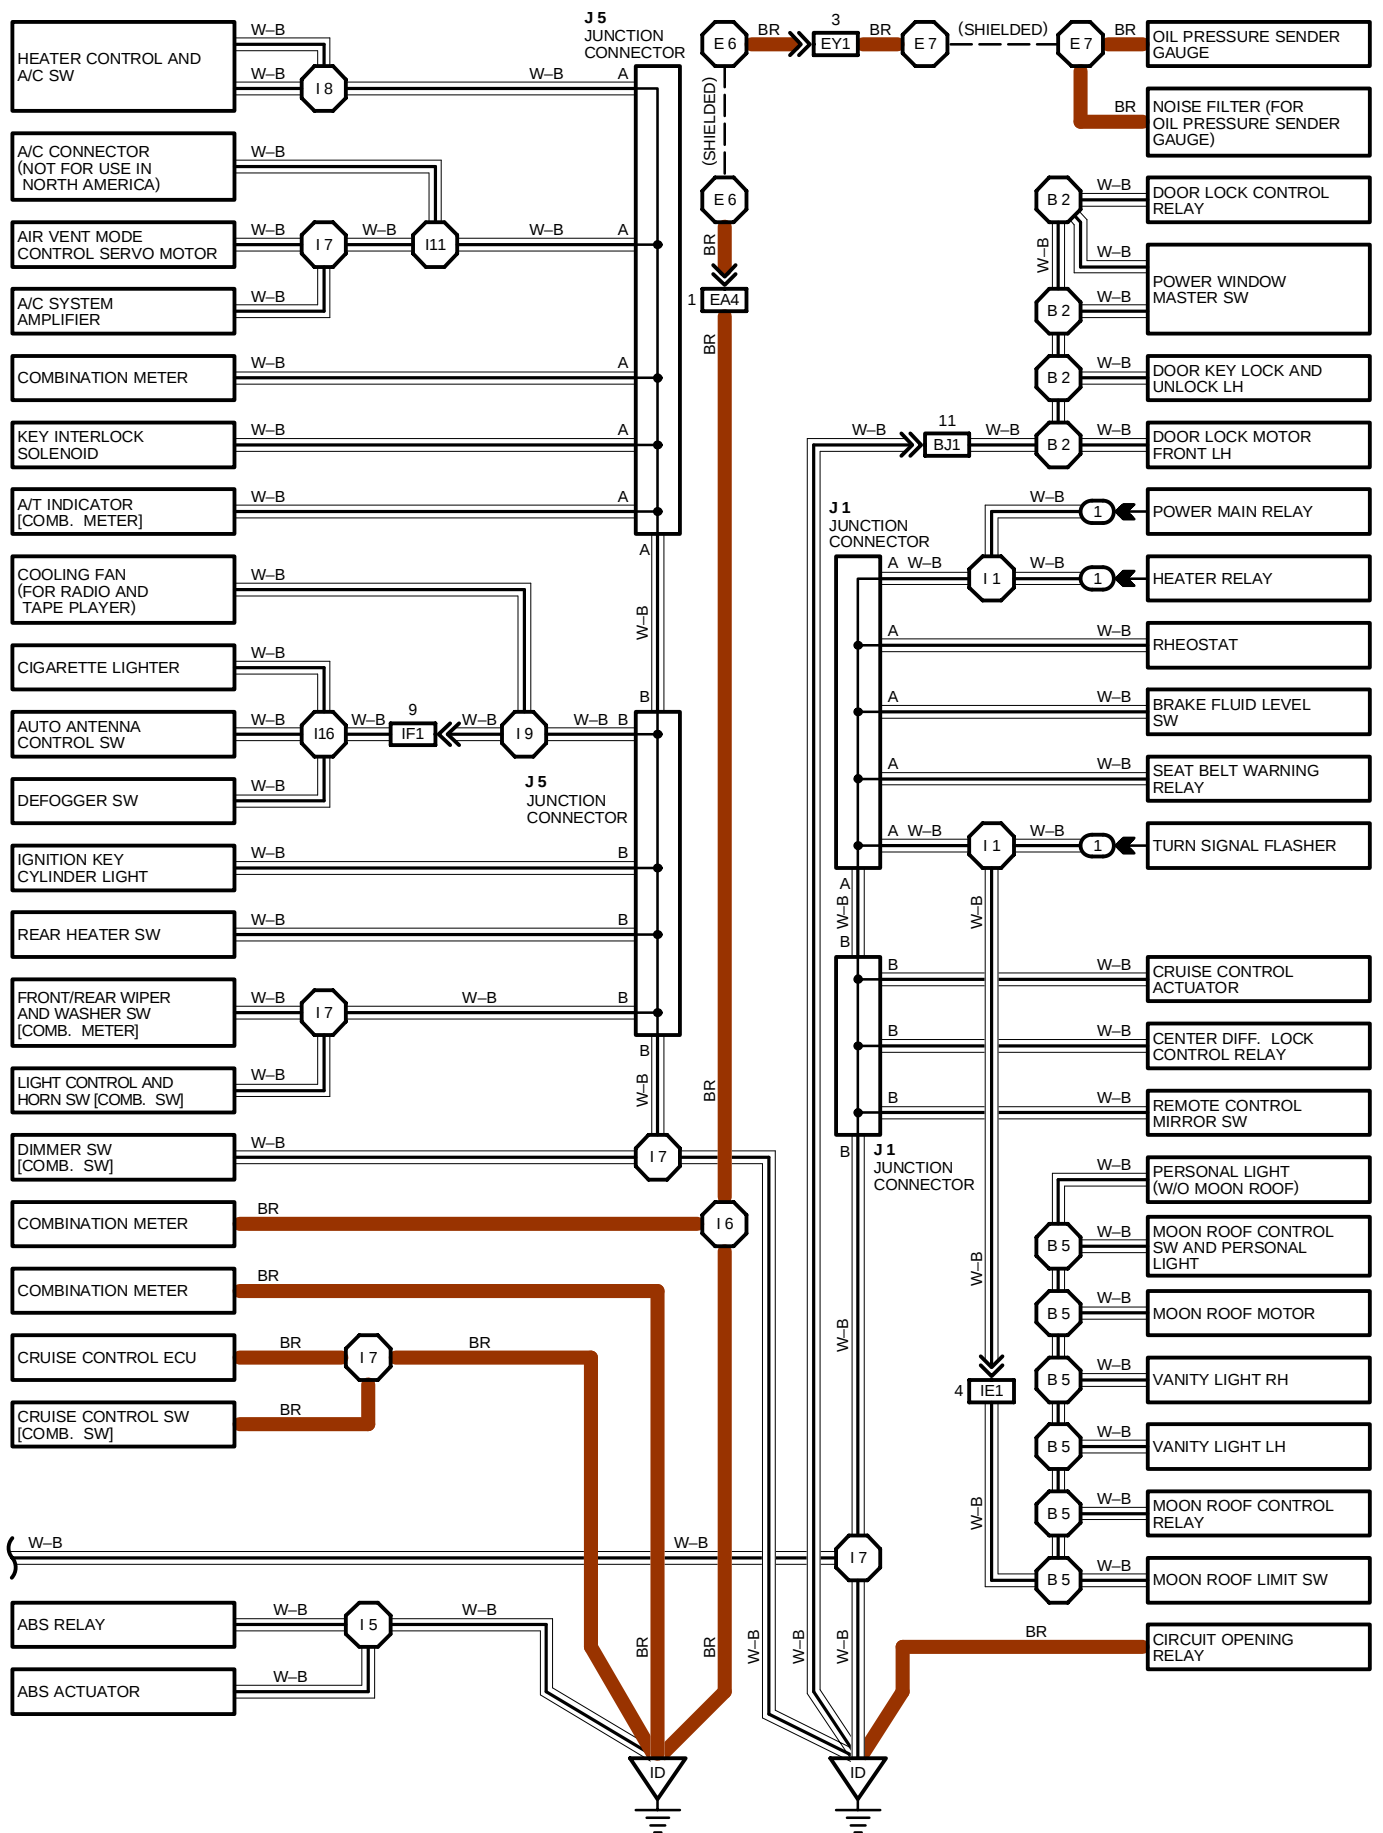

GROUND POINT

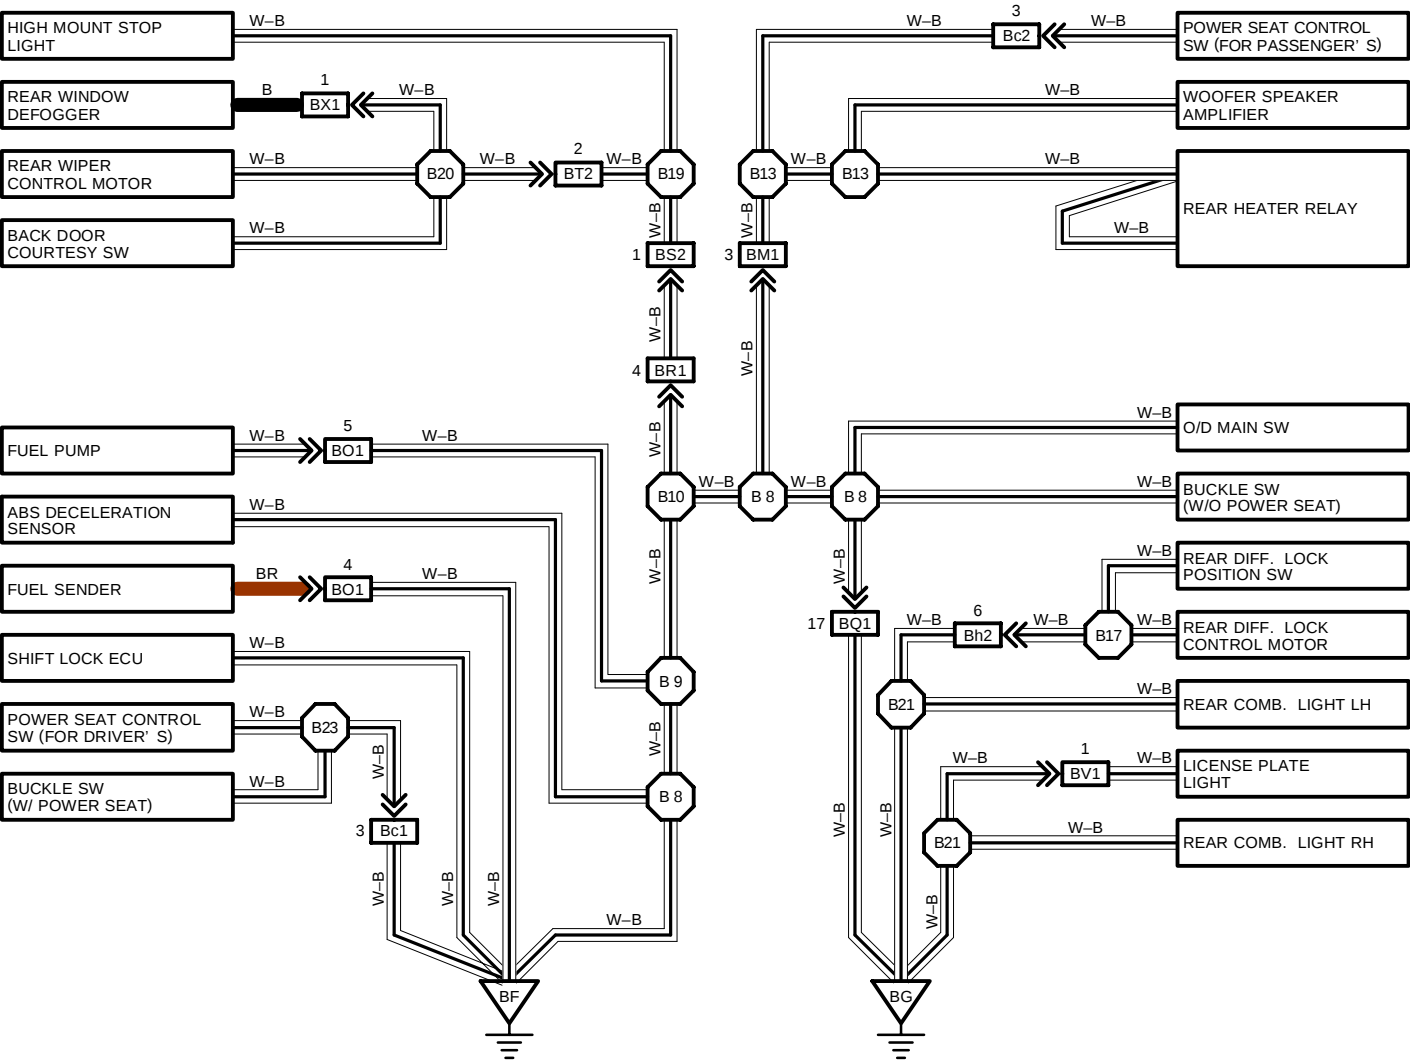

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
J 1	23	J 5	23	J 6	23

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA4	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EC1	26	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EY1	26	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
Ea1	26	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)
IE1	28	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
IF1	28	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)
IG1	28	COWL WIRE AND A/C SUB WIRE (BEHIND GLOVE BOX)
IG2		
IH1	28	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
BJ1	30	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	30	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)
BM1	30	FLOOR NO. 2 WIRE FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)
BO1	30	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BR1	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	30	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BT2	30	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)
BV1	32	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)
BX1	32	REAR WINDOW NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR RIGHT)
Bb1	32	COWL WIRE AND FRAME WIRE (RIGHT FENDER)
Bc1	32, 34	FLOOR NO. 1 WIRE AND SAET NO. 1 WIRE (UNDER THE DRIVER'S SEAT)
Bc2	32, 34	FLOOR NO. 2 WIRE AND SAET NO. 1 WIRE (UNDER THE PASSENGER'S SEAT)
Bh2	32	FLOOR NO. 3 WIRE AND FRAME WIRE (LEFT QUARTER PANEL INNER)


 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	26	FRONT SIDE OF RIGHT FENDER
EB	26	FRONT SIDE OF LEFT FENDER
EC	26	AIR INTAKE CHAMBER
ID	28	LEFT KICK PANEL
IE	28	RIGHT KICK PANEL
BF	30	UNDER THE CENTER CONSOLE BOX
BG	30	LOWER BACK PANEL CENTER

 : SPLICE POINTS


CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	26	ENGINE ROOM MAIN WIRE	I13	28	COWL WIRE
E 2			I16	28	INSTRUMENT PANEL WIRE
E 3			I17	28	A/C SUB WIRE
E 6			I18	28	ENGINE WIRE
E 7	26	OIL PRESSURE SWITCH WIRE	B 1	32	FRAME WIRE
E 8	26	ENGINE WIRE	B 2	32	FRONT DOOR LH WIRE
E 9			B 4	32	FRONT DOOR RH WIRE
E10	26	TRANSMISSION WIRE	B 5	32	ROOF WIRE
I 1	28	COWL WIRE	B 8	32	FLOOR NO. 1 WIRE
I 2			B 9		
I 3			B10		
I 5			B13	32	FLOOR NO. 2 WIRE
I 6			B17	32	FRAME NO. 2 WIRE
I 7			B19	32	BACK DOOR NO. 1 WIRE
I 8			B20	32	BACK DOOR NO. 2 WIRE
I 9			B21	32	FLOOR NO. 3 WIRE
I11			B23	34	SEAT LH WIRE
I12					

 J 1 ORANGE




(HINT : SEE PAGE 7)

 J 5 ORANGE



(HINT : SEE PAGE 7)

 J 6 ORANGE



(HINT : SEE PAGE 7)