
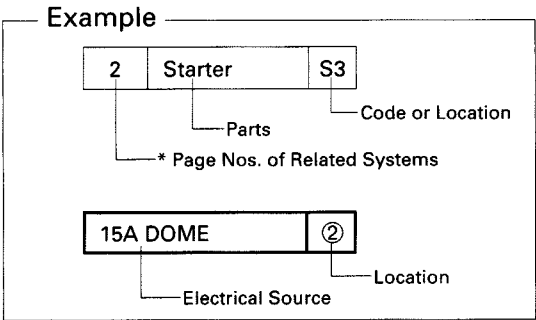


POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.


The next page and following pages show the parts to which each electrical source outputs current.

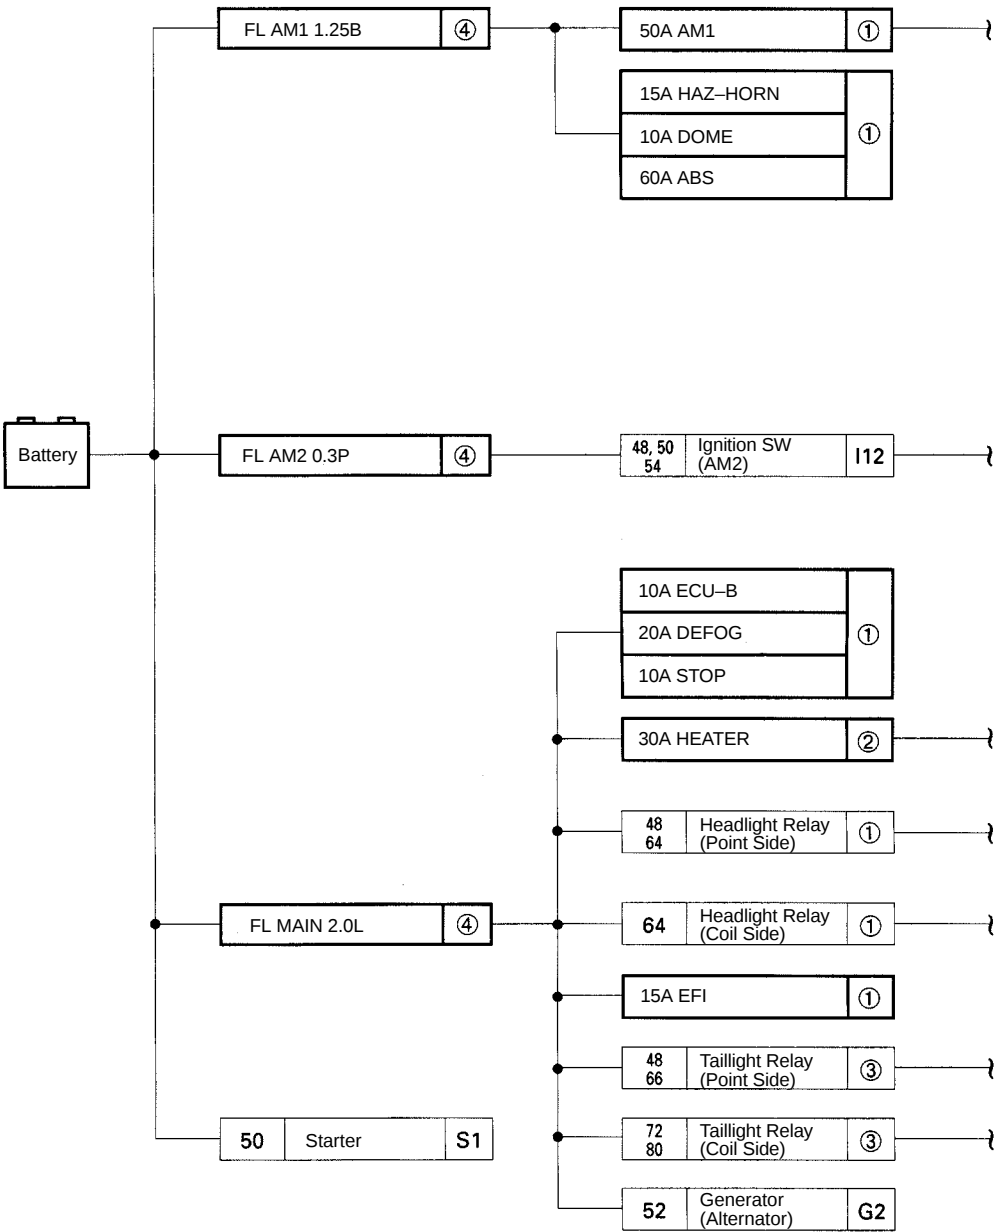

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page18)

(2) : Fuse Block (F13 See page20)

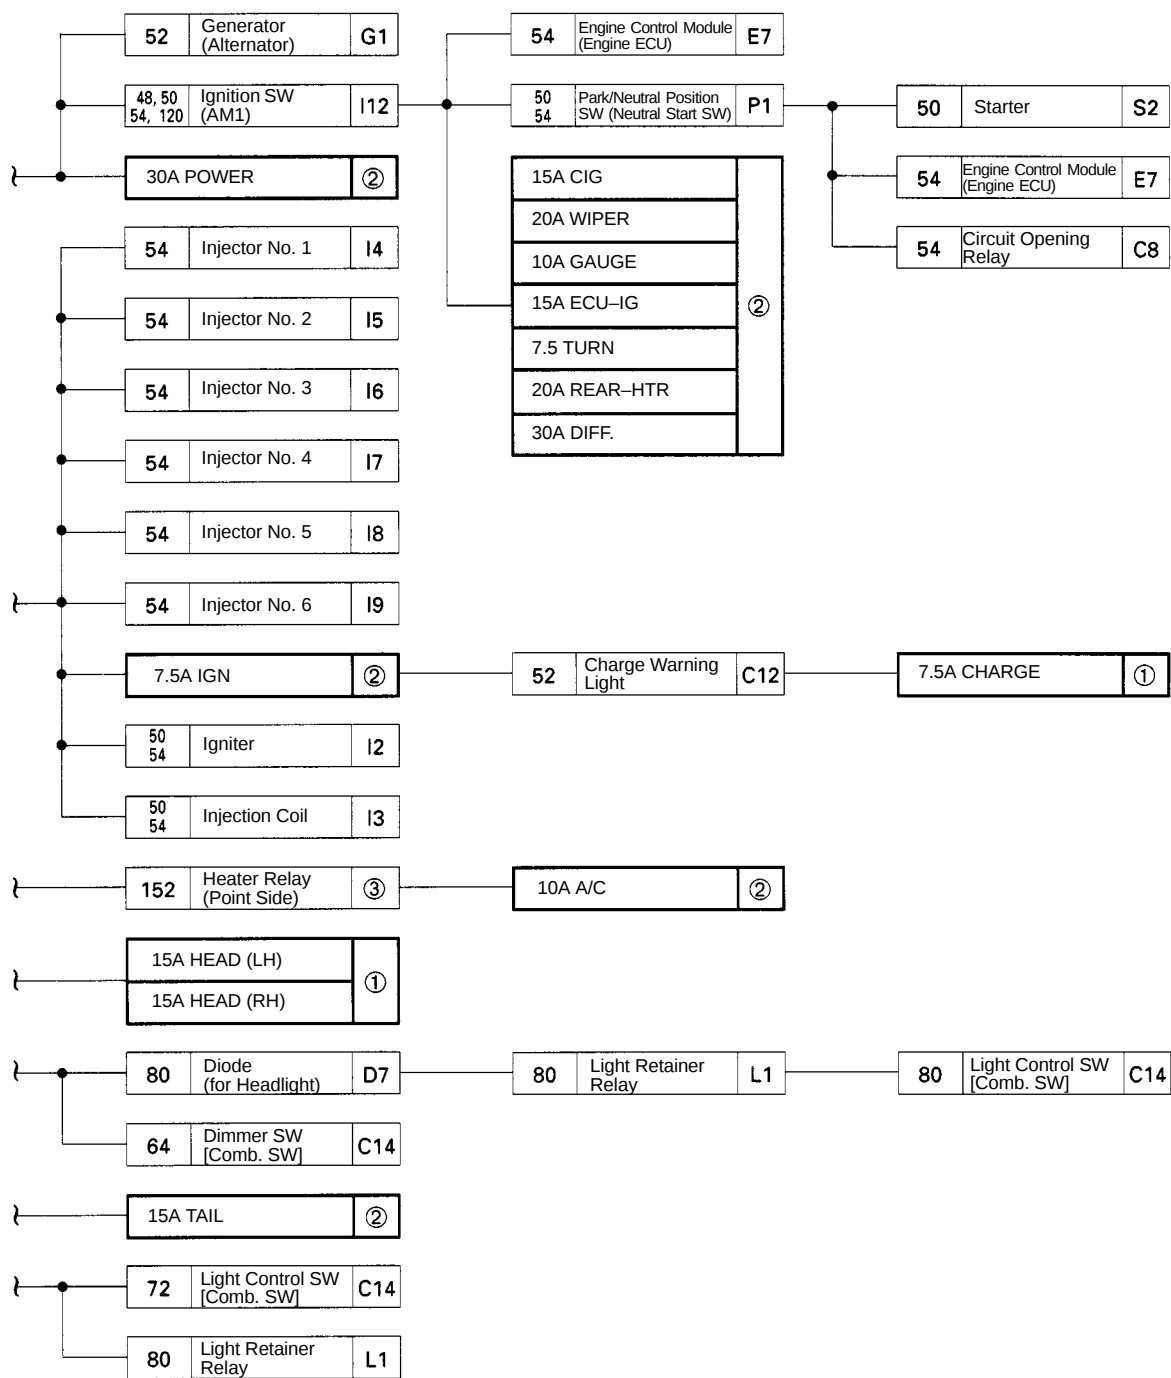

(3) : R/B No. 1 (See page20)

(4) : Fusible Link (F8, F9, F10 See page22)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		152	144	111	111	107	152	152			152	111	152	152	72	72 107	111	70 120 134	144	152	152
											A/C Pressure SW	A/T Fluid Temp. Sensor	ABS Actuator	ABS Relay	Auto Antenna Control Motor	A/C Amplifier	A/C Connector			A/C System Amplifier	ABS ECU	Air Inlet Control Servo Motor	Air Vent Mode Control Servo Motor	Ashtray Illumination	Auto Antenna Control SW	ABS Deceleration Sensor	Back-Up Light and A/T Indicator SW	Brake Fluid Level SW	Blower Motor (for A/C)	Blower Motor (for Heater)
			A3	A4	A5	A7	A8	A9	A10	A11	A12	A13	A17	A19	A20	A21	A23	A24	A25	A26	B1	B2	B3	B4						
①	7.5A	CHARGE																												
	15A	EFI																												
	15A	HEAD (LH)																												
	15A	HEAD (RH)																												
	15A	HAZ-HORN																												
	10A	DOVE																												
	60A	ABS			●	●	●									●														
②	15A	CIG						●																	●					
	15A	TAIL															●	●												
	10A	STOP												●																
	20A	DEFOG																												
	20A	WIPER																												
	10A	GAUGE	●	●	●		●		●		●		●	●	●	●	●			●	●									
	7.5A	TURN																												
	15A	ECU-IG												●	●				●											
	20A	REAR-HTR																												
	7.5A	IGN																												
	10A	A/C						●		●			●																	
	30A	DIFF.																												
	30A	POWER																												
	30A	HEATER																										●	●	
	10A	ECU-B															●													

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)

② : Fuse Block (See page 20)

[illegible]

POWER SOURCE (Current Flow Chart)

[illegible]

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] (1) : R/B No. 2 (See page18)

(2) : Fuse Block (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		Parts		Code or Location		CB or Fuse		130	80	66	76	90	76 90	90	144	72 144	144	120	144	76	98 104	98	98	98	98	98	98	98	108				
											Unlock Warning SW	Light Retainer Relay	License Plate Light	Luggage Compartment Light	Moon Roof Control Relay	Moon Roof Control SW and Personal Light	Moon Roof Limit SW and Motor	Noise Filter (for Oil Pressure Sender Gauge)	Oil Level Sensor	Oil Pressure Sender Gauge	O/D Main SW	Parking Brake SW	Personal Light (w/o Moon Roof)	Power Window Master SW	Power Window Motor Front LH	Power Window Motor Front RH	Power Window Motor Rear LH	Power Window Motor Rear RH	Power Window SW Front RH	Power Window SW Rear LH	Power Window SW Rear RH	Power Seat Control SW (for Driver's Seat)				
			I12	L1	L2	L3	M1	M2	M3	N2	O1	O2	O4	P2	P3	P4	P5	P6	P7	P8	P9	P10	P11	P12												
①	7.5A	CHARGE																																		
	15A	EFI																																		
	15A	HEAD (LH)																																		
	15A	HEAD (RH)																																		
	15A	HAZ-HORN																																		
	10A	DOME				●	●	●								●																				
60A	ABS																																			
②	15A	CIG																																		
	15A	TAIL			●						●																									
	10A	STOP																																		
	20A	DEFOG																																		
	20A	WIPER																																		
	10A	GAUGE	●							●	●	●	●	●																						
	7.5A	TURN																																		
	15A	ECU-IG		●																																
	20A	REAR-HTR																																		
	7.5A	IGN																																		
	10A	A/C																																		
	30A	DIFF.																																		
	30A	POWER					●		●								●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	30A	HEATER																																		
	10A	ECU-B		●																																

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)

② : Fuse Block (See page 20)

POWER SOURCE (Current Flow Chart)

Location			*Page Nos. of Related Systems		94	130	140	54 68 96 111 116 120	96	120 134	134	120	144	54	54	54	54	76	76	86	84 86	144	140	54		
					Parts		Code or Location																			
			CB or Fuse.		Remote Control Mirror RH	Seat Belt Warning Relay	Stereo Component Amplifier	Stop Light SW	Shift Lock ECU	Transfer L4 position SW	Transfer Neutral Position SW	Transmission Control Module (Electronic Controlled Transmission ECU)	Vehicle Speed Sensor (for Combination Meter) (Speed Sensor (for Combination Meter))	VSV (for EGR)	VSV (for EVAP)	VSV (for Fuel Pressure Control)	VSV (for PAIR)	Vanity Light LH	Vanity Light RH	Washer Change Valve	Washer Motor	Water Temp. Sender	Woofer Speaker Amplifier	EFI Main Relay		
			R21	S3	S4	S7	S8	T2	T3	T4	T5	V1	V4	V5	V6	V7	V8	V9	W1	W2	W3	W6	①			
①	7.5A	CHARGE																								
	15A	EFI												●	●	●	●							●		
	15A	HEAD (LH)																								
	15A	HEAD (RH)																								
	15A	HAZ-HORN																								
	10A	DOME		●	●													●	●							
60A	ABS																									
②	15A	CIG	●		●		●																●			
	15A	TAIL																								
	10A	STOP				●	●			●																
	20A	DEFOG																								
	20A	WIPER																	●	●						
	10A	GAUGE		●				●	●		●	●									●					
	7.5A	TURN																								
	15A	ECU-IG					●			●																
	20A	REAR-HTR																								
	7.5A	IGN																								
	10A	A/C																								
	30A	DIFF.																								
	30A	POWER																								
	30A	HEATER																								
	10A	ECU-B								●																

* These are the page numbers of the first page on which the related system is shown.
The part indicated is located somewhere in the system, not necessarily on the page indicated here.

[LOCATION] ① : R/B No. 2 (See page 18)

② : Fuse Block (See page 20)

