


CENTER DIFFERENTIAL LOCK

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

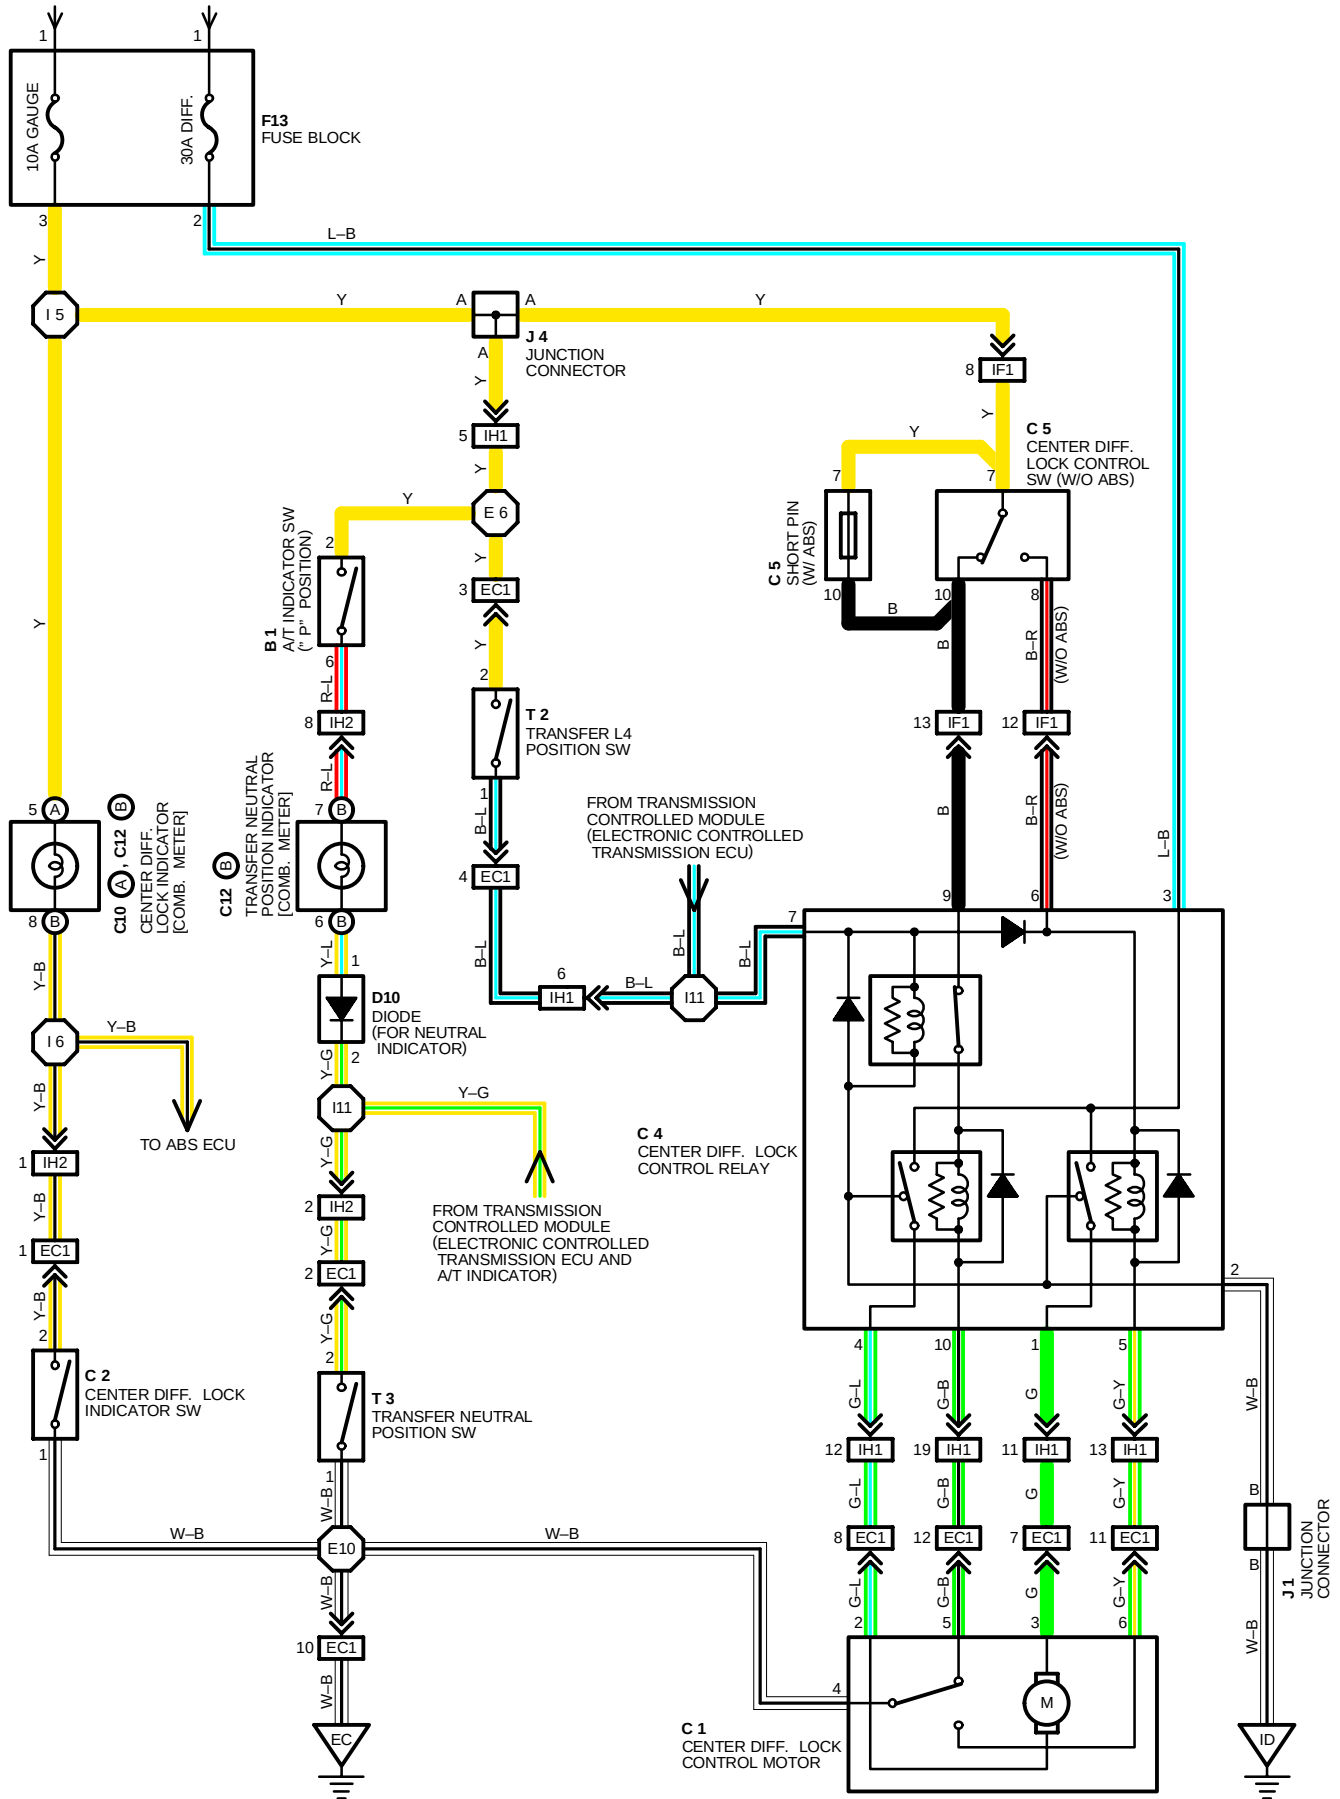

SERVICE HINTS

C 4 CENTER DIFF. LOCK CONTROL RELAY

3-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

2-GROUND: ALWAYS CONTINUITY

7-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION AND FOUR-WHEEL DRIVE CONTROL LEVER AT **L** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 1	22	C10	A 23	J 4	23
C 1	22	C12	B 23	T 2	22
C 2	22	D10	23	T 3	22
C 4	23	F13	23		
C 5	23	J 1	23		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EC1	26	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
IF1	28	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)
IH1		
IH2	28	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	26	AIR INTAKE CHAMBER
ID	28	LEFT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6	26	ENGINE ROOM MAIN WIRE	I 6	28	COWL WIRE
E10	26	TRANSMISSION WIRE	I11		
I 5	28	COWL WIRE			

B 1 GRAY

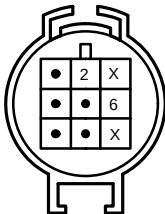


C 1

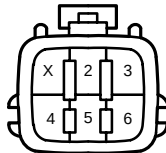

C 2 GRAY



 C 4 GRAY




(W/ ABS) C 5




(W/O ABS) C 5



C10 Ⓐ GRAY

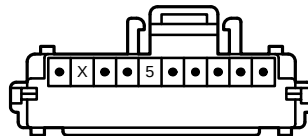

C12 Ⓑ

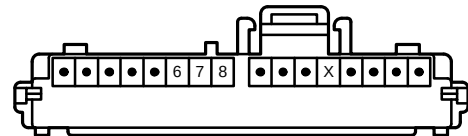


D10 BLACK



F13


(SEE PAGE 20)

 J 1 ORANGE



(HINT : SEE PAGE 7)

 J 4 ORANGE



(HINT : SEE PAGE 7)

T 2 GRAY



T 3 GRAY

