



COMBINATION METER

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

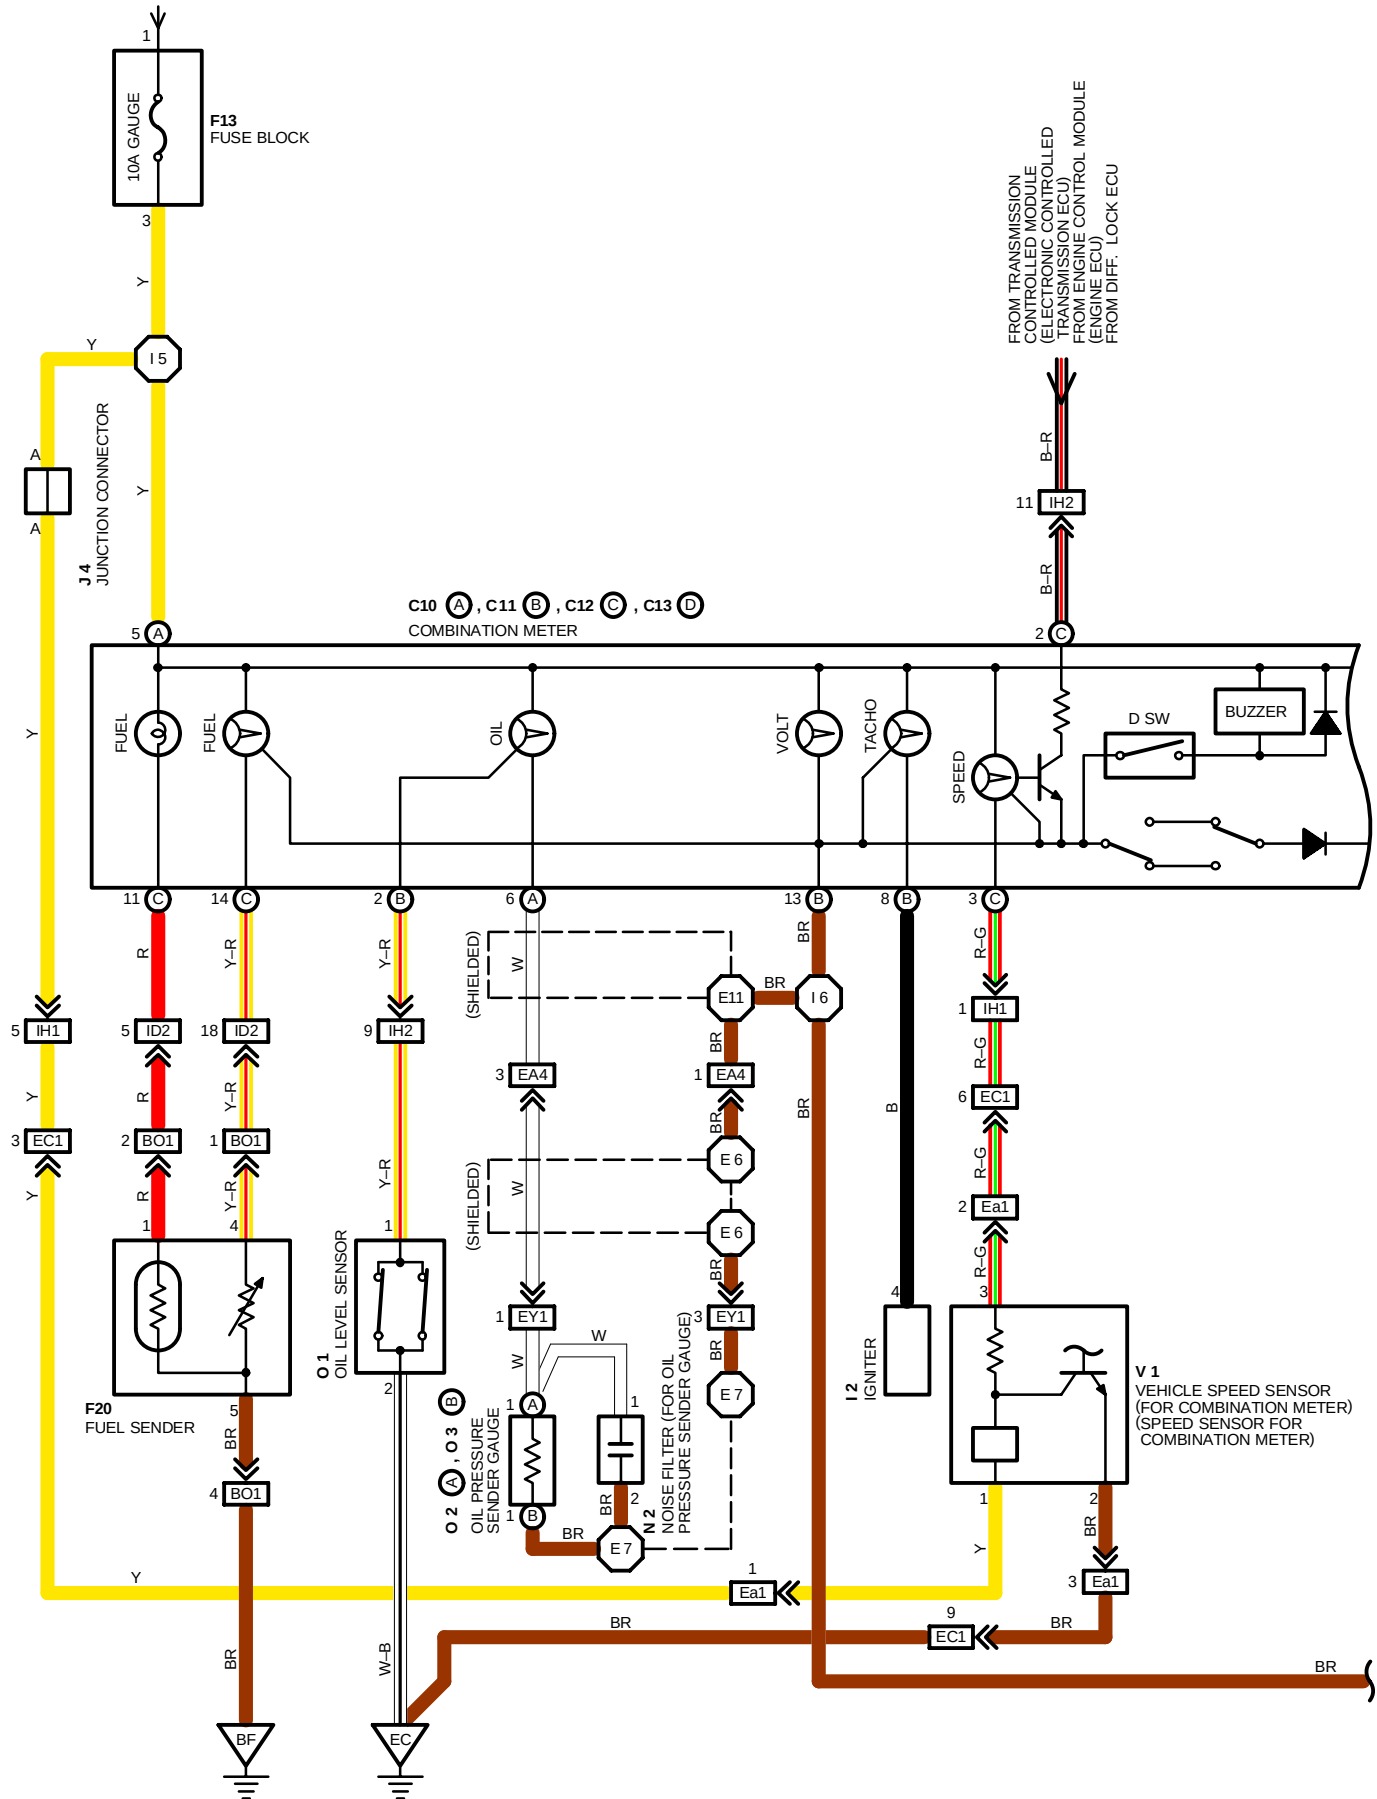

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

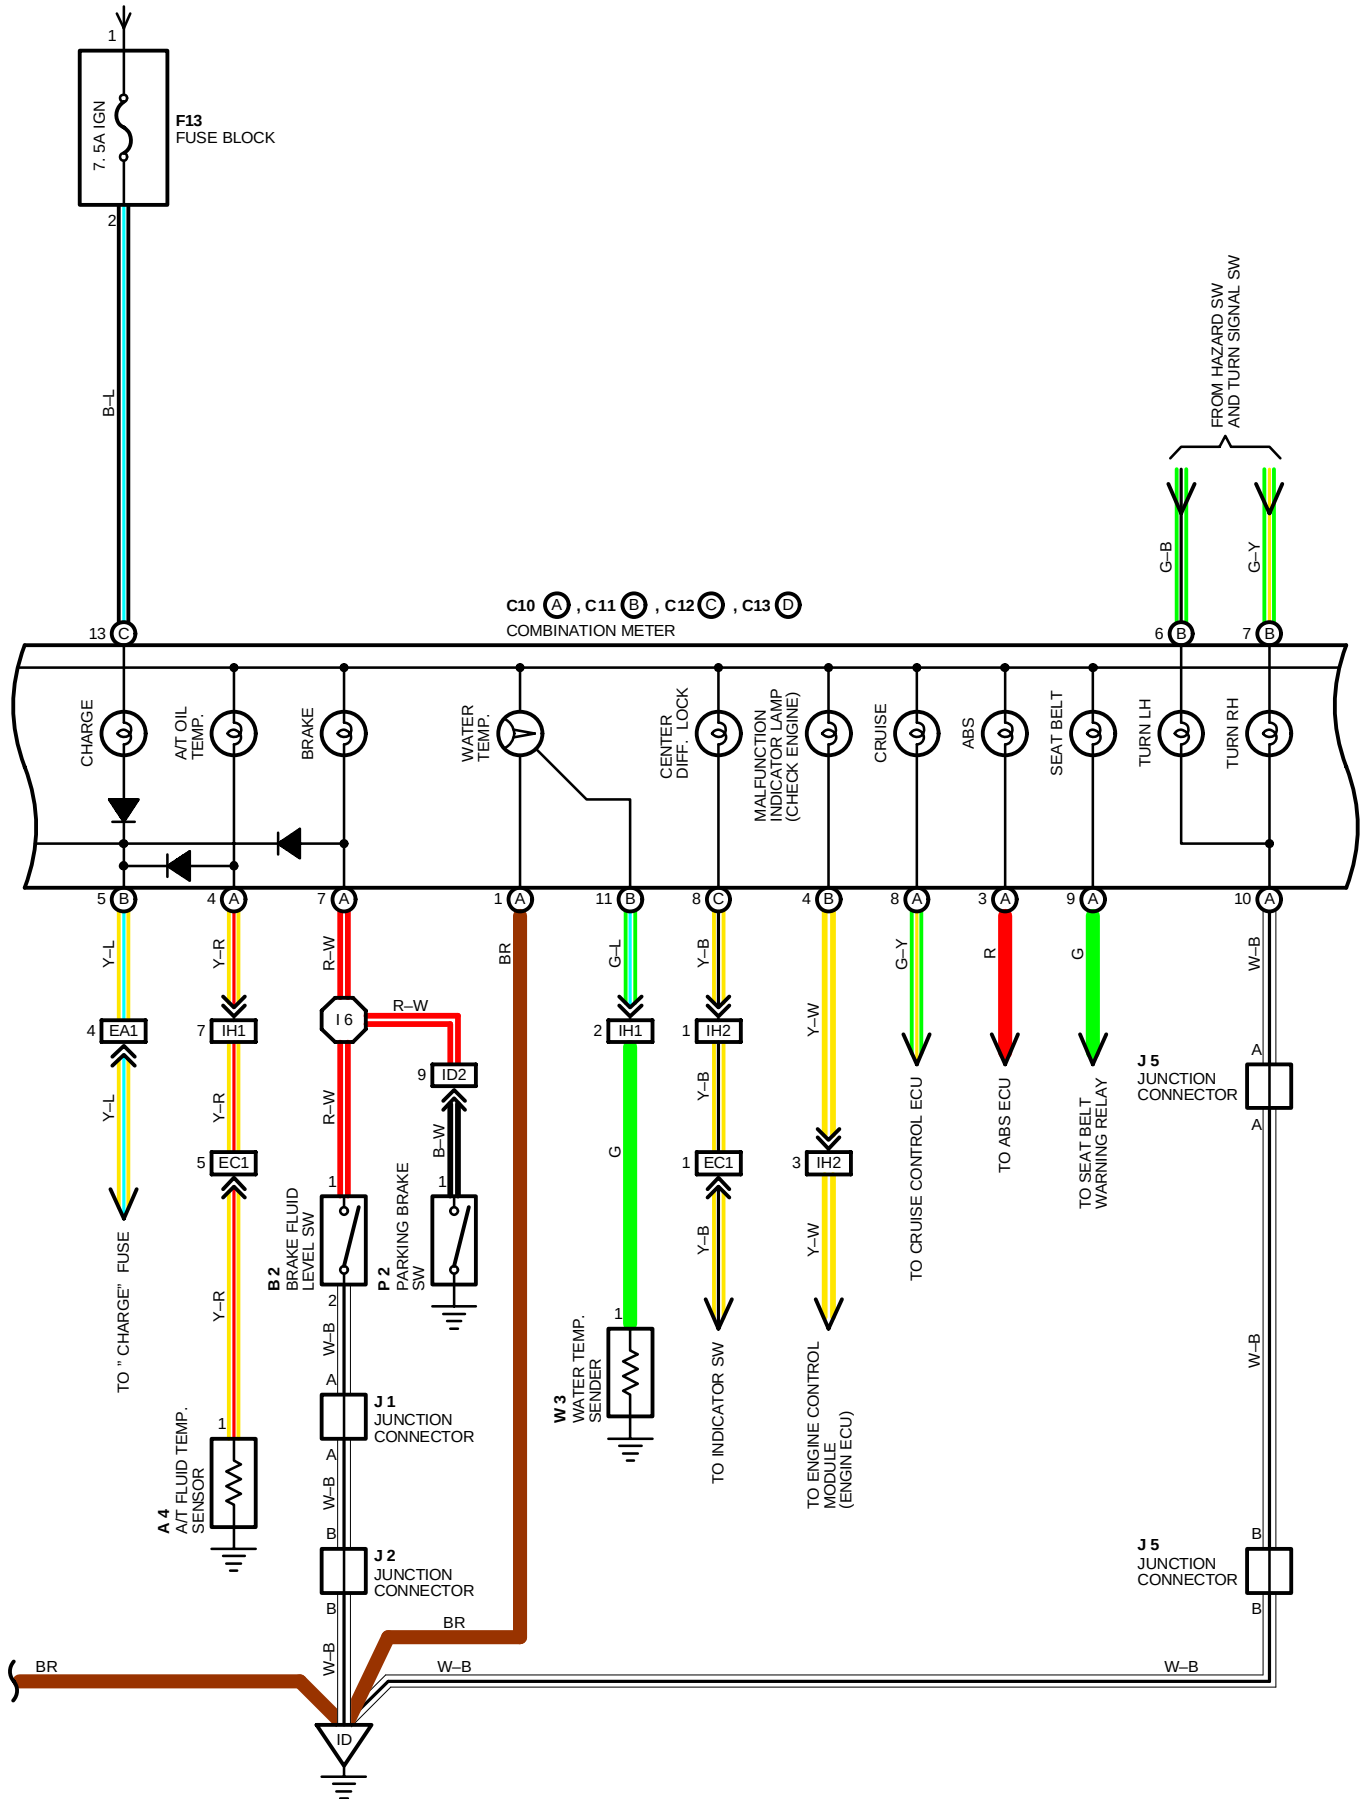



SERVICE HINTS

B 2 BRAKE FLUID LEVEL SW

1-2 : CLOSED WITH FLOAT DOWN

C10(A), C11(B), C12(C), C13(D) COMBINATION METER

(C)16-GROUND: ALWAYS APPROX. 12 VOLTS

(A)5, (C)13-GROUND: APPROX. 12 VOLTS WITH IGNITION SW AT ON POSITION

(A)1, (A)10, (D)6, (B)13-GROUND: ALWAYS CONTINUITY

P 2 PARKING BRAKE SW

1-GROUND : CLOSED WITH PARKING BRAKE LEVER PULLED UP

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A 4	22	F20	24	O 1	22
B 2	22	I 2	22	O 2	A 22
C10	A 23	J 1	23	O 3	B 22
C11	B 23	J 2	23	P 2	24
C12	D 23	J 3	23	R 6	23
C13	C 23	J 4	23	V 1	22
D10	23	J 5	23	W 3	22
F13	23	N 2	22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		
EA4	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (RIGHT FENDER)
EC1	26	ENGINE WIRE AND TRANSMISSION WIRE (NEAR THE STARTER)
EY1	26	OIL PRESSURE SWITCH WIRE AND ENGINE ROOM MAIN WIRE (NEAR THE AIR CLEANER)
Ea1	26	TRANSMISSION WIRE AND SPEED SENSOR WIRE (NEAR THE TRANSMISSION)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IH1	28	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
IH2		
BO1	30	FLOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 2 WIRE (BESIDE THE FUEL TANK)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	26	AIR INTAKE CHAMBER
ID	28	LEFT KICK PANEL
BF	30	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 6	26	ENGINE ROOM MAIN WIRE	I 5	28	COWL WIRE
E 7	26	OIL PRESSURE SWITCH WIRE	I 6		
E11	26	COWL WIRE	I12		

COMBINATION METER

