


HEADLIGHT

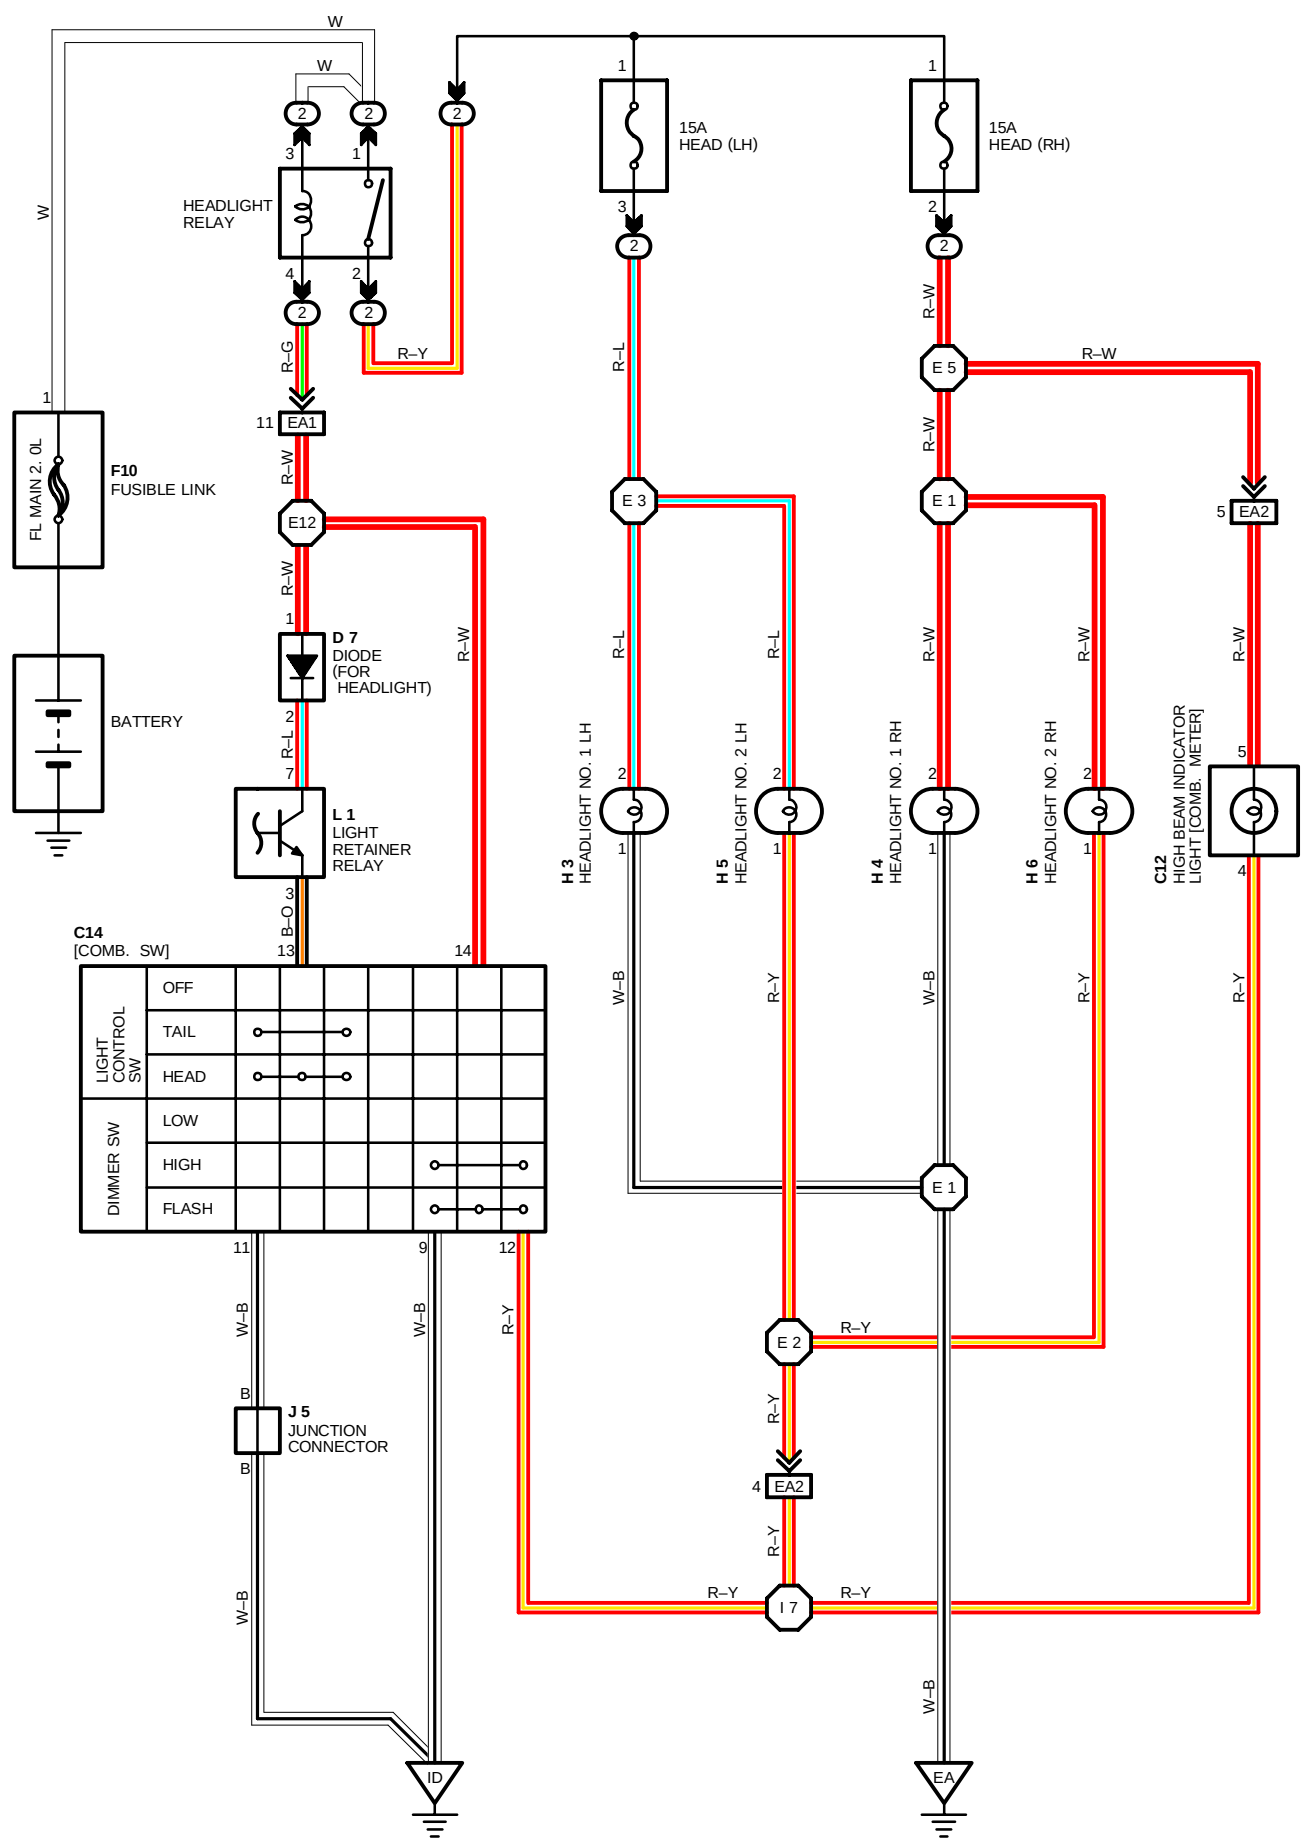

SERVICE HINTS

HEADLIGHT RELAY

(2) 1- (2) 2: CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION OR DIMMER SW AT **FLASH** POSITION

C14 LIGHT CONTROL SW [COMB. SW]

13-11 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION

C14 DIMMER SW [COMB. SW]

14-9 : CLOSED WITH DIMMER SW AT **FLASH** POSITION

12-9 : CLOSED WITH DIMMER SW AT **HIGH** OR **FLASH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C12	23	H 3	22	J 5	23
C14	23	H 4	22	L 1	23
D 7	23	H 5	22		
F10	22	H 6	22		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	26	FRONT SIDE OF RIGHT FENDER
ID	28	LEFT KICK PANEL

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 1	26	ENGINE ROOM MAIN WIRE	E 5	26	ENGINE ROOM MAIN WIRE
E 2			E12	26	COWL WIRE
E 3			I 7	28	

