



ILLUMINATION

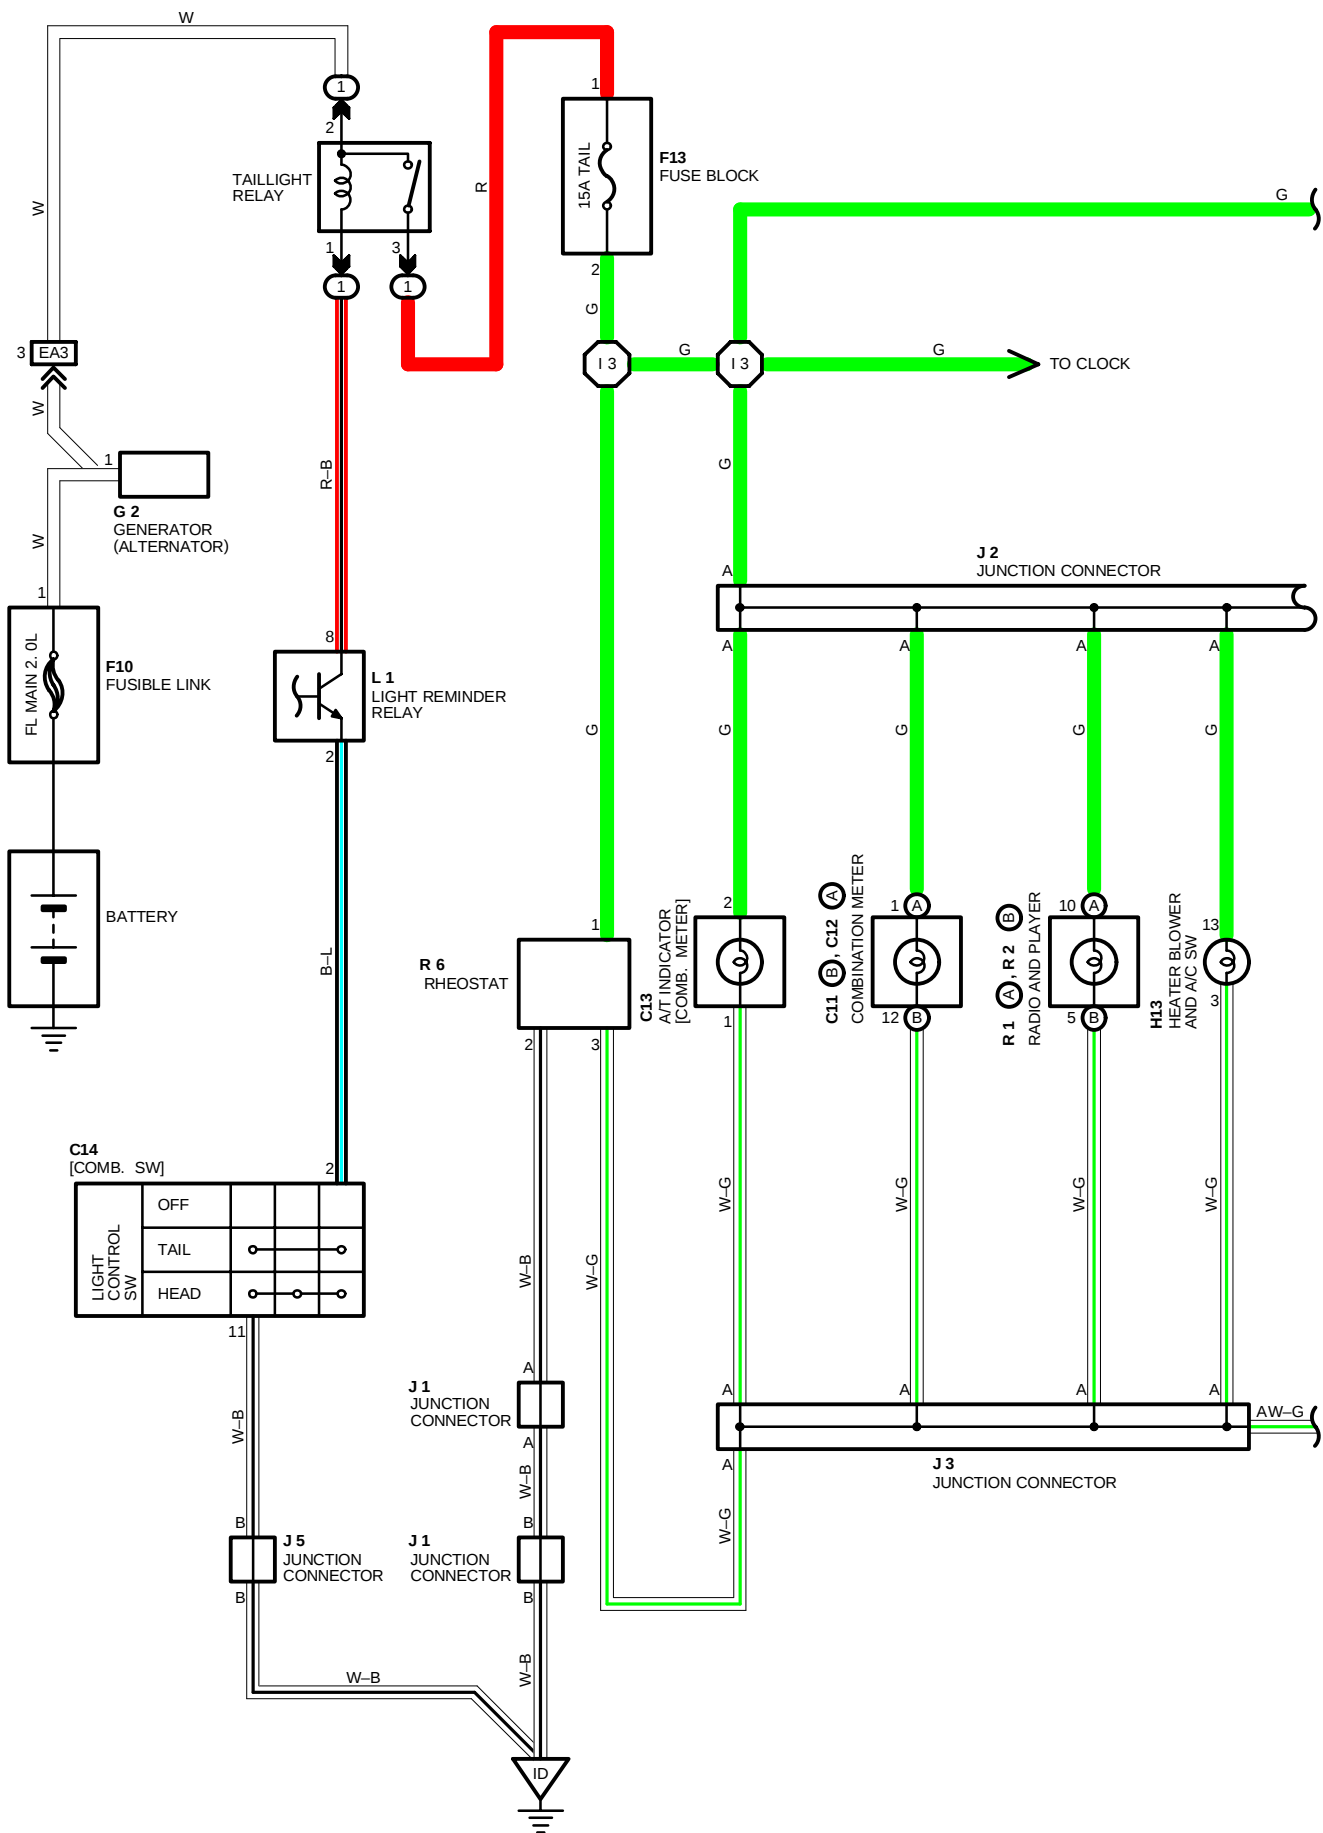

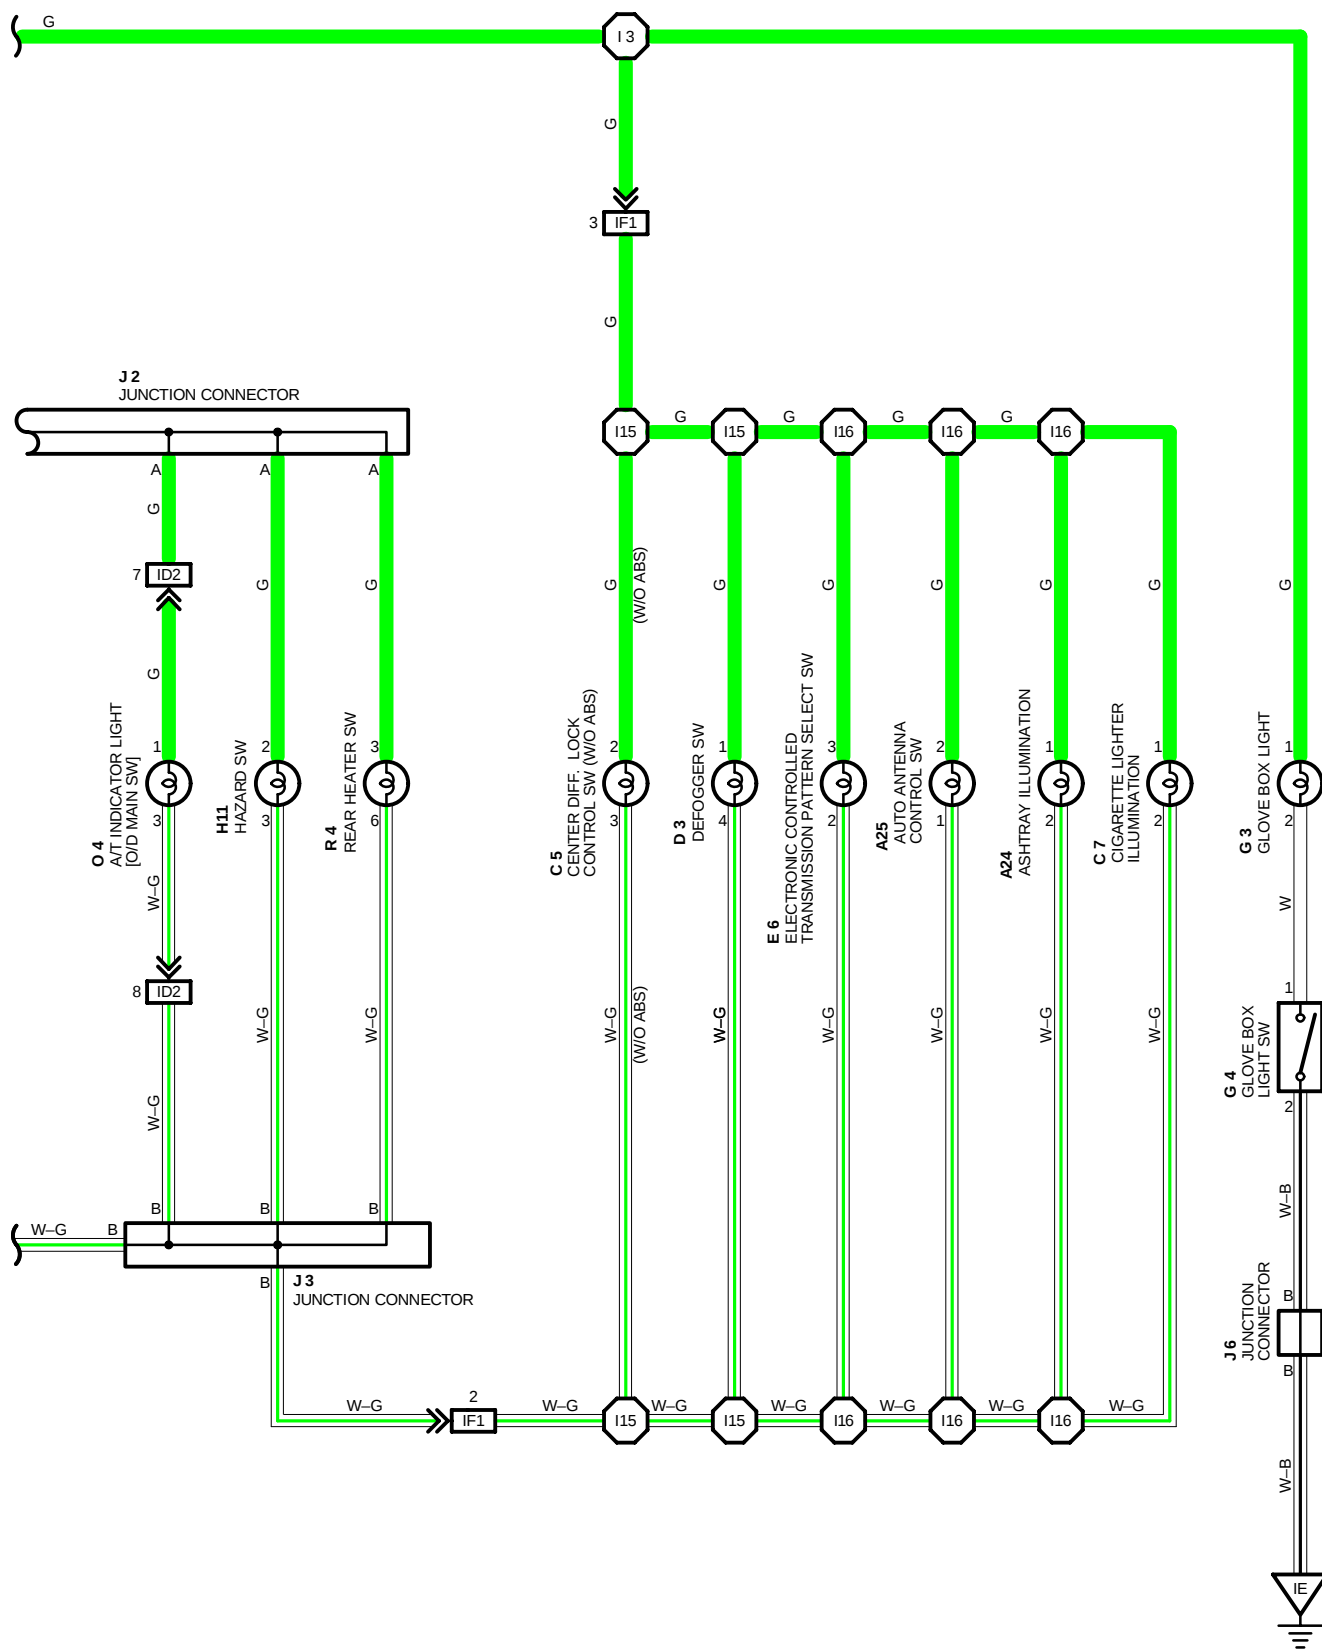

ILLUMINATION

SERVICE HINTS

TAILLIGHT RELAY

(1) 2 – (1) 3 : CLOSED WITH LIGHT CONTROL SW AT **TAIL** OR **HEAD** POSITION (WHEN LIGHT AUTO TURN OFF SYSTEM IS OFF)

R 6 RHEOSTAT

1–2 : APPROX. **12** VOLTS WITH RHEOSTAT FULLY TURNED COUNTERCLOCKWISE AND **0** VOLTS WITH FULLY TURNED CLOCKWISE

 : PARTS LOCATION

CODE		SEE PAGE	CODE		SEE PAGE	CODE		SEE PAGE
A24		23	F10		22	J 5		23
A25		23	F13		23	J 6		23
C 5		23	G 2		22	L 1		23
C 7		23	G 3		23	O 4		24
C11	B	23	G 4		23	R 1	A	23
C12	A	23	H11		23	R 2	B	23
C13		23	H13		23	R 4		23
C14		23	J 1		23	R 6		23
D 3		23	J 2		23			
E 6		23	J 3		23			

 : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT LICK PANEL)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS


CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA3	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IF1	28	INSTRUMENT PANEL WIRE AND COWL WIRE (INSTRUMENT PANEL CENTER)

 : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	28	LEFT KICK PANEL
IE	28	RIGHT KICK PANEL

 : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 3	28	COWL WIRE	I16	28	INSTRUMENT PANEL WIRE
I15	28	INSTRUMENT PANEL WIRE			

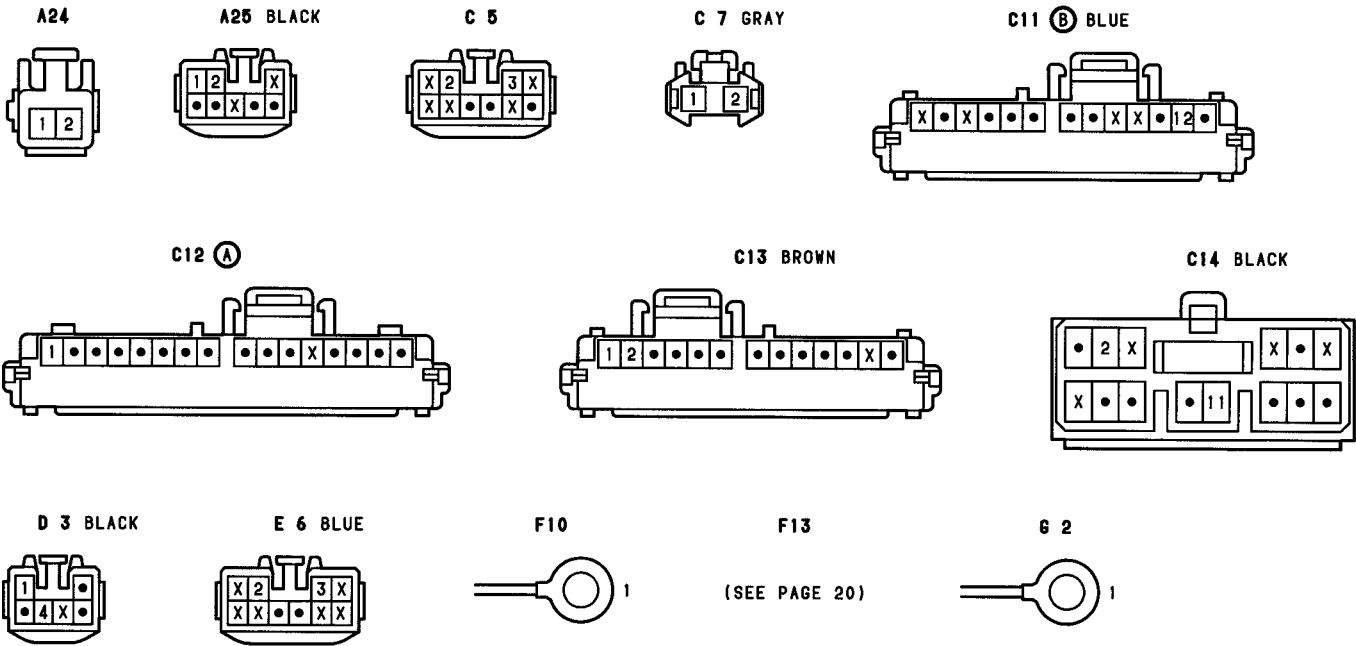


G 3 GRAY




G 4



 
H11



H13

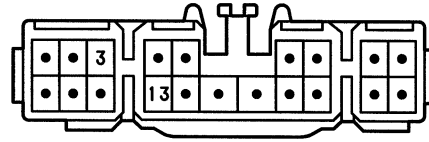


J 1 ORANGE

 


(HINT:SEE PAGE 7)

 J 2 ORANGE




(HINT:SEE PAGE 7)

 J 3 ORANGE




(HINT:SEE PAGE 7)

 J 5 ORANGE



(HINT:SEE PAGE 7)

 J 6 ORANGE




(HINT:SEE PAGE 7)


L 1



 
O 4 BLUE



R 1 (A) GRAY

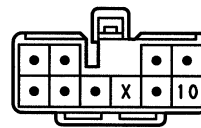

R 2 (B) GRAY

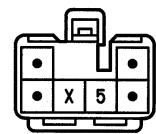

R 4 BLACK



R 6

