

*1 : W/ MOON ROOF
*2 : W/O MOON ROOF

The diagram illustrates the electrical circuitry for a vehicle's interior lighting. Key components include:

- Power Source:** A 10A DOME light connected to a fuse (ID2) and a relay (BR1).
- Lighting Circuits:**
 - Vanity Lights:** M2 (*1), P3 (*2), V8 VANITY LIGHT LH, and V9 VANITY LIGHT RH.
 - Door Courtesy Lights:** D15 DOOR COURTESY SW REAR RH, D14 DOOR COURTESY SW REAR LH, D13 DOOR COURTESY SW FRONT RH, and D12 DOOR COURTESY SW FRONT LH.
 - Rear Interior Light:** R15 REAR INTERIOR LIGHT.
 - Front Interior Light:** F18 (*1) and F19 (*2).
 - Luggage Compartment Light:** L3 LUGGAGE COMPARTMENT LIGHT.
- Control Components:**
 - Switches:** Various switches for door operation (ON/OFF) and courtesy lights.
 - Relays:** I11 IGNITION KEY CYLINDER LIGHT RELAY and I10 IGNITION KEY CYLINDER LIGHT.
 - Diodes:** D8 DIODE (FOR INTERIOR LIGHT) and D9 DIODE (FOR INTERIOR LIGHT).
 - Fuses:** Multiple fuses labeled ID2, BR1, BS2, BT2, and J1.
- Wiring Color Coding:** Wires are color-coded throughout the diagram, such as L-Y (light yellow), L (light blue), R-L (red), B (black), W-B (white), R-G (red-green), and R-B (red-black).

SERVICE HINTS

F18, F19 FRONT INTERIOR LIGHT

2-GROUND : ALWAYS APPROX. 12 VOLTS
2-1 : CLOSED WITH SW AT **DOOR** POSITION

D12, D13, D14, D15 DOOR COURTESY SW

1-GROUND : CLOSED WITH DOOR OPEN

B 7 BACK DOOR COURTESY SW

1-2 : CLOSED WITH BACK DOOR OPEN

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
B 7	24	D15	24	L 3	24
C12	23	F18	24	N 2	24
D 8	23	F19	24	P 3	24
D 9	23	I10	23	R15	24
D12	24	I11	23	V 8	24
D13	24	J 1	23	V 9	24
D14	24	J 5	23		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
IE1	28	ROOF WIRE AND COWL WIRE (LEFT KICK PANEL)
II2	28	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BL1	30	ROOF WIRE AND ROOF NO. 3 WIRE (ROOF LEFT)
BR1	30	LUGGAGE ROOM NO. 1 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BS2	30	BACK DOOR NO. 1 WIRE AND LUGGAGE ROOM NO. 1 WIRE (LEFT REAR SIDE OF ROOF)
BT2	30	BACK DOOR NO. 1 WIRE AND BACK DOOR NO. 2 WIRE (BACK DOOR LEFT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	28	LEFT KICK PANEL
BF	30	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E12	26	COWL WIRE	B 6	32	ROOF WIRE
I 4	28		B18	32	LUGGAGE ROOM WIRE
B 5	32	ROOF WIRE			

