



POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

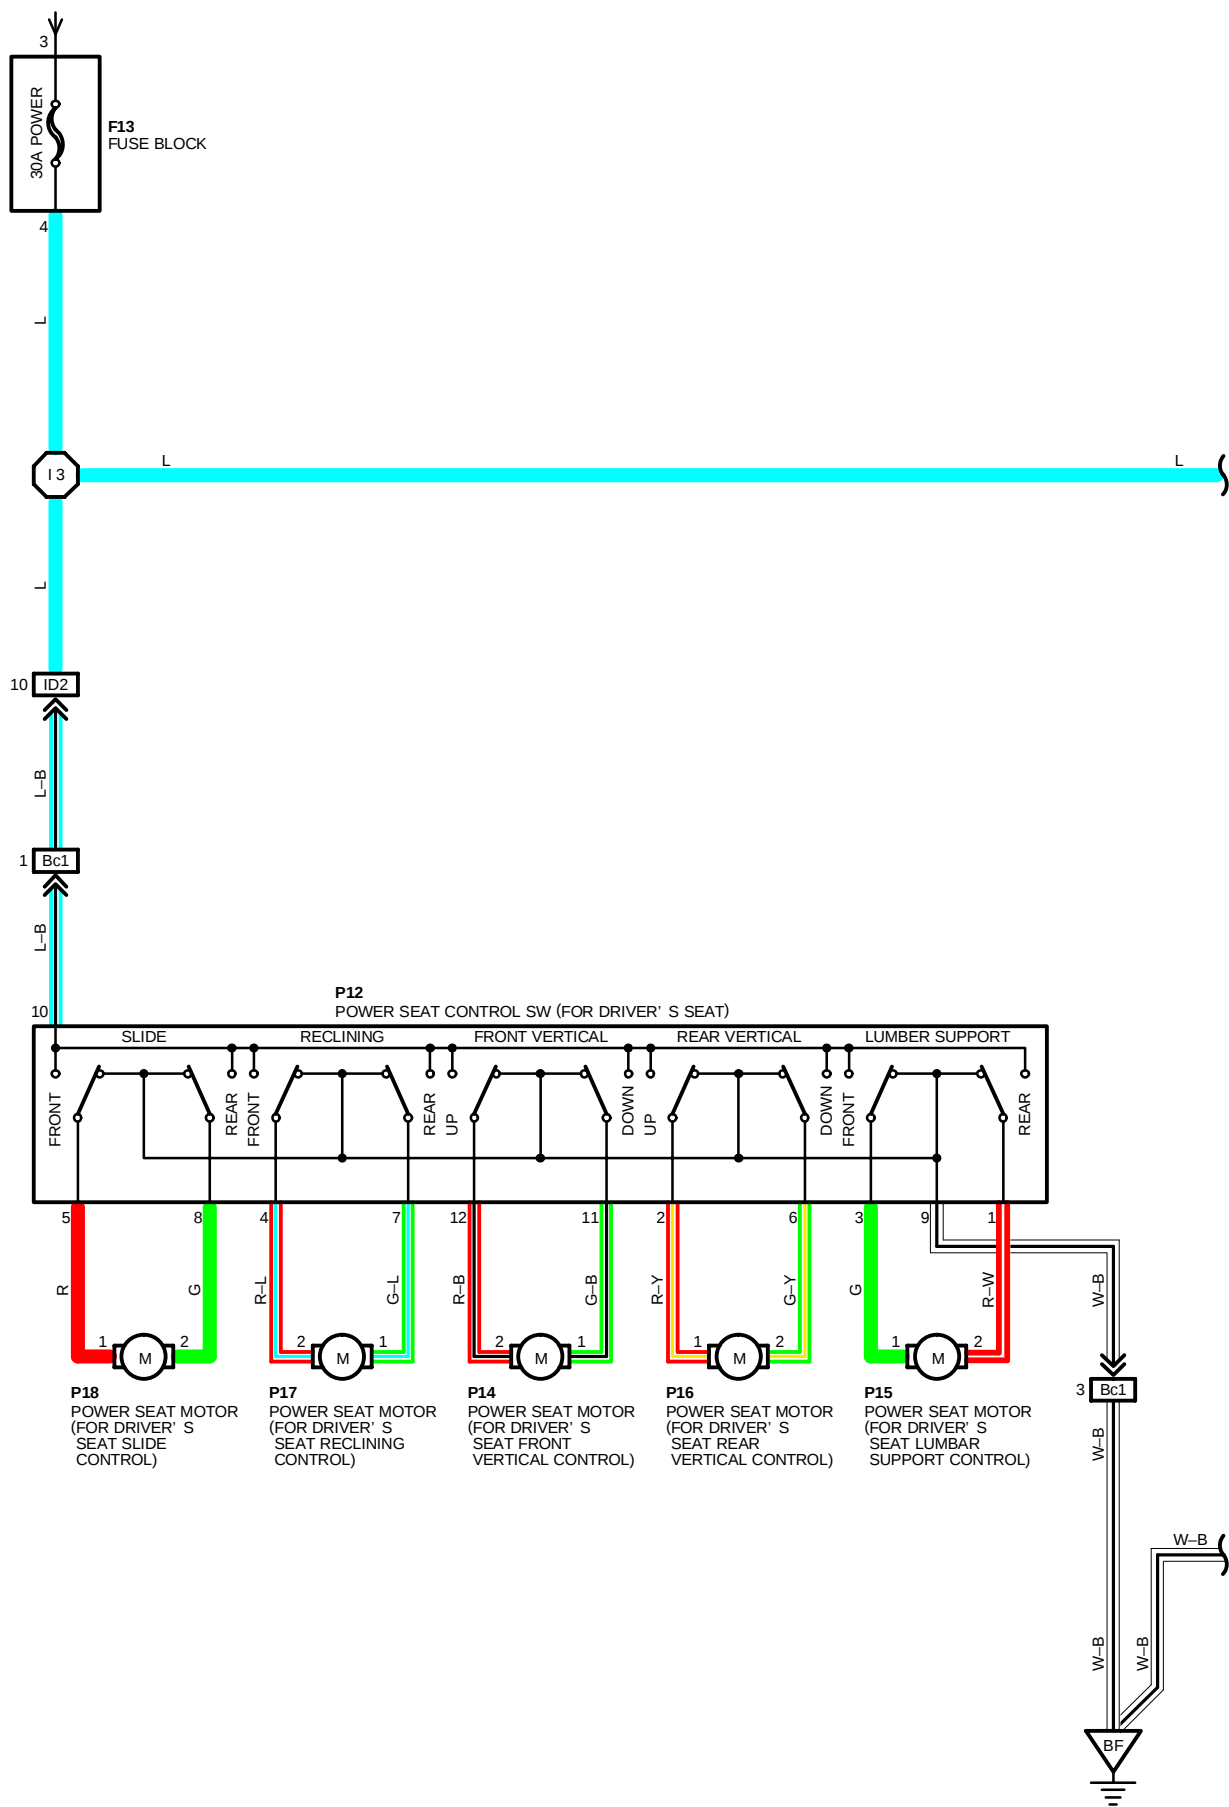

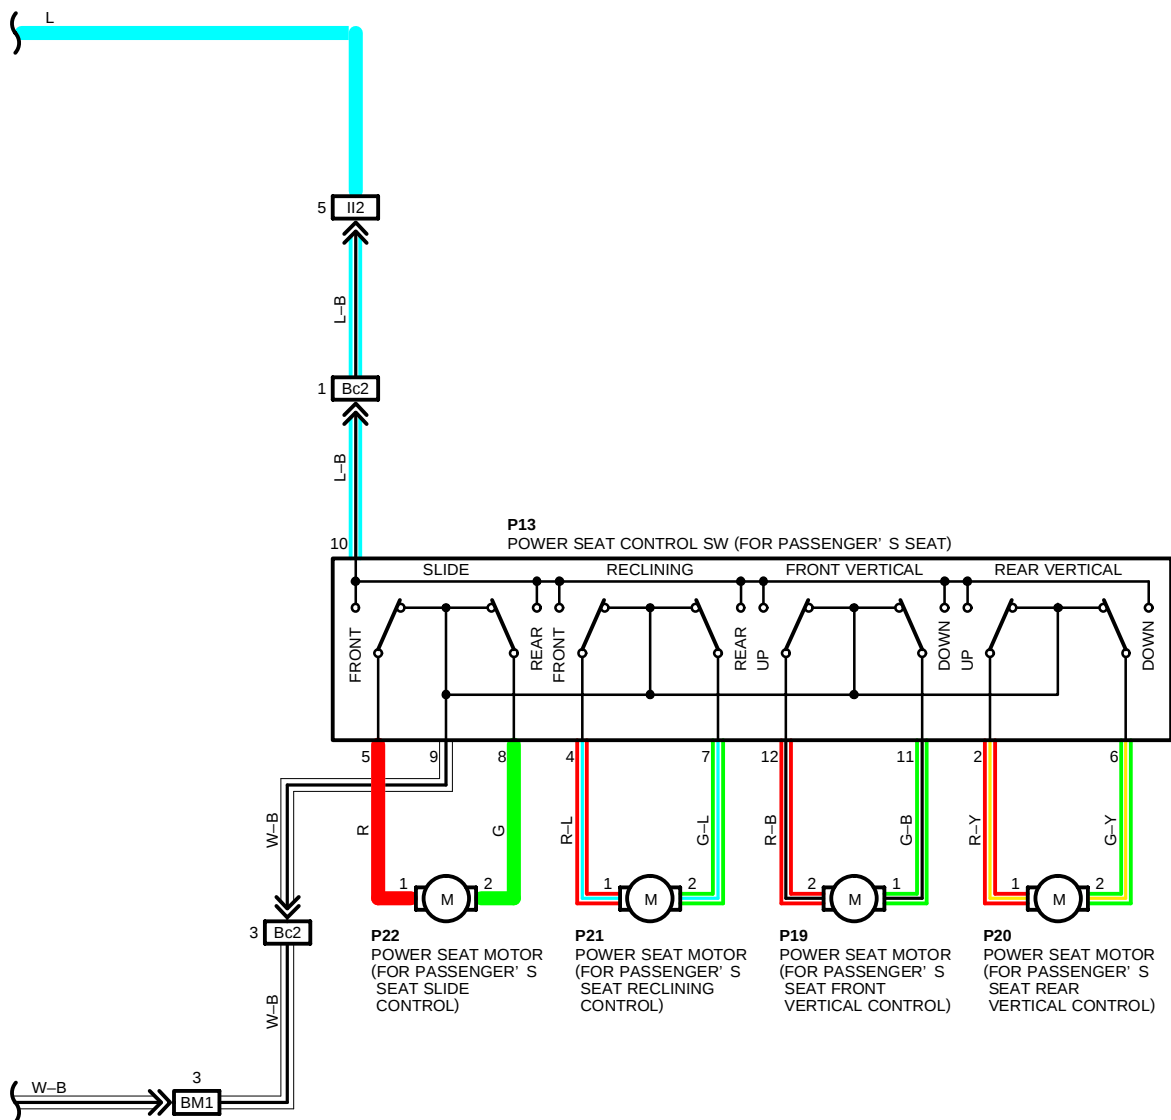

POWER SEAT

SERVICE HINTS

P12 POWER SEAT CONTROL SW (FOR DRIVER'S SEAT)

- 10-5 : CLOSED WITH DRIVER'S SEAT AT FRONT SLIDE OPERATION
- 10-8 : CLOSED WITH DRIVER'S SEAT AT REAR SLIDE OPERATION
- 10-4 : CLOSED WITH DRIVER'S SEAT AT FRONT RECLINING OPERATION
- 10-7 : CLOSED WITH DRIVER'S SEAT AT REAR RECLINING OPERATION
- 10-12 : CLOSED WITH DRIVER'S SEAT AT FRONT VERTICAL UP OPERATION
- 10-11 : CLOSED WITH DRIVER'S SEAT AT FRONT VERTICAL DOWN OPERATION
- 10-2 : CLOSED WITH DRIVER'S SEAT AT REAR VERTICAL UP OPERATION
- 10-6 : CLOSED WITH DRIVER'S SEAT AT REAR VERTICAL AT DOWN OPERATION
- 10-3 : CLOSED WITH DRIVER'S SEAT AT LUMBER SUPPORT FRONT OPERATION
- 10-1 : CLOSED WITH DRIVER'S SEAT AT LUMBER SUPPORT REAR OPERATION

P13 POWER SEAT CONTROL SW (FOR PASSENGER'S SEAT)

- 10-5 : CLOSED WITH DRIVER'S SEAT AT FRONT SLIDE OPERATION
- 10-8 : CLOSED WITH DRIVER'S SEAT AT REAR SLIDE OPERATION
- 10-4 : CLOSED WITH DRIVER'S SEAT AT FRONT RECLINING OPERATION
- 10-7 : CLOSED WITH DRIVER'S SEAT AT REAR RECLINING OPERATION
- 10-12 : CLOSED WITH DRIVER'S SEAT AT FRONT VERTICAL UP OPERATION
- 10-11 : CLOSED WITH DRIVER'S SEAT AT FRONT VERTICAL DOWN OPERATION
- 10-2 : CLOSED WITH DRIVER'S SEAT AT REAR VERTICAL UP OPERATION
- 10-6 : CLOSED WITH DRIVER'S SEAT AT REAR VERTICAL AT DOWN OPERATION
- 9- GROUND: ALWAYS CONTINUITY

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F13	23	P15	25	P19	25
P12	25	P16	25	P20	25
P13	25	P17	25	P21	25
P14	25	P18	25	P22	25

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
II2	28	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BN1	30	FLOOR NO. 2 WIRE AND FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)
Bc1	32, 34	FLOOR NO. 1 WIRE AND SAET NO. 1 WIRE (UNDER THE DRIVER'S SEAT)
Bc2	32, 34	FLOOR NO. 2 WIRE AND SAET NO. 1 WIRE (UNDER THE PASSENGER'S SEAT)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BF	30	UNDER THE CENTER CONSOLE BOX

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I3	28	COWL WIRE			

