


REAR HEATER

FROM POWER SOURCE SYSTEM (SEE PAGE 46)

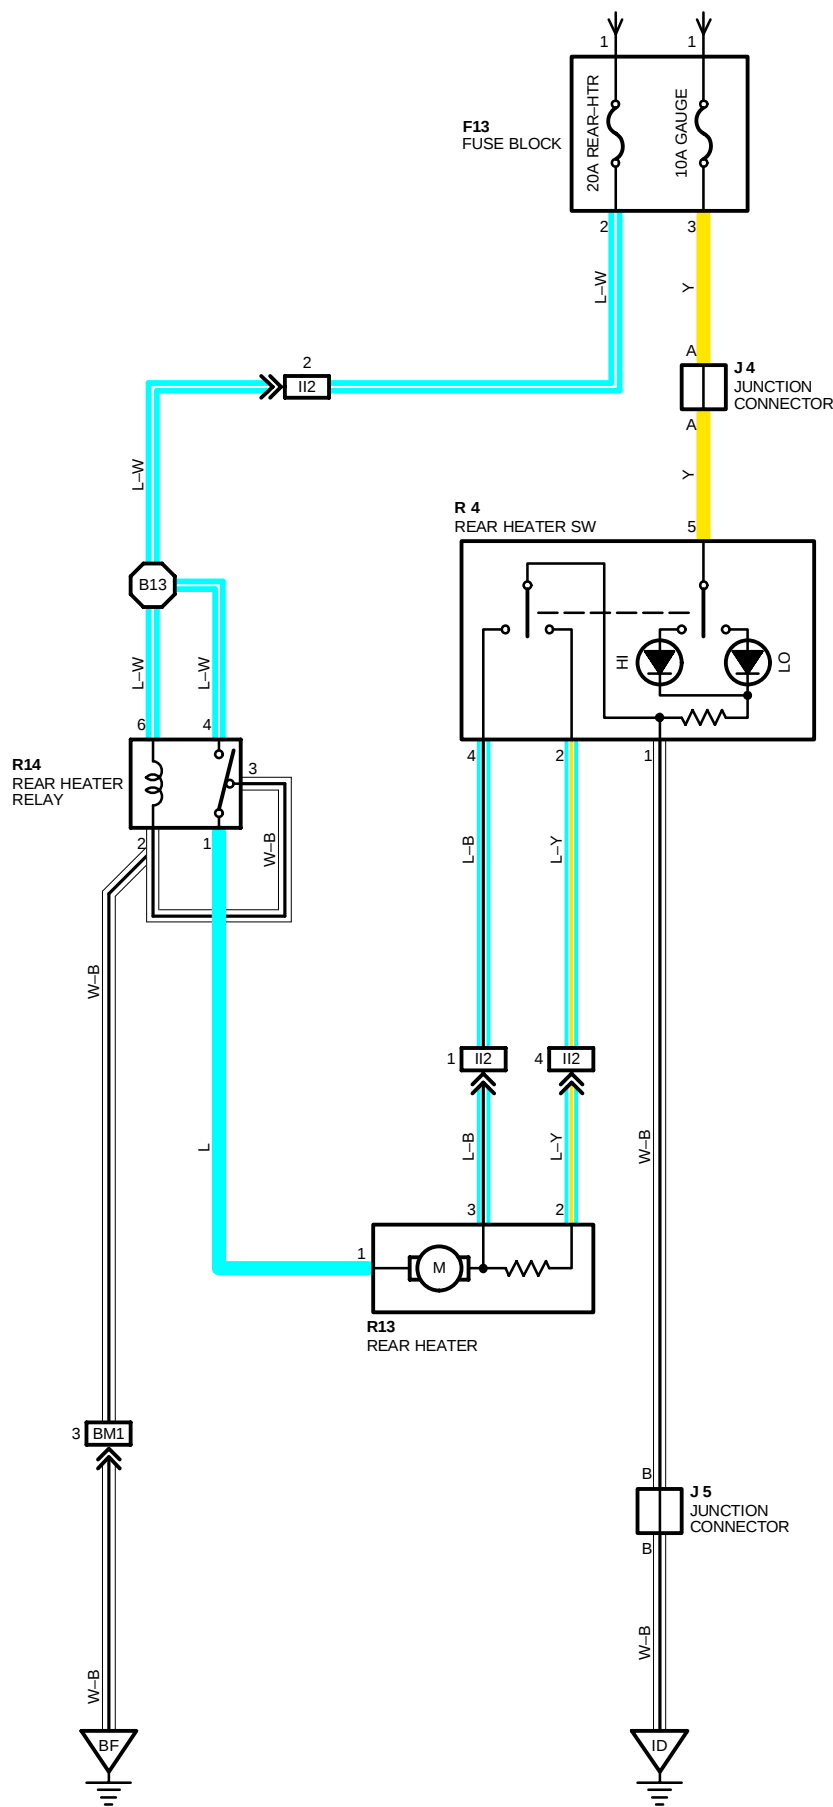

SERVICE HINTS

R 4 REAR HEATER SW

- 1-2 : CLOSED WITH IGNITION SW AT ON AND REAR HEATER SW AT **LO** POSITION
 1-4 : CLOSED WITH IGNITION SW AT ON AND REAR HEATER SW AT **HI** POSITION

R14 REAR HEATER RELAY

- 1-4 : CLOSED WITH IGNITION SW AT **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F13	23	J 5	23	R13	24
J 4	23	R 4	23	R14	24

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II2	28	COWL WIRE AND FLOOR NO. 2 WIRE (RIGHT KICK PANEL)
BM1	30	FLOOR NO. 2 WIRE AND FLOOR NO. 1 WIRE (UNDER THE CENTER CONSOLE)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	28	LEFT KICK PANEL
BF	30	UNDER THE CENTER CONSOLE BOX


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B13	32	FLOOR NO. 2 WIRE			


F13

(SEE PAGE 20)

 J 4 ORANGE




J 5 ORANGE

 

R 4 BLACK



 R13



R14

