


TAILLIGHT

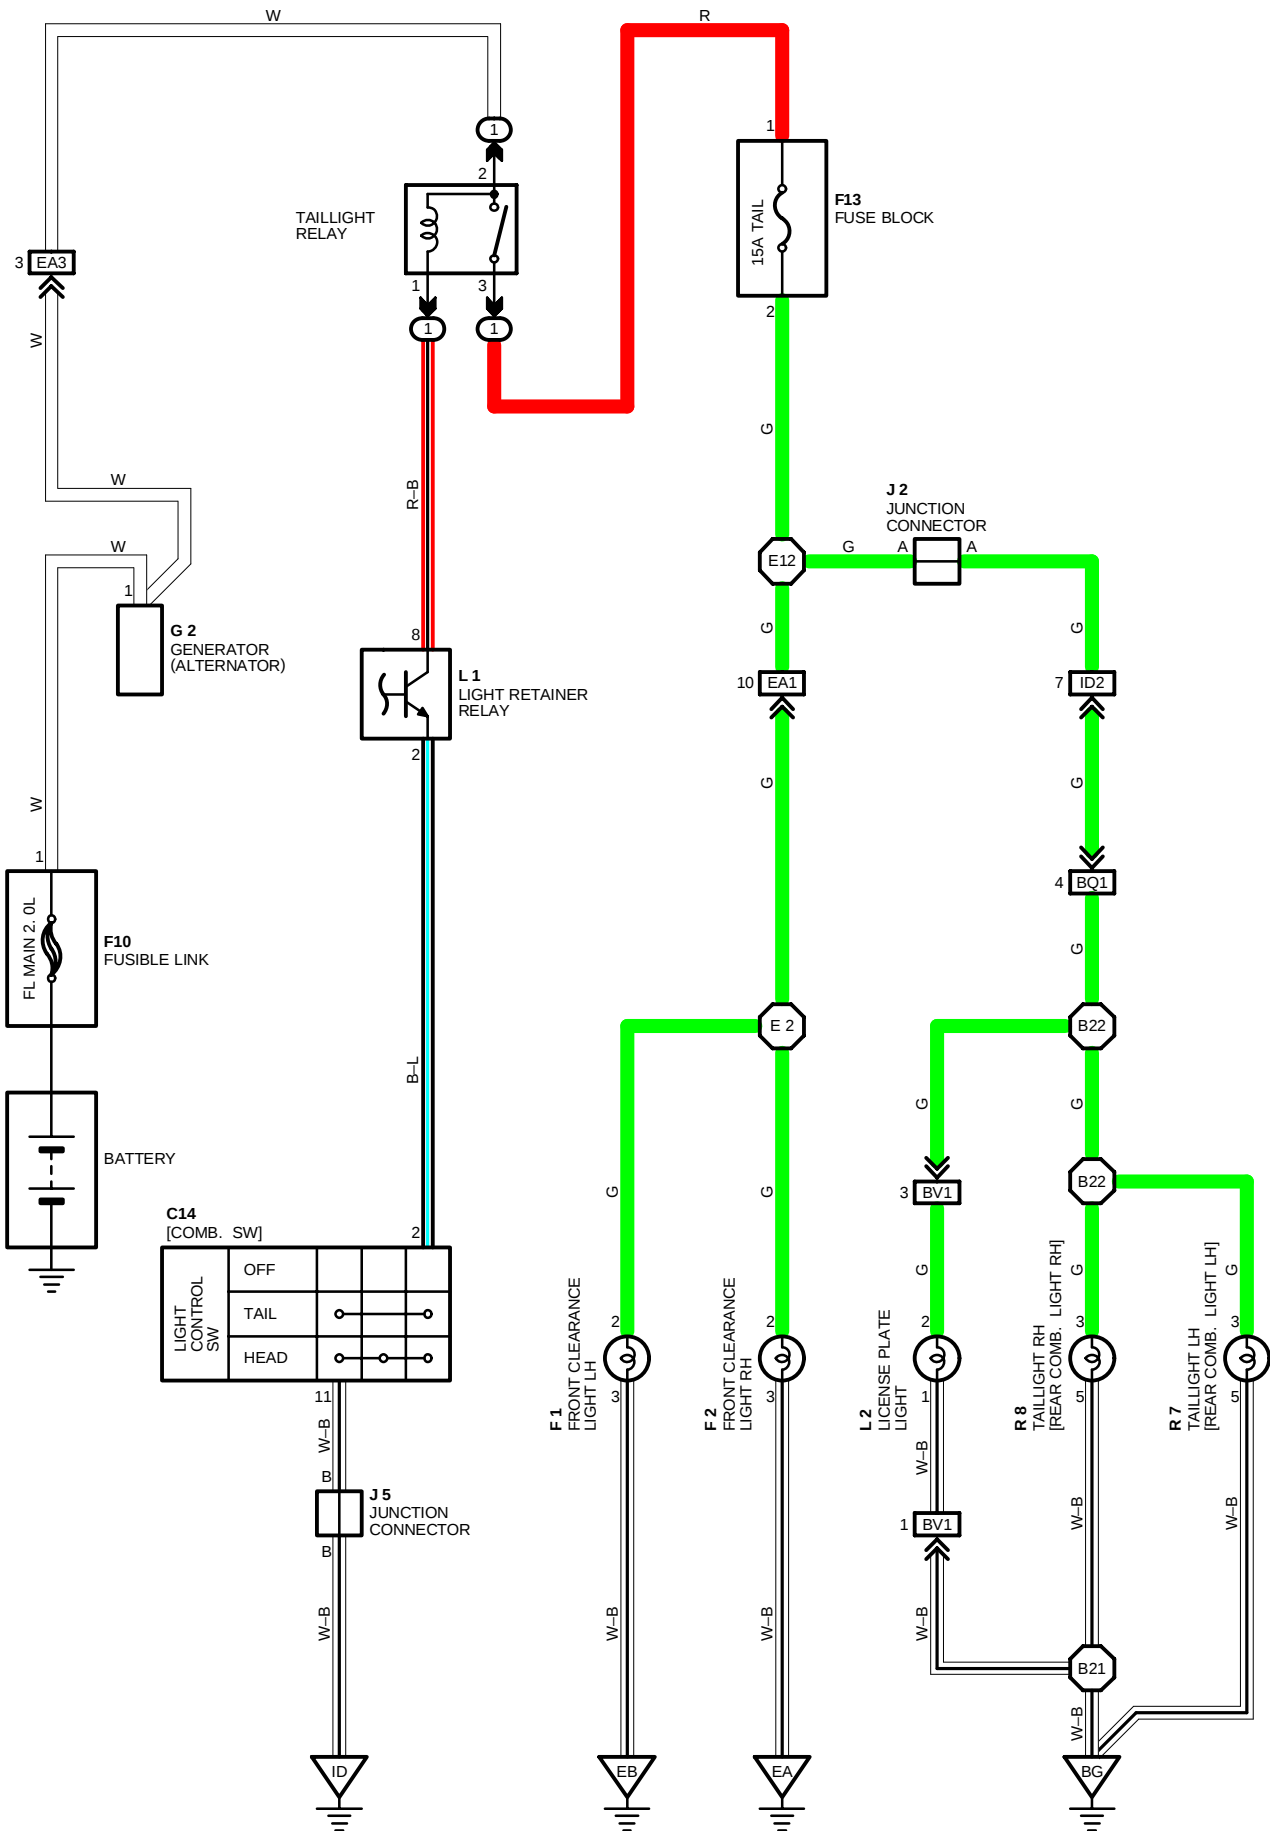

SERVICE HINTS

TAILLIGHT RELAY

(1) 2- (1) 3: CLOSED WITH LIGHT CONTROL SW AT TAIL OR HEAD POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C14	23	F13	23	L 1	23
F 1	22	G 2	22	L 2	24
F 2	22	J 2	23	R 7	24
F10	22	J 5	23	R 8	24

□ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
1	20	R/B NO. 1 (LEFT KICK PANEL)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	26	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
EA3		
ID2	28	COWL WIRE AND FLOOR NO. 1 WIRE (LEFT KICK PANEL)
BQ1	30	FLOOR NO. 3 WIRE AND FLOOR NO. 1 WIRE (LEFT QUARTER PANEL INNER)
BV1	32	LUGGAGE ROOM NO. 3 WIRE AND FLOOR NO. 3 WIRE (UNDER THE LOWER BACK PANEL)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	26	FRONT SIDE OF RIGHT FENDER
EB	26	FRONT SIDE OF LEFT FENDER
ID	28	LEFT KICK PANEL
BG	30	LOWER BACK PANEL CENTER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 2	26	ENGINE ROOM MAIN WIRE	B21	32	FLOOR NO. 3 WIRE
E12	26	COWL WIRE	B22		


C14 BLACK

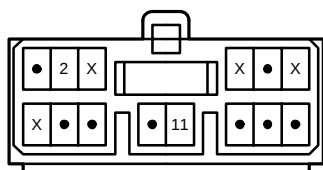

F 1, F 2 GRAY



 F10




F13

(SEE PAGE 20)

G 2




 J 2 ORANGE




(HINT : SEE PAGE 7)

 J 5 ORANGE



(HINT : SEE PAGE 7)

 L 1



L 2



R 7, R 8

