


## CYLINDER HEAD CYLINDER HEAD REMOVAL AND INSTALLATION


### 1. REMOVE CHAIN TENSIONER

Remove the 2 nuts, chain tensioner and gasket.

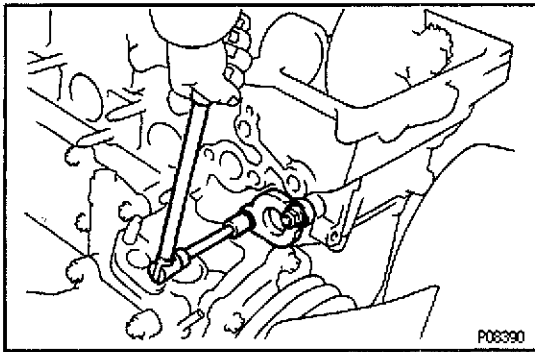


### 2. INSPECT CHAIN TENSIONER

Check that the plunger moves smoothly.

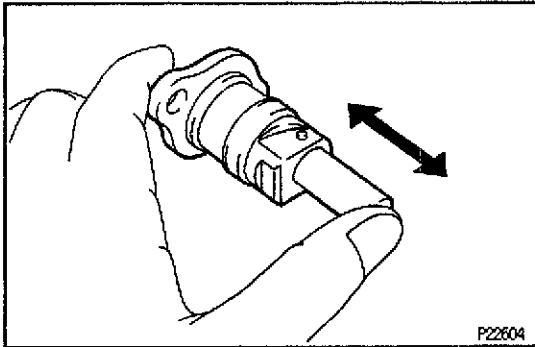

### 3. INSTALL CHAIN TENSIONER

- (a) Place a new gasket so that the front mark is toward the front side.

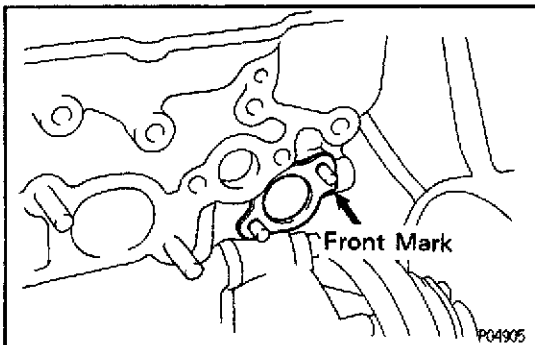

- (b) Push the tensioner by hand until it touches the head installation surface, then install the 2 nuts.

- (c) Tighten the 2 nuts.

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

