



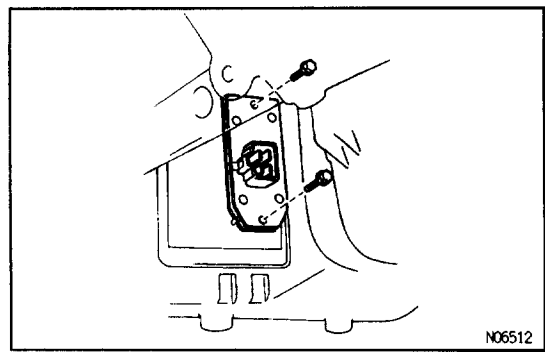

BLOWER RESISTOR

BLOWER RESISTOR REMOVAL

- Installation is in the reverse order of removal.
- 1. **REMOVE GLOVE COMPARTMENT DOOR**
(See page [BO-59](#))
 - 2. **REMOVE BLOWER RESISTOR**
 - (a) Disconnect connector from the blower resistor.
 - (b) Remove 2 screws and the blower resistor.

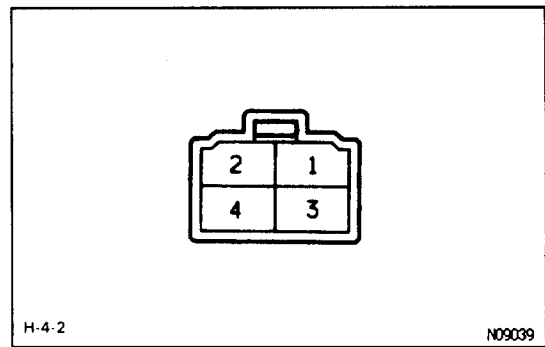

BLOWER RESISTOR INSPECTION

INSPECT BLOWER RESISTOR CONTINUITY

Condition	Tester connection to terminal number	Specified condition
Constant	1 - 2 - 3 - 4	Continuity

If continuity is not as specified, replace the blower resistor.