


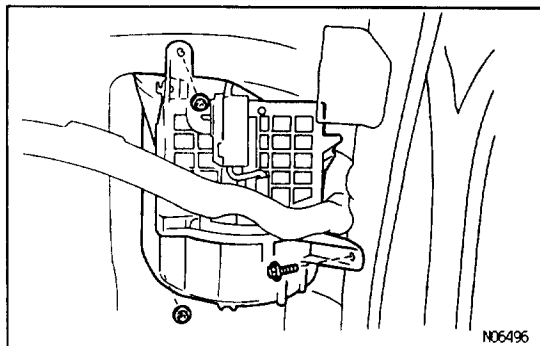

BLOWER UNIT

BLOWER UNIT REMOVAL

Installation is in the reverse order of removal.

1. **REMOVE INSTRUMENT PANEL AND REINFORCEMENT**
(See page [BO-59](#))
2. **REMOVE COOLING UNIT**
(See page [AC-26](#))
3. **REMOVE BLOWER UNIT**
 - (a) Disconnect the connectors
 - (b) Remove the bolt and 2 nuts, then remove the blower unit.