


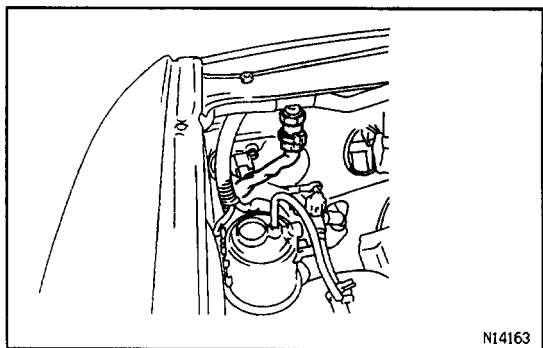

PRESSURE SWITCH REMOVAL

Installation is in the reverse order of removal.

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

INSTALLATION HINT: Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:


$850 \pm 50 \text{ g}$ ($29.98 \pm 1.76 \text{ oz.}$)

2. REMOVE PRESSURE SWITCH

- (a) Disconnect the connector.
- (b) Remove the pressure switch from the liquid tube.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)

REMOVAL HINT: Lock the switch mount on the tube with an open end wrench, being careful not to deform the tube, and remove the switch.

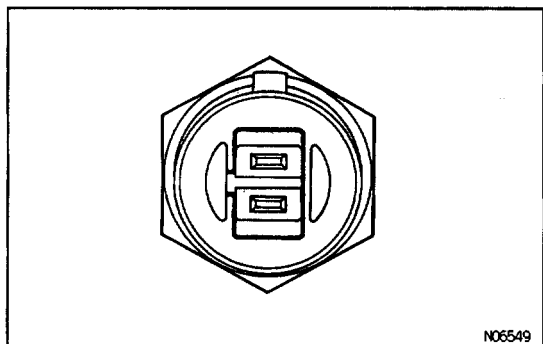


ENGINE COOLANT TEMPERATURE CUT SWITCH

ENGINE COOLANT TEMPERATURE CUT SWITCH INSPECTION

INSPECT SWITCH CONTINUITY

Check the continuity between terminals of the switch shown below.

If continuity is not as specified, replace the switch.

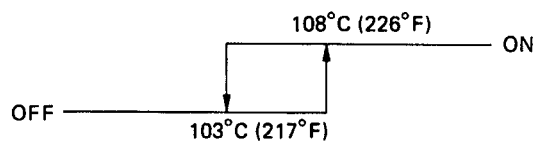

V02084