



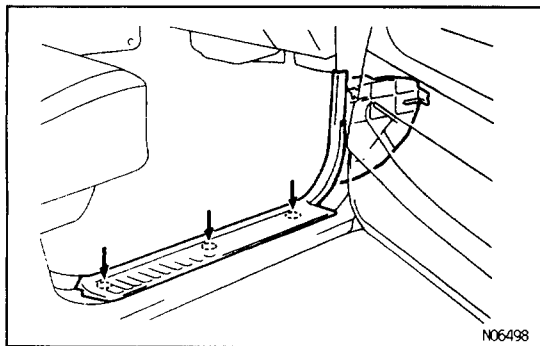

FRONT BLOWER MOTOR BLOWER MOTOR REMOVAL


Installation is in the reverse order of removal.

1. REMOVE RH SCUFF PLATE

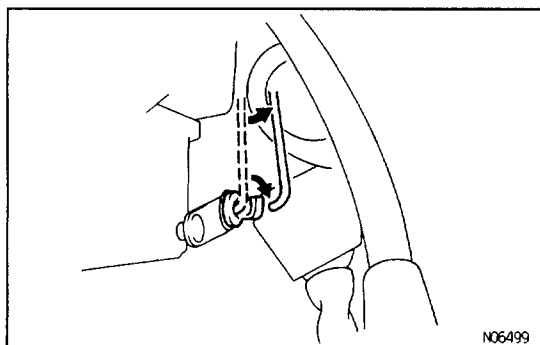

2. REMOVE BLOWER MOTOR


(a) Disconnect the link from the lower cover.

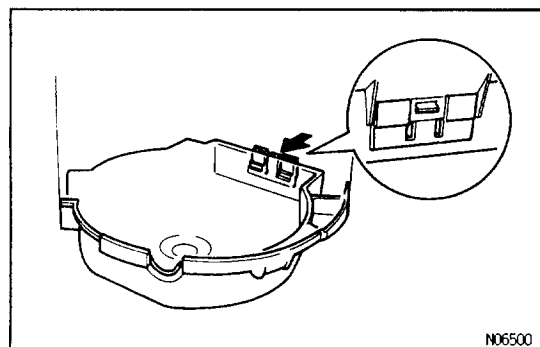

(b) Remove the 2 screws, then remove the lower cover while pushing the locking protrusion, as shown.

(c) Disconnect the connector from the blower motor.

(d) Remove the 3 screws and the blower motor.

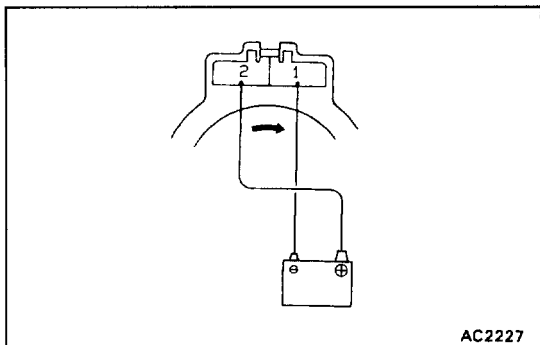

BLOWER MOTOR INSPECTION

INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the motor operation is smooth.