

EVAPORATOR

EVAPORATOR INSPECTION

1. **CHECK EVAPORATOR FINS FOR BLOCKAGE**

If the fins are clogged, clean them with compressed air.


NOTICE: Never use water to clean the evaporator.

2. **CHECK FITTINGS FOR CRACKS OR SCRATCHES**

Repair as necessary.

EVAPORATOR REMOVAL AND INSTALLATION

(See page [AC-27](#))

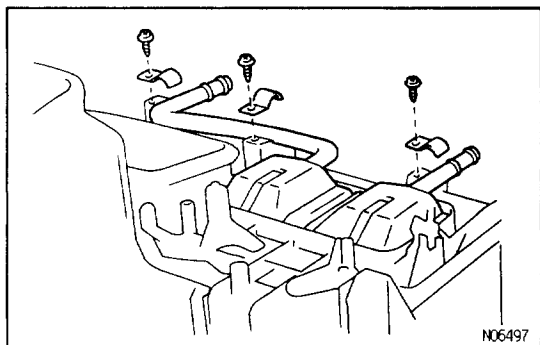

HEATER RADIATOR

HEATER RADIATOR REMOVAL

Installation is in the reverse order of removal.

1. **REMOVE HEATER UNIT**

(See page [AC-28](#))

2. **REMOVE HEATER RADIATOR**

(a) Remove the screws and plates.

(b) Pull the heater radiator out.

HEATER RADIATOR INSPECTION

INSPECT FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.