

HEATER UNIT

HEATER UNIT REMOVAL


Installation is in the reverse order of removal.

1. REMOVE COOLING UNIT

(See page [AC-26](#))


2. DRAIN ENGINE COOLANT FROM RADIATOR

REMOVAL HINT: It is not necessary to drain out all the coolant.

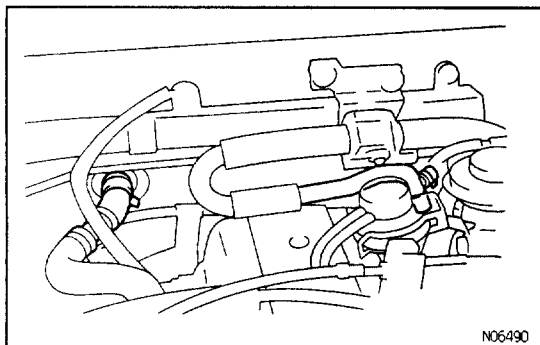

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.
- Disconnect the water hoses.

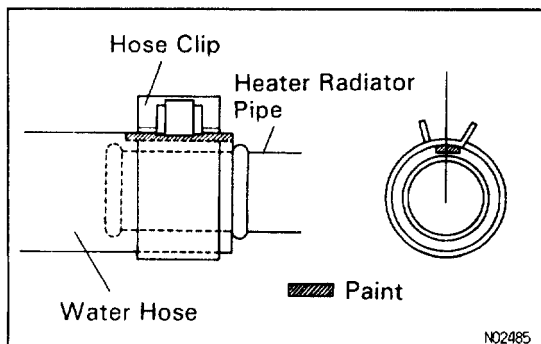


INSTALLATION HINT:

- Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
- Install the hose clip in a position, as shown to the left.


4. REMOVE PIPE GROMMETS

5. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-59](#))

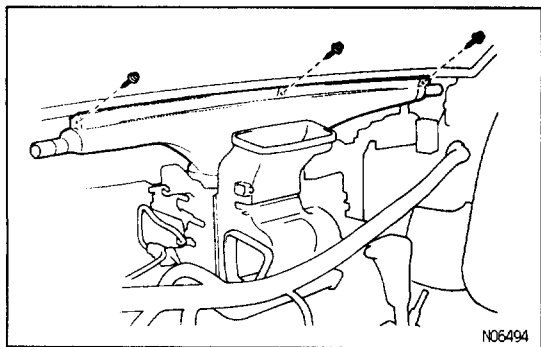

6. REMOVE HEATER UNIT

- Remove the 3 screws and defroster nozzle.

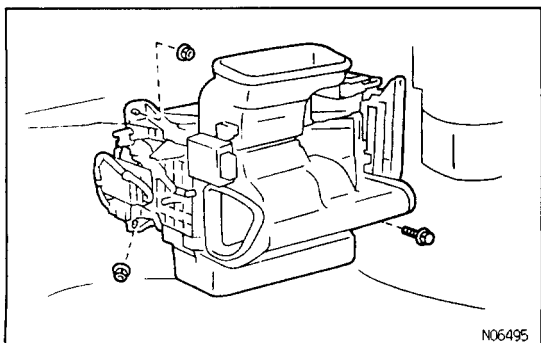

- Remove the 2 nuts and a screw, then remove heater unit.