


REAR BLOWER MOTOR BLOWER MOTOR REMOVAL


Installation is in the reverse order of removal.

1. REMOVE FRONT RH SEAT

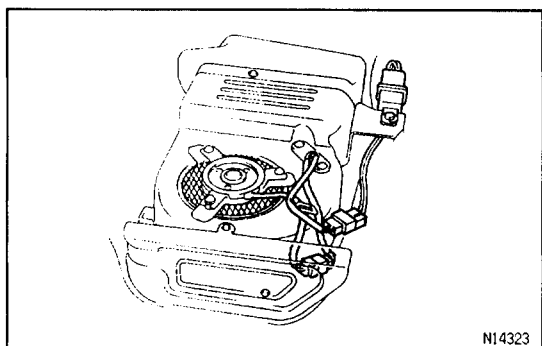


2. REMOVE BLOWER MOTOR


- (a) Disconnect the connectors from the blower motor and rear heater relay.
- (b) Remove the bolt and rear heater relay.

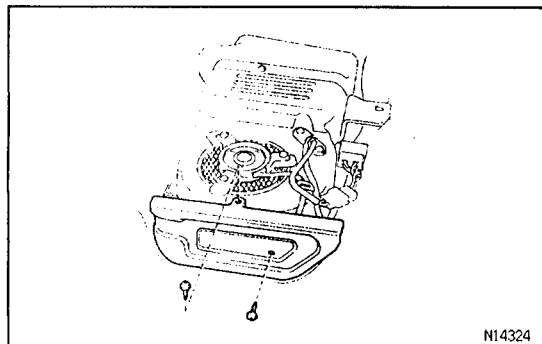

- (c) Remove the 2 screws and side cover.

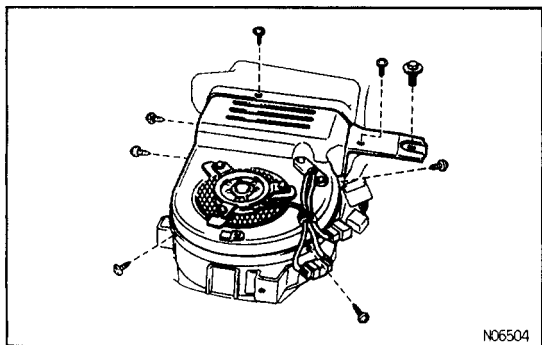

- (d) Remove the bolt and 7 screws, then remove the upper cover with the blower motor.
- (e) Remove the 3 screws and the blower motor.

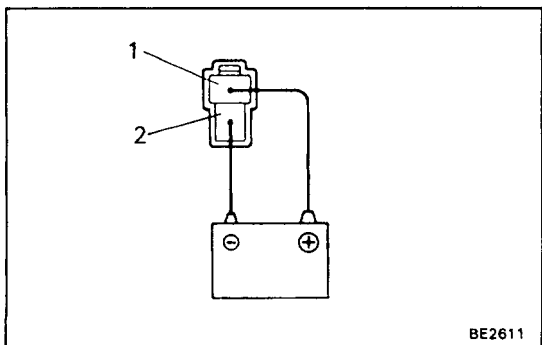

BLOWER MOTOR INSPECTION

INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operation is smooth.