


REAR HEATER BLOWER RESISTOR BLOWER RESISTOR REMOVAL

Installation is in the reverse order of removal.


1. REMOVE FRONT RH SEAT

(See page [BO-65](#))

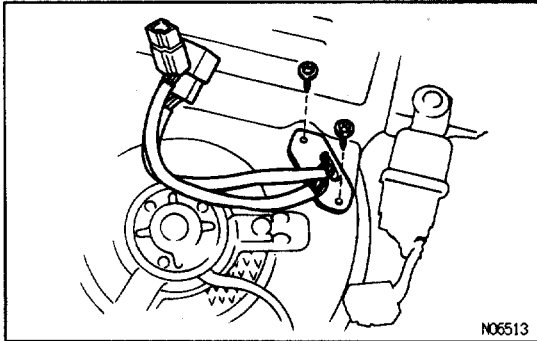

2. REMOVE BLOWER RESISTOR

- Disconnect the 2 connectors from the blower resistor.
- Remove the 2 screws and the blower resistor.

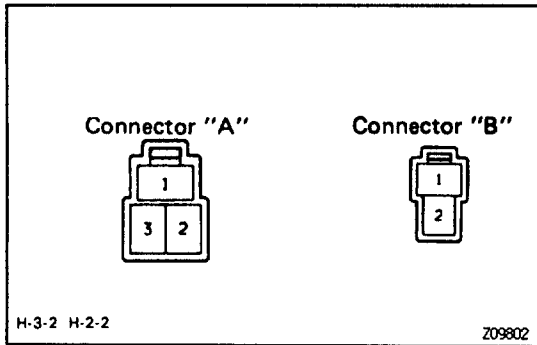

BLOWER RESISTOR INSPECTION

INSPECT BLOWER RESISTOR CONTINUITY

Condition	Tester connection to terminal number	Specified condition
Constant	A1 – B1 A2 – A3 – B2	Continuity

If continuity is not as specified, replace the blower resistor.