


REAR HEATER SWITCH

REAR HEATER SWITCH REMOVAL


Installation is in the reverse order of removal.

- 1. REMOVE INSTRUMENT CLUSTER FINISH CENTER PANEL WITH A/C CONTROL ASSEMBLY
- 2. REMOVE REAR HEATER SWITCH

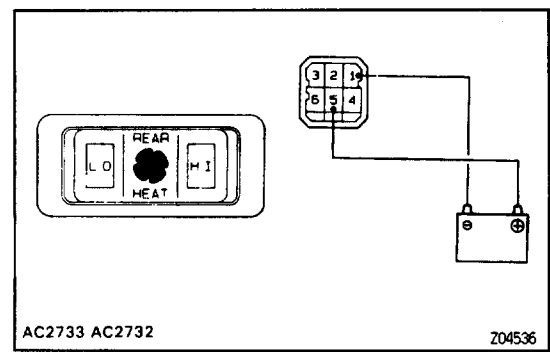

REAR HEATER SWITCH INSPECTION

- 1. INSPECT INDICATOR
 - (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.
 - (b) Push each of the rear heater switch knob in and check that their indicators lights up.If indicator operation is not as specified, replace the switch.

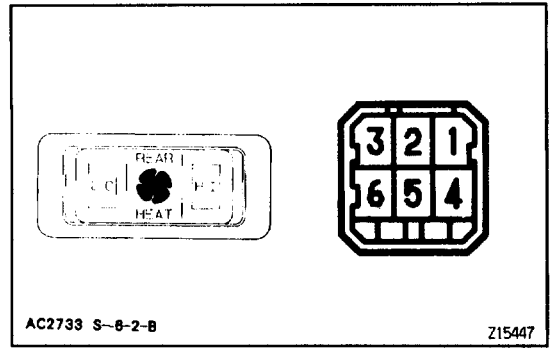

2. INSPECT SWITCH CONTINUITY

Switch position	Tester connection to terminal number	Specified condition
HI	1 – 4	Continuity
OFF	–	No Continuity
LO	1 – 2	Continuity
Illumination circuit	3 – 6	Continuity

If continuity is not as specified, replace the switch.