


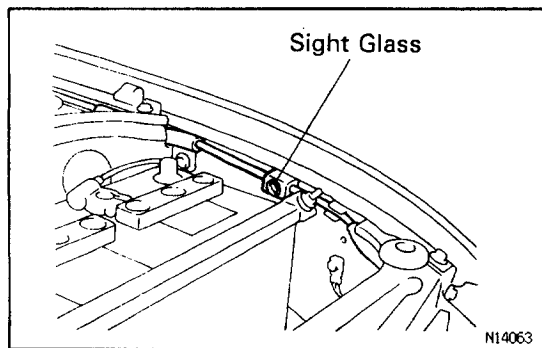

RECEIVER ON-VEHICLE INSPECTION

INSPECT FITTINGS FOR LEAKAGE

Using a gas leak tester, check for leakage.

If there is leakage, check the tightening torque at the joints.

RECEIVER REMOVAL

Installation is in the reverse order of removal.

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

INSTALLATION HINT: Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:


$850 \pm 50 \text{ g}$ ($29.98 \pm 1.76 \text{ oz.}$)

2. DISCONNECT 2 LIQUID TUBES FROM RECEIVER

Remove the 2 bolts and both tubes.

REMOVAL NOTICE: Cap the open fittings immediately to keep moisture out of the system.

INSTALLATION HINT: Lubricate 2 new O-rings with compressor oil and install the tubes.

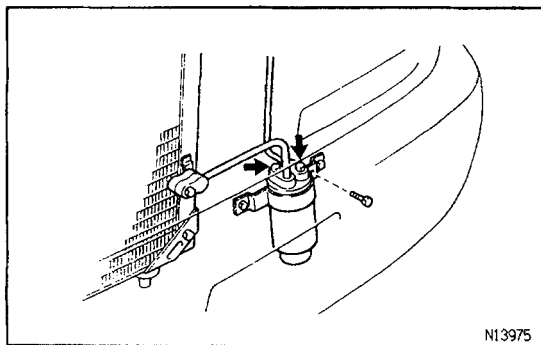

4. REMOVE RECEIVER FROM RECEIVER HOLDER

Remove the holder bolt and pull out the receiver.

INSTALLATION HINT: If receiver was replaced, add compressor oil to compressor.

Add 10 cc (0.35 fl.oz.)

Compressor oil:

ND-OIL 8 or equivalent