



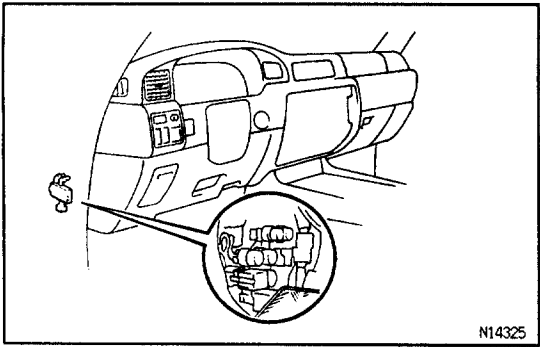

RELAY

RELAYS REMOVAL

Installation is in the reverse order of removal.
REMOVE RELAYS

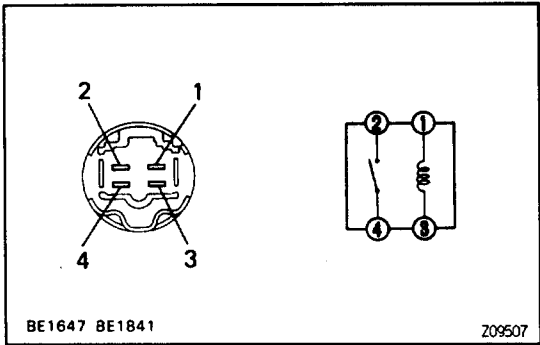


RELAYS INSPECTION

1. INSPECT ENGINE COOLANT TEMPERATURE CUT RELAY CONTINUITY

Condition	Tester connection to terminal number	Specified condition
Constant	1 - 3	Continuity
Apply B+ between terminals 1 and 3.	2 - 4	Continuity


If continuity is not as specified, replace the relay.

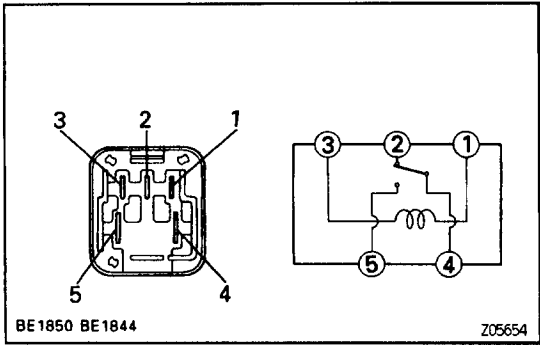

2. INSPECT HEATER MAIN RELAY CONTINUITY

Condition	Tester connection to terminal number	Specified condition
Constant	1 - 3 2 - 4	Continuity
Apply B+ between terminals 1 and 3.	4 - 5	Continuity


If continuity is not as specified, replace the relay.

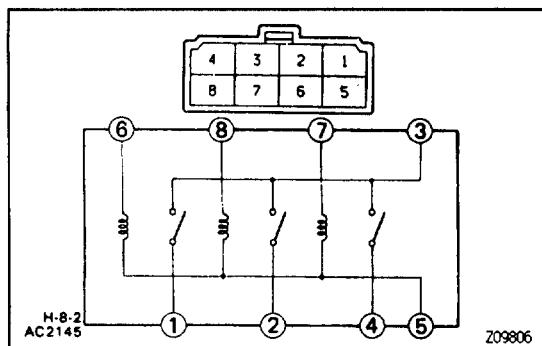

3. INSPECT BLOWER SPEED CONTROL RELAY CONTINUITY

Condition	Tester connection to terminal number	Specified condition
Constant	5 - 6 5 - 7	Continuity
Apply B+ between terminals 5 and 6.	1 - 3	Continuity
Apply B+ between terminals 5 and 7.	3 - 4	Continuity
Apply B+ between terminals 5 and 8.	2 - 3	Continuity

If continuity is not as specified, replace the relay.

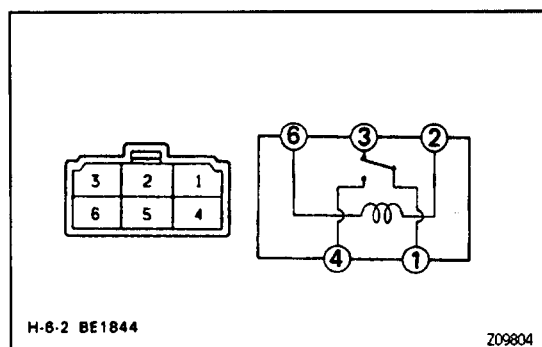

4. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection to terminal number	Specified condition
Constant	2 - 6 1 - 3	Continuity
Apply B+ between terminals 2 and 6.	1 - 4	Continuity

If continuity is not as specified, replace the relay.