


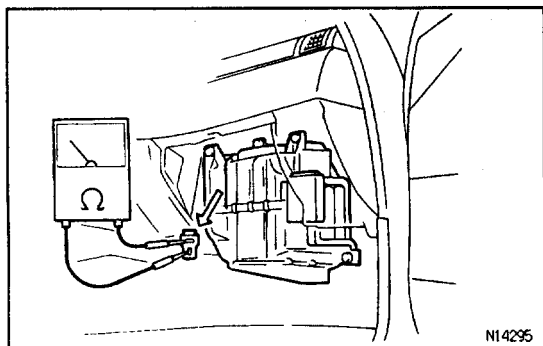

THERMISTOR ON-VEHICLE INSPECTION

1. **REMOVE GLOVE COMPARTMENT DOOR**
(See page [BO-59](#))

2. **INSPECT RESISTANCE OF THERMISTOR**

Measure the resistance between terminals.

Standard resistance:

1,500 Ω at 25° C (77° F)

If resistance is not as specified, replace the thermistor.



THERMISTOR REMOVAL AND INSTALLATION

(See page [AC-27](#))

THERMISTOR INSPECTION

INSPECT THERMISTOR RESISTANCE

- (a) Place the thermistor in cold water, while varying the temperature of the water, measure the resistance at the connector and at the same time, measure the temperature of the water with a thermometer.

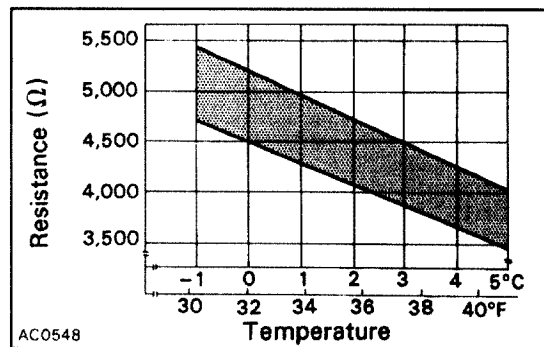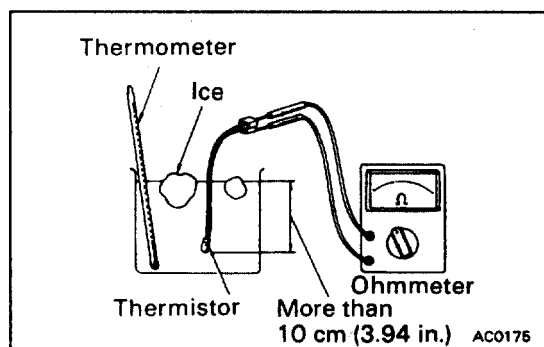

- (b) Compare the 2 readings on the chart.
If the resistance value is not as specified, replace the thermistor.