


WATER VALVE

WATER VALVE REMOVAL

Installation is in the reverse order of removal.

1. DRAIN ENGINE COOLANT FROM RADIATOR

REMOVAL HINT: It is not necessary to drain out all the coolant.

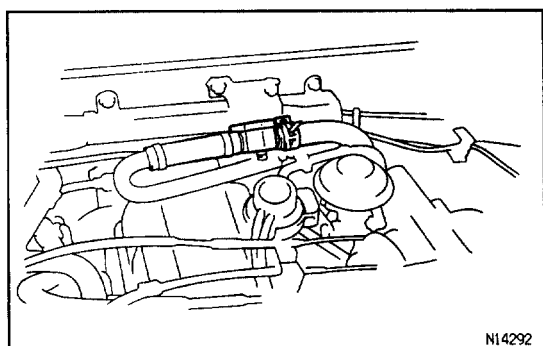

2. DISCONNECT WATER VALVE CONTROL CABLE

3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPE AND WATER VALVE

(a) Grip the claws of the hose clip with pliers and slide the clip along the hose to a place where it does not clamp the hose to the pipe.




(b) Disconnect the water hoses.

4. REMOVE WIRE HARNESS PROTECTOR

5. REMOVE WATER VALVE

INSTALLATION HINT:

- Push the water hose onto the heater radiator pipe as far as the ridge on the pipe.
- Install the hose clip in a position, as shown to the left.
- For installing the control cable, refer to "A/C CONTROL CABLES ADJUSTMENT".

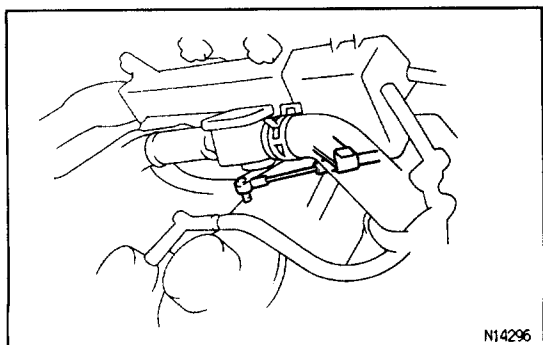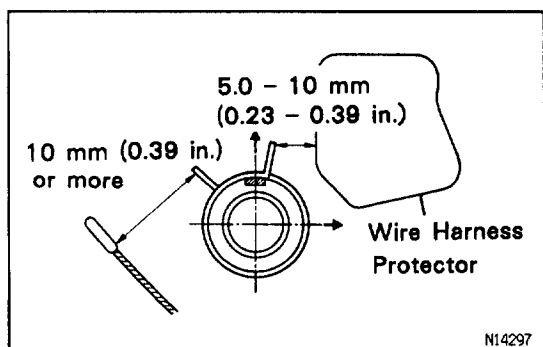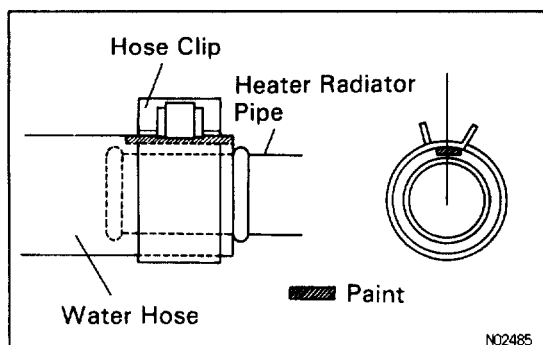

A/C CONTROL CABLE ADJUSTMENT

ADJUST WATER VALVE CONTROL CABLE

(a) Set the vehicle in following condition.

- Ignition switch on.
- Blower speed control switch on.
- Temperature control switch to "COOL" position.

(b) Set the water valve to "COOL" position, install the control cable and lock the clamp.