
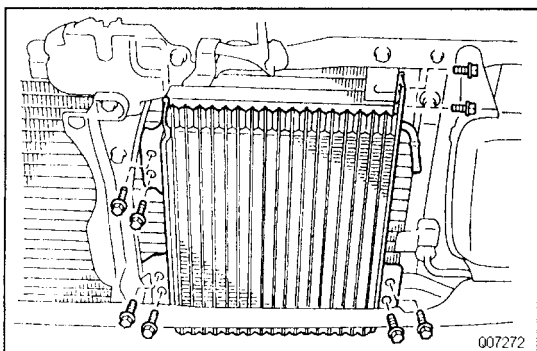
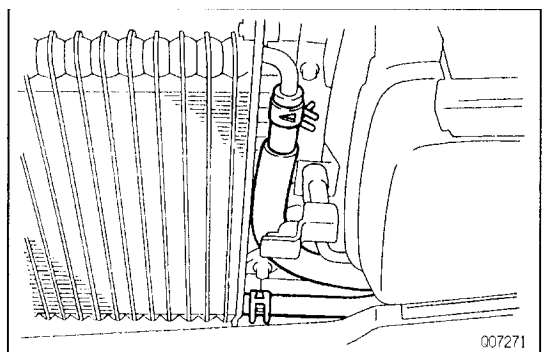
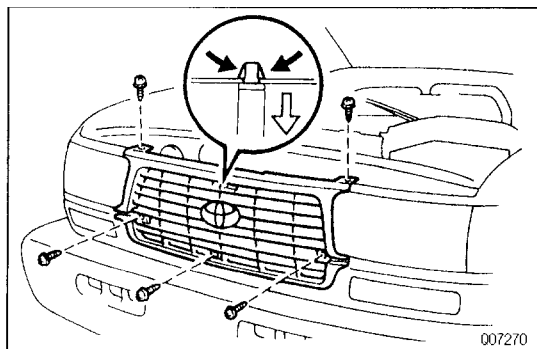


AIR COOLED OIL COOLER COMPONENTS

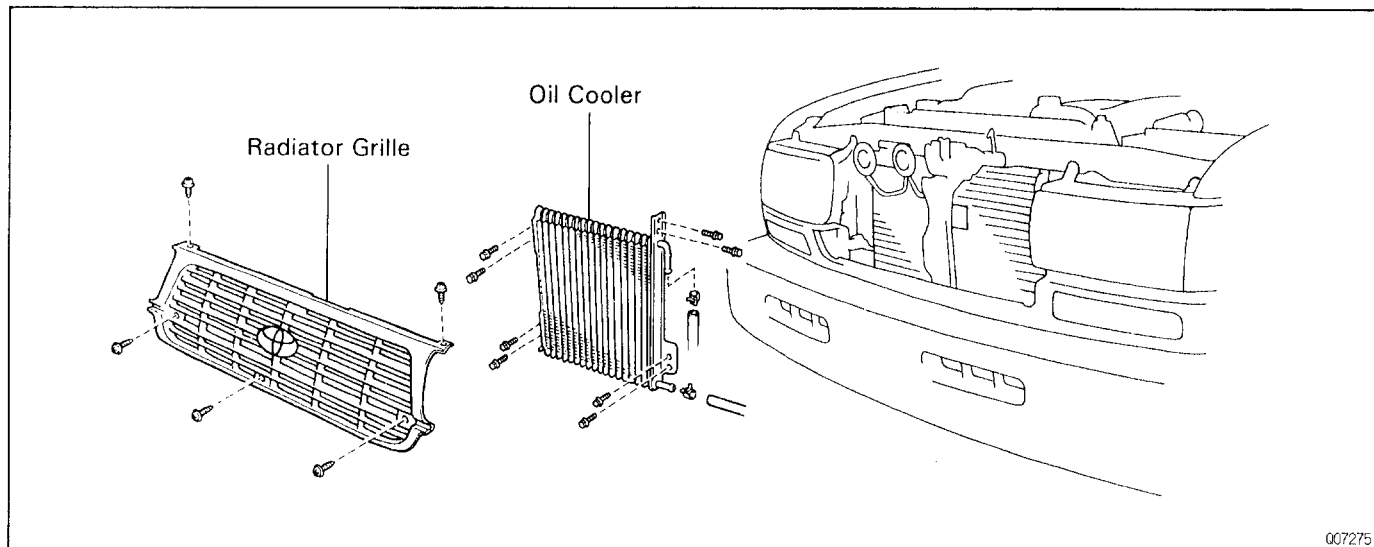

OIL COOLER REPLACEMENT

Installation is in the reverse order of removal.

INSTALLATION HINT: After installation, check fluid level.

(See page [AT-50](#))

1. REMOVE RADIATOR GRILLE

- (a) Remove the 5 screws.
- (b) Using a screwdriver, disconnect the clip.
REMOVAL HINT: Tape the screwdriver tip before use.
- (c) Remove the radiator grille.

2. REMOVE OIL COOLER

- (a) Loosen the 2 clips and disconnect the 2 hoses.

- (b) Remove the 8 bolts and oil cooler.
Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)