


BACK-UP LIGHT SWITCH PARTS LOCATION

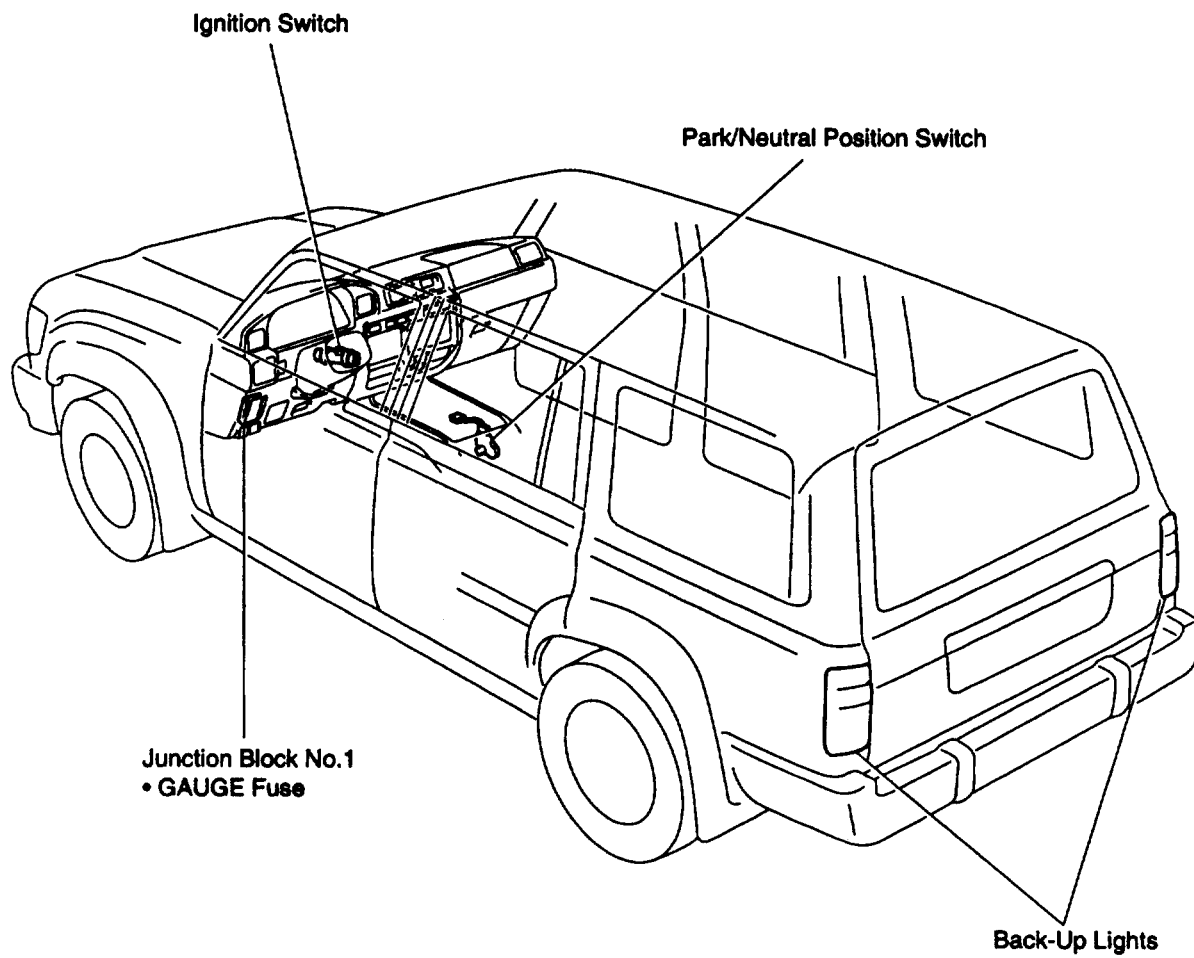

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
Back-up light does not light up.	1. GAUGE Fuse	(BE-5)
	2. Ignition Switch	(BE-7)
	3. Park/Neutral Position Switch	(AT-82)
	4. Wire Harness	
	5. Bulb	
Back-up light remains always on.	1. Wire Harness	
Only one light does not light up.	1. Wire Harness	
	2. Bulb	

PARK/NEUTRAL POSITION SWITCH INSPECTION

INSPECT SWITCH

See page [AT-82](#)