


## IGNITION SWITCH PARTS LOCATION

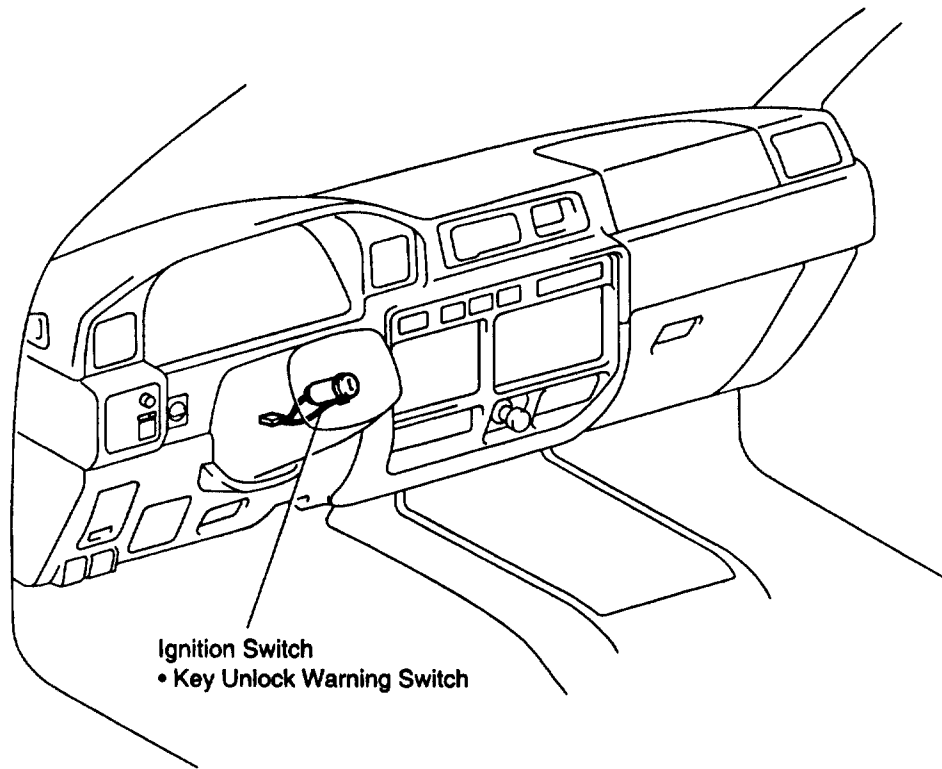


Y N14298


## IGNITION SWITCH INSPECTION

### INSPECT SWITCH CONTINUITY

| Switch position | Tester connection to terminal number | Specified condition |
|-----------------|--------------------------------------|---------------------|
| LOCK            | --                                   | No continuity       |
| ACC             | 7-9                                  | Continuity          |
| ON              | 3-4<br>6-7-9                         | Continuity          |
| START           | 2-3-4<br>6-9-10                      | Continuity          |

If continuity is not as specified, replace the switch.

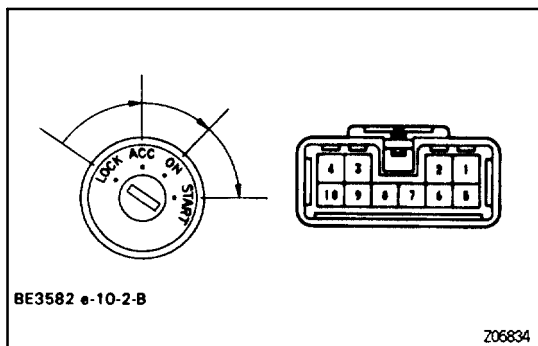

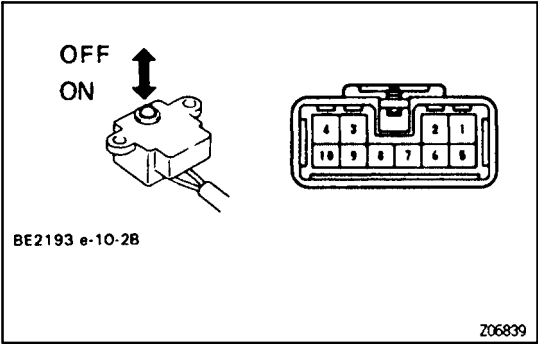

# KEY UNLOCK WARNING SWITCH INSPECTION

## INSPECT SWITCH CONTINUITY

| Condition                   | Tester connection to terminal number | Specified condition |
|-----------------------------|--------------------------------------|---------------------|
| Switch OFF<br>(Key removed) | --                                   | No continuity       |
| Switch ON<br>(Key set)      | 1-5                                  | Continuity          |

If continuity is not as specified, replace the switch.

# DOOR COURTESY SWITCH INSPECTION

## INSPECT SWITCH

See page [BE-20](#)

# SEAT BELT WARNING RELAY INSPECTION

## INSPECT RELAY

See page [BE-46](#)