


INTERIOR LIGHT SYSTEM PARTS LOCATION

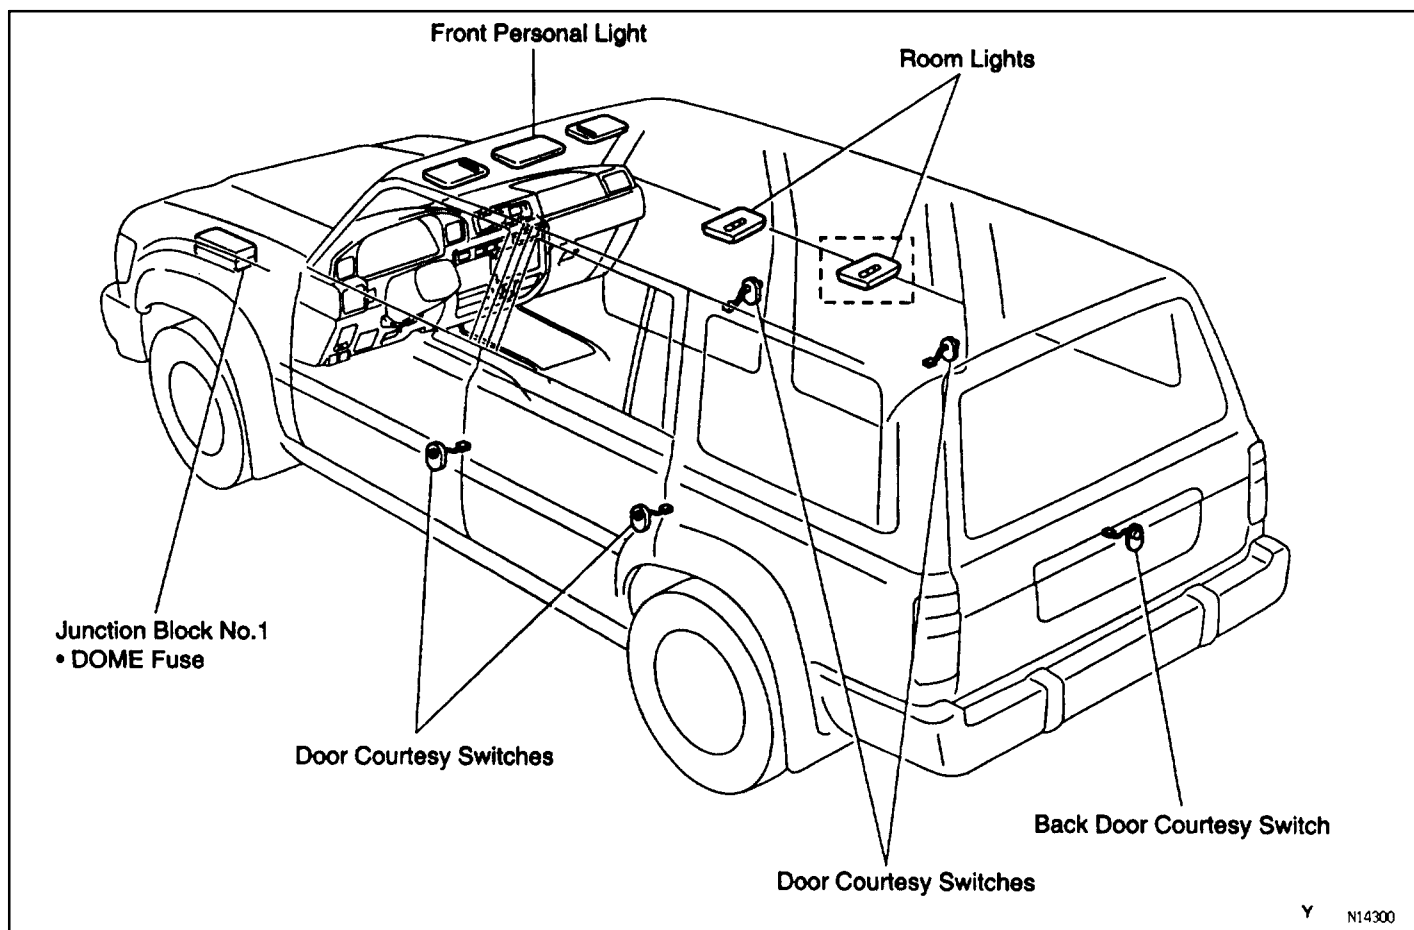


Y N14300

TROUBLESHOOTING

The table below will be useful for you in troubleshooting these electrical problems. The most likely causes of the malfunction are shown in the order of their probability. Inspect each part in the order shown, and replace the part when it is found to be faulty.

Trouble	Parts name	(See page)
Room light does not light up.	1. DOME Fuse	(BE-5)
	2. Door Courtesy Switch	(BE-20)
	3. Front Personal Light	(BE-20)
	4. Room Light Assembly	(BE-20)
	5. Wire Harness	
	6. Bulb	
Room light remains always on.	1. Door Courtesy Switch	(BE-20)
	2. Wire Harness	

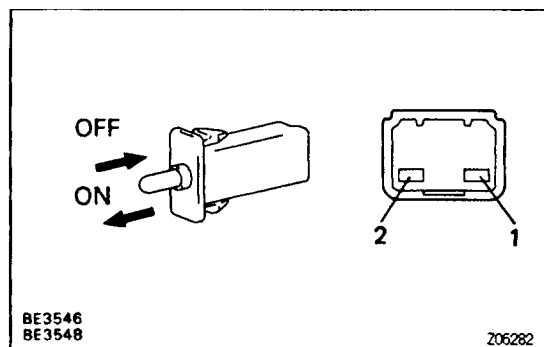


GLOVE BOX LIGHT SWITCH INSPECTION

INSPECT SWITCH CONTINUITY

Switch position	Tester connection to terminal number	Specified condition
OFF (Closed)	--	No continuity
ON (Opened)	1 - 2	Continuity

If continuity is not as specified, replace the switch.

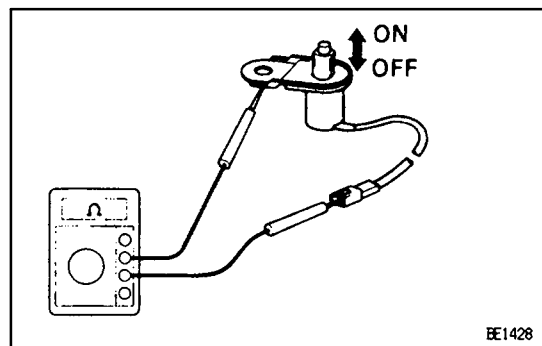


DOOR COURTESY SWITCH INSPECTION

INSPECT SWITCH

- Check that there is continuity between terminal and the switch body with the switch ON (switch pin released: opened door).
- Check that there is no continuity between terminal and the switch body with the switch OFF (switch pin pushed in: closed door).

If operation is not as specified, replace the switch.

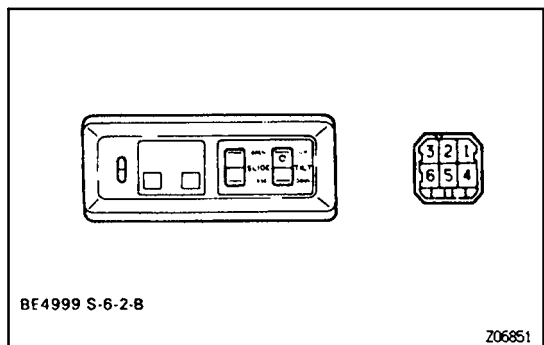


FRONT PERSONAL LIGHT INSPECTION

INSPECT LIGHT CONTINUITY

w/ Sliding Roof:

Switch position	Tester connection to terminal number	Specified condition
OFF	--	No continuity
ON	5 - 6	Continuity


If continuity is not as specified, replace the personal light.

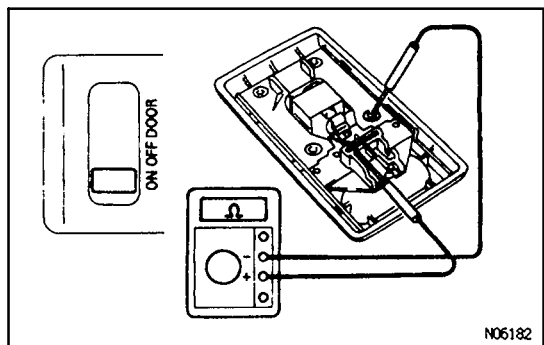

ROOM LIGHT INSPECTION

INSPECT LIGHT ASSEMBLY

- Disconnect the connector from room light assembly.
- Turn the room light switch ON, and check that there is continuity between terminal 2 and body ground.

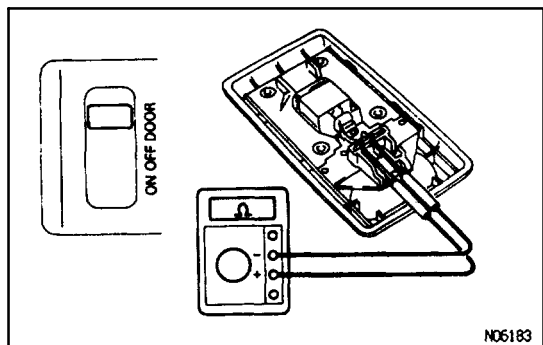

- (c) Turn the room light switch DOOR, and check that there is continuity between terminal 1 and 2.
If operation is not as specified, replace the switch.