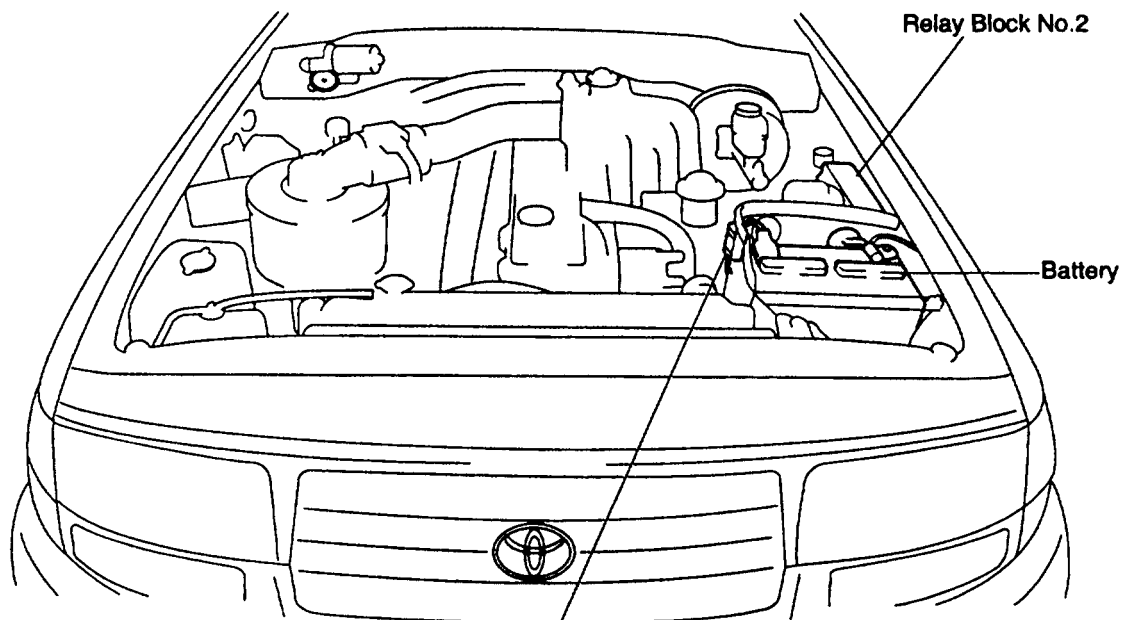
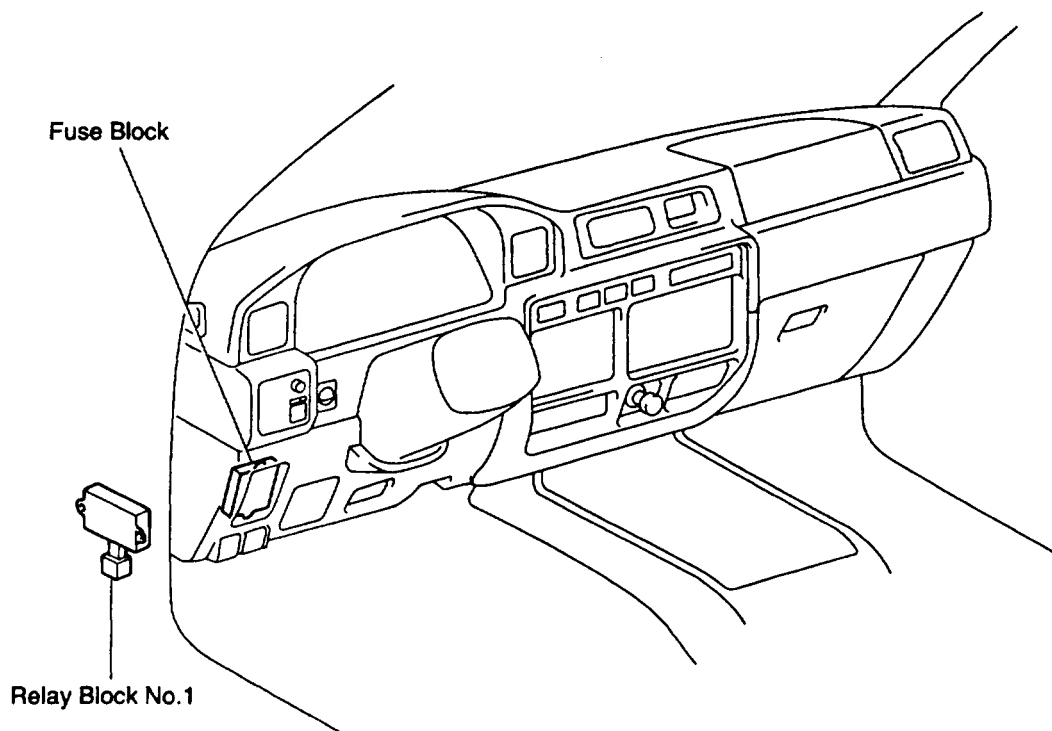


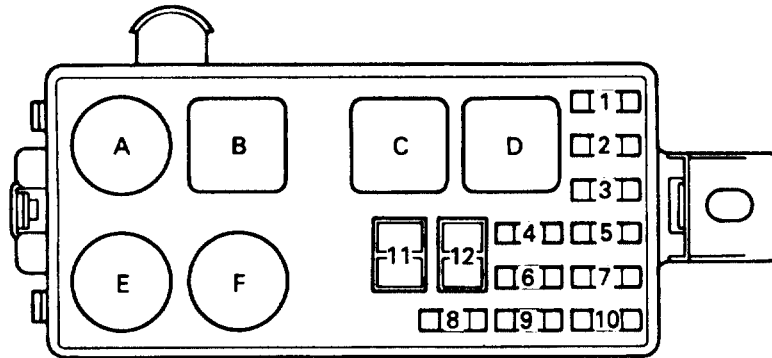
POWER SOURCE PARTS LOCATION



Fusible Link
• MAIN
• AM1
• AM2



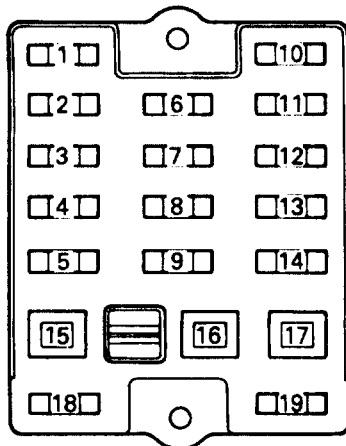
N14193
N14194

Relay Block No.2 (Engine Compartment)**Fuse and High Current Fuses**

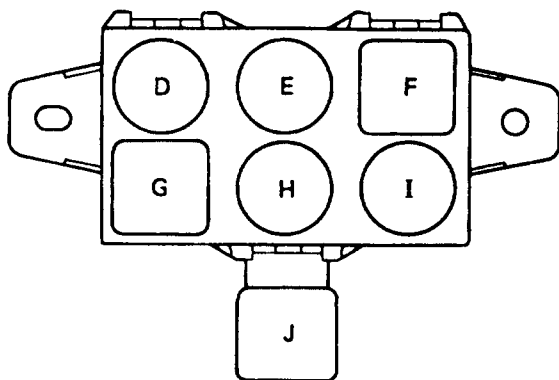
1. HEAD (RH)	15A	7. HAZ-HORN	15A
2. HEAD (LH)	15A	8. -	
3. -		9. CDS FAN	20A
4. CHARGE	7.5A	10. DOME	10A
5. -		11. AM1	50A
6. EFI	15A	12. ABS	60A

Relays

A. EFI Main Relay
B. -
C. Headlight Control Relay
D. -
E. Horn Relay
F. -

Fuse Block (Instrument Panel)**Fuse and Medium Current Fuse**

1. CIG	15A	10. ECU-B	10A
2. TAIL	15A	11. REAR-HTR	20A
3. OBD	15A	12. IGN	7.5A
4. STOP	10A	13. A/C	10A
5. DEFOG	20A	14. DIFF	30A
6. WIPER	20A	15. -	
7. GAUGE	10A	16. HEATER	40A
8. TURN	7.5A	17. POWER	30A
9. ECU-IG	15A	18. Spear	7.5A
		19. Spear	7.5A

Relay Block No. 1 (Cowl Side)**Relay**

- A. -
- B. -
- C. -
- D. Defogger Relay
- E. Power Main Relay
- F. Turn Signal Flasher
- G. Heater Relay
- H. Taillight Control Relay
- I. -
- J. Circuit Opening Relay