


BACK DOOR GLASS COMPONENTS

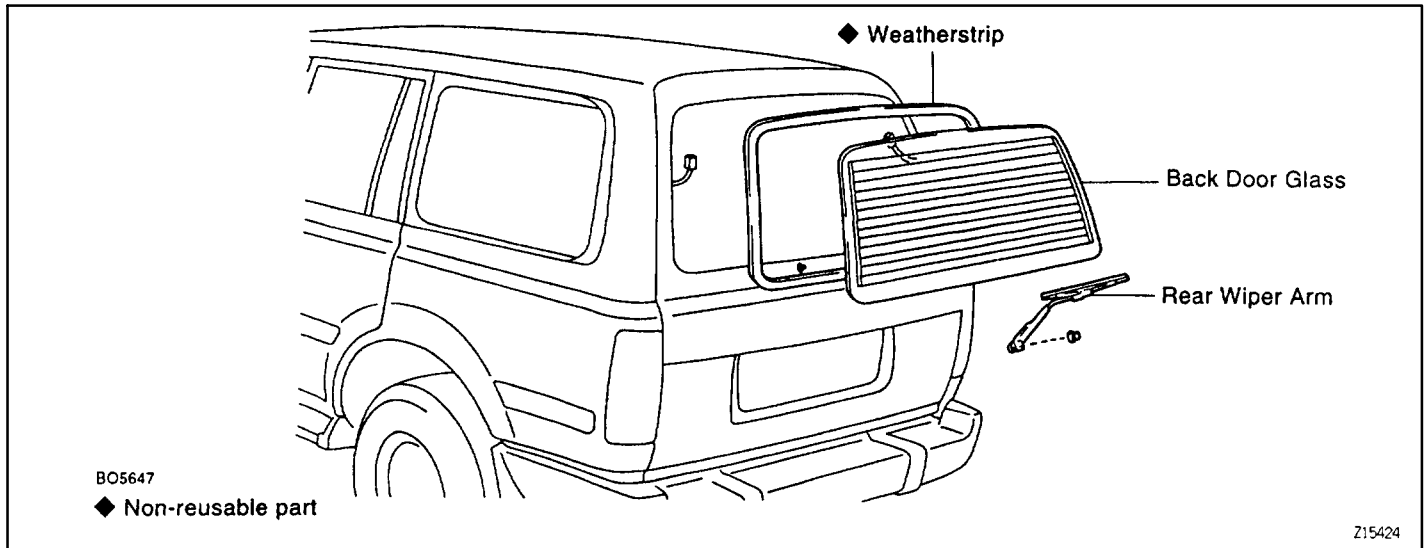

BACK DOOR GLASS REMOVAL

1. **REMOVE WIPER ARM**
2. **REMOVE DEFOGGER CONNECTOR**
Disconnect the connector from the glass.
3. **REMOVE BACK DOOR GLASS**
HINT: Remove the glass in the same manner as the windshield.

BACK DOOR GLASS INSTALLATION

HINT: Install the glass and weatherstrip in the same manner as the windshield.

1. **CLEAN BODY AND GLASS**
2. **INSTALL WEATHERSTRIP ON GLASS**
3. **INSTALL BACK DOOR GLASS**
4. **FIX IN GLASS**
5. **APPLY ADHESIVE**
Part No. 08833-00030 or equivalent
6. **CLEAN SEALER SURFACE**
7. **INSPECT FOR LEAKS AND REPAIR**
Part No. 08833-00030 or equivalent
8. **CONNECT DEFOGGER WIRE CONNECTORS**
Connect the connector to the glass.
9. **CONNECT WIPER ARM**
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)