
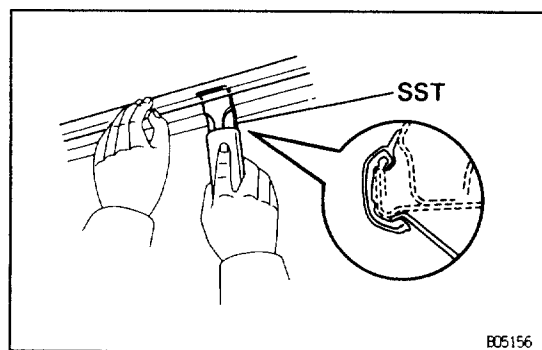



BODY OUTSIDE MOULDING COMPONENTS

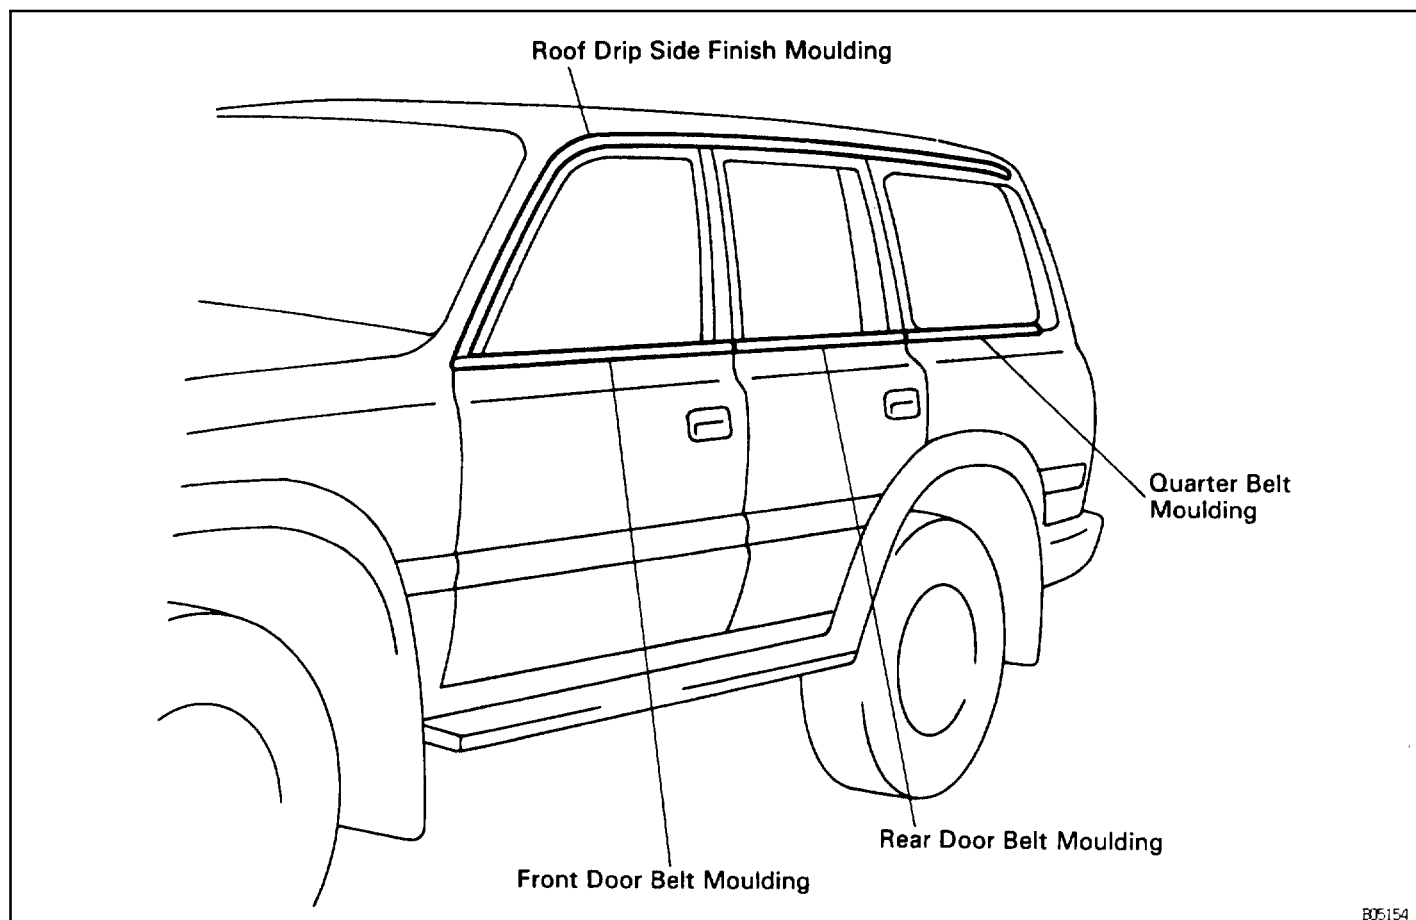

ROOF DRIP SIDE FINISH MOULDING REMOVAL

REMOVE ROOF DRIP MOULDING


Using SST, pull off the roof drip moulding from front ends.
SST 09806-30010

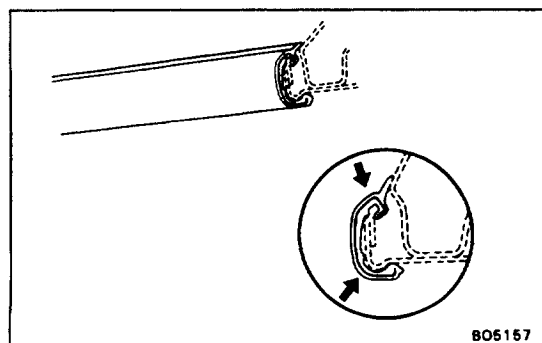

ROOF DRIP SIDE FINISH MOULDING INSTALLATION

INSTALL ROOF DRIP MOULDING

Attach the upper edge of the moulding to the body flange. Tap on the moulding by hand

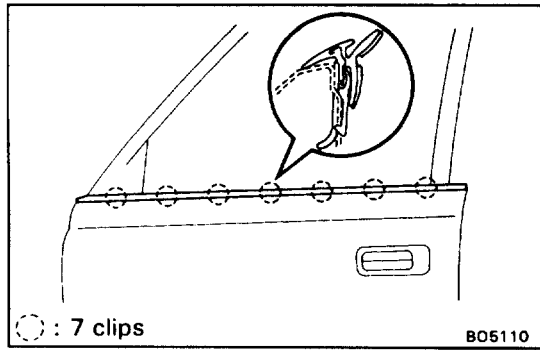


DOOR BELT MOULDING REMOVAL

Installation is in the reverse order of removal.


1. REMOVE FRONT DOOR BELT MOULDING

Pry out the clip from the edge of the panel, and remove the moulding.

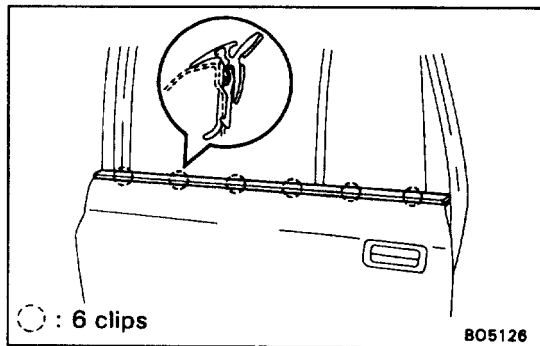

2. REMOVE REAR DOOR BELT MOULDING

Pry out the clip from the edge of the panel, and remove the moulding.

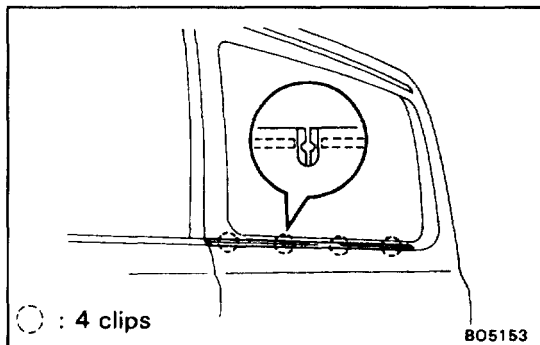

3. REMOVE QUARTER BELT MOULDING

Pry out the clips from the edge of the panel, and remove the moulding.