



FRONT DOOR COMPONENTS

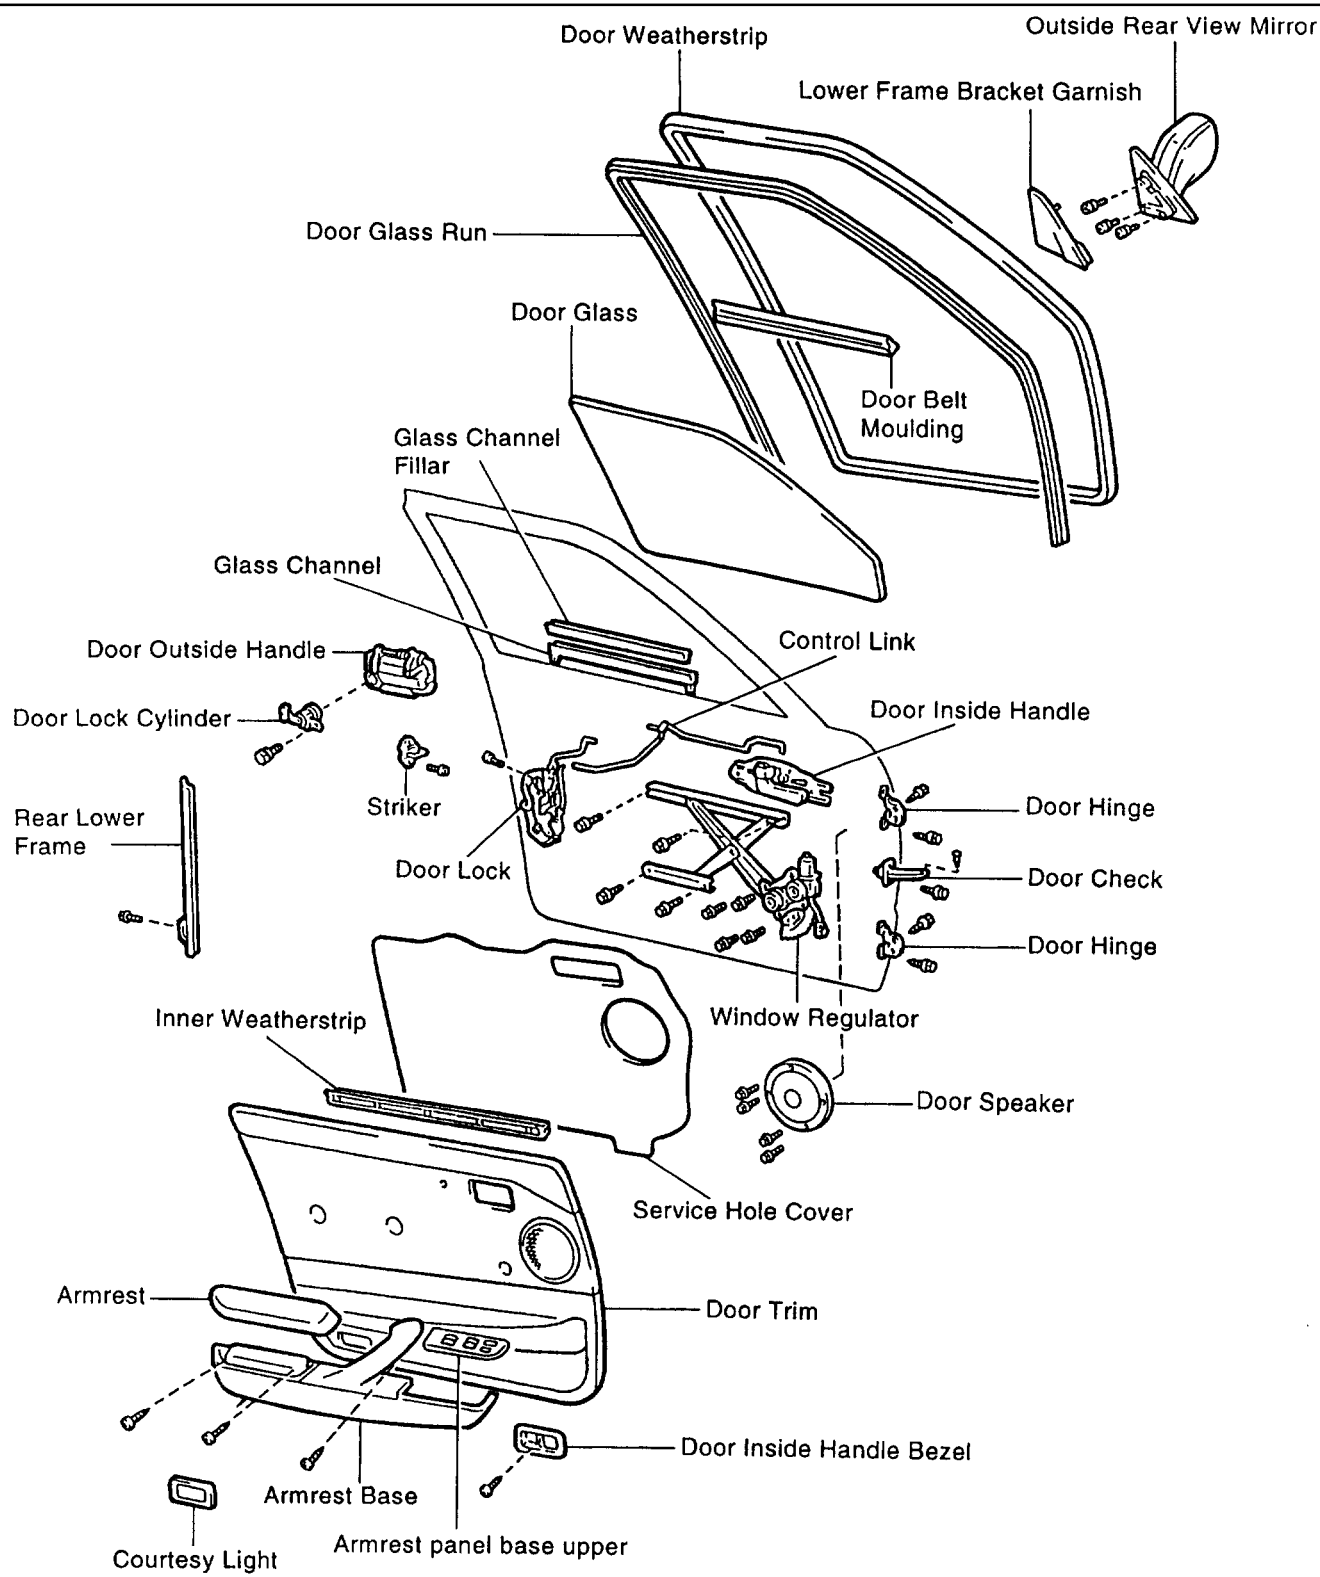

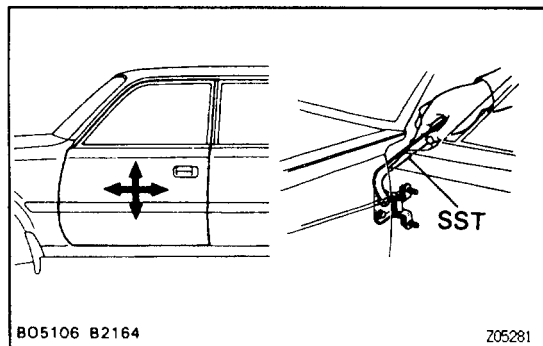


FRONT DOOR ADJUSTMENT

1. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

Using SST, adjust the door by loosening the body side hinge bolts.

SST 09812-00010


Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)

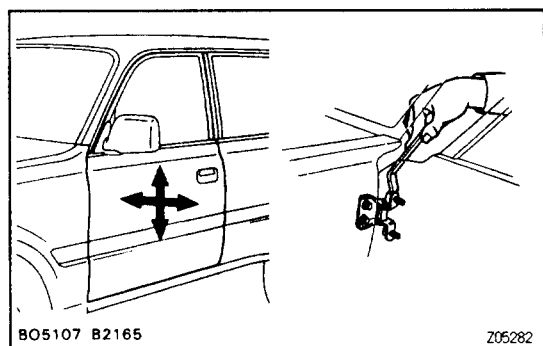

2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS


Loosen the door side hinge bolts to adjust.

Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)

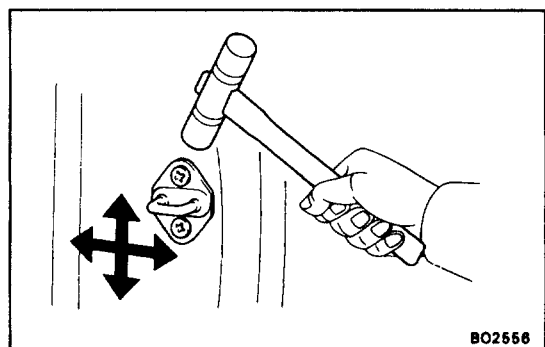

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Loosen the striker mounting screws to adjust.
- Using a plastic hammer, tap the striker to adjust it.

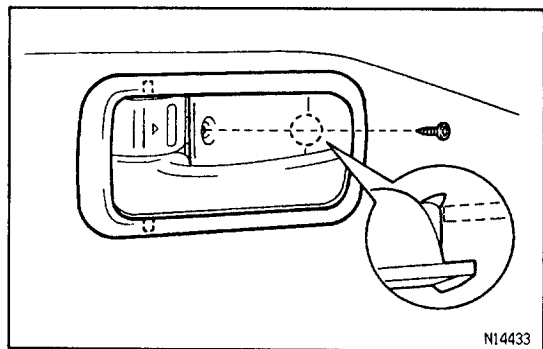


FRONT DOOR DISASSEMBLY


Assembly is in the reverse order of disassembly.

1. REMOVE THESE PARTS:

HINT: Tape a screwdriver tip before use.

- Door inside handle bezel
- Armrest
- Armrest panel base upper
- Courtesy light
- Lower frame bracket garnish

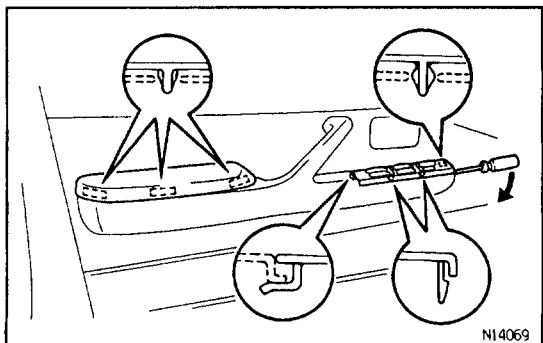


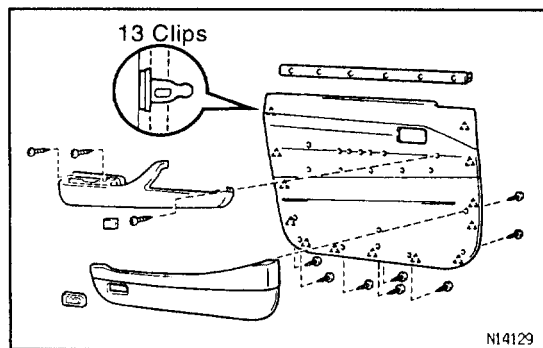

2. REMOVE DOOR TRIM



HINT: Tape a screwdriver tip before use.

- Remove the 3 screws from the door trim.
- Using the screwdriver, remove the clip and remove the trim by pulling all of the trim up.
- Remove the 11 screws and armrest base from the door trim.
- Remove the inner weatherstrip from the door trim.
- Remove the 8 screws and door pocket from the door trim.

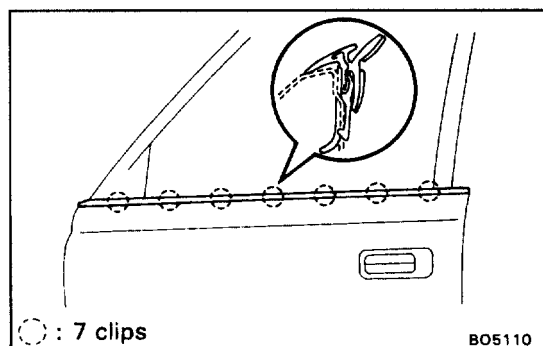


3. REMOVE THESE PARTS:


- Door belt moulding
HINT: Pry out the clip from the edge of the panel, and remove the moulding.
- Door weatherstrip
NOTICE: Do not pull strongly on the weatherstrip as it may tear.
- Door inside handle
- Door lock control relay
- Service hole cover
ASSEMBLY NOTICE: Do not block the trim clip sealing with the tape.
- Outside rear view mirror

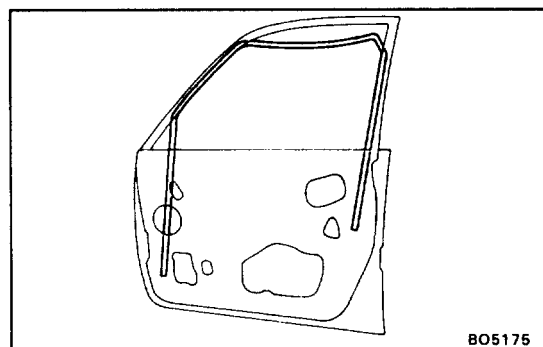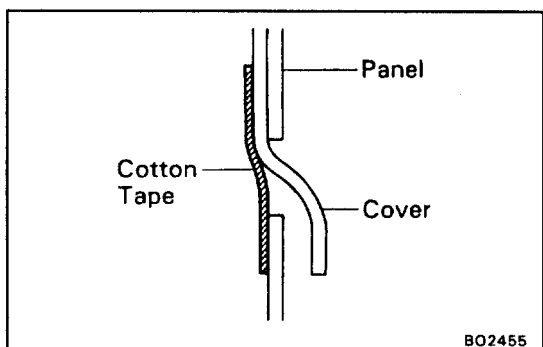


- Door glass run
- Rear lower frame

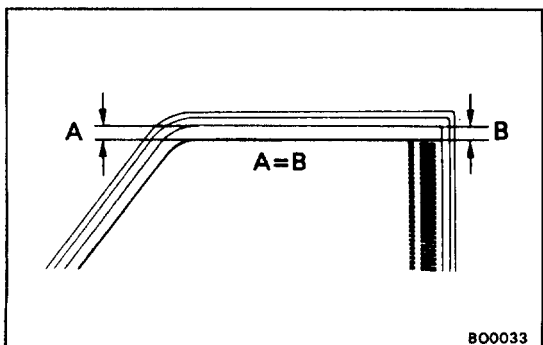

ASSEMBLY HINT: Adjust the equalizer arm up to down and tighten if where dimensions A and B, as shown are equal.

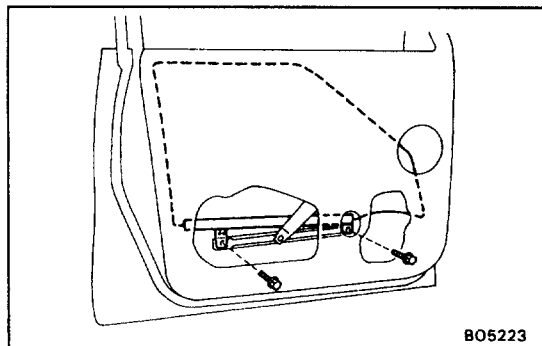


(i) Door glass

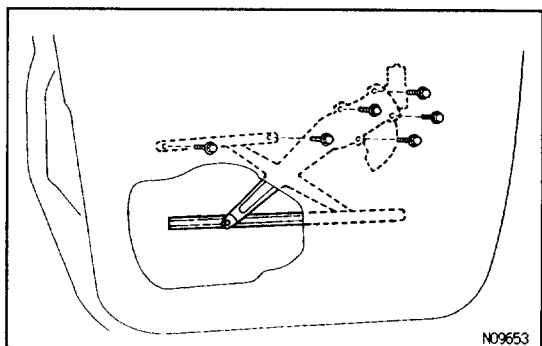

(j) Window regulator


Torque: 5.0 N·m (50 kgf·cm, 43 in.·lbf)

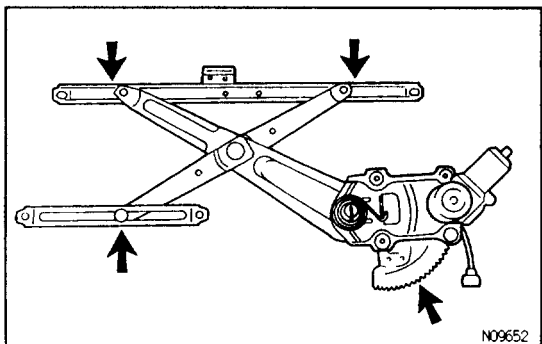

ASSEMBLY HINT: Apply MP grease to the sliding surface and gears of the window regulator.

ASSEMBLY NOTICE: Do not apply grease to the spring.

(k) Locking and opening control link

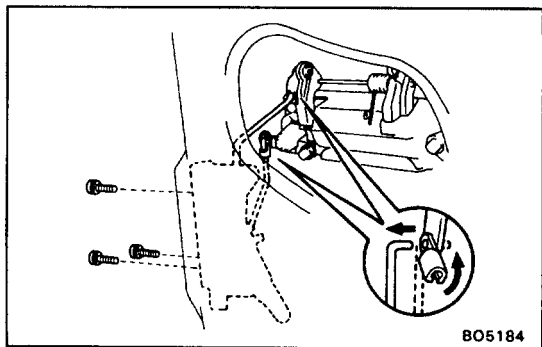


(l) Door lock

ASSEMBLY HINT: Apply adhesive to the 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent.

Torque: 5.0 N·m (50 kgf·cm, 43 in.·lbf)

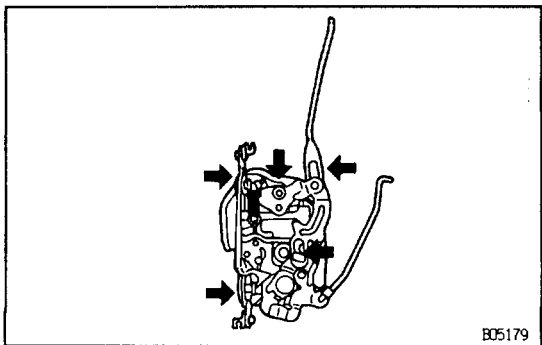


ASSEMBLY HINT: Apply MP grease to the sliding surface of the door lock.

(m) Door outside handle

(n) Door lock cylinder

(o) Door speaker

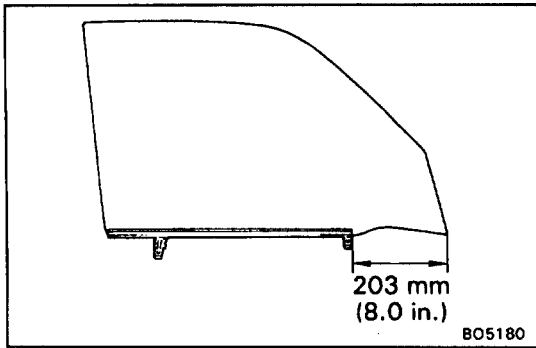

FRONT DOOR GLASS REPLACEMENT

1. REMOVE GLASS CHANNEL WITH SCREWDRIVER OR LIKE OBJECT
2. APPLY SOAPY WATER TO INSIDE OF WEATHERSTRIP
3. INSTALL CHANNEL BY TAPPING IT WITH PLASTIC HAMMER