
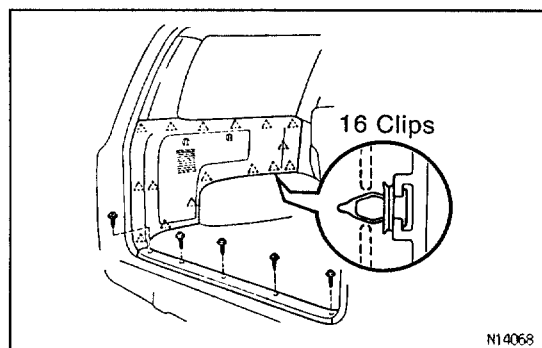



QUARTER WINDOW GLASS COMPONENTS

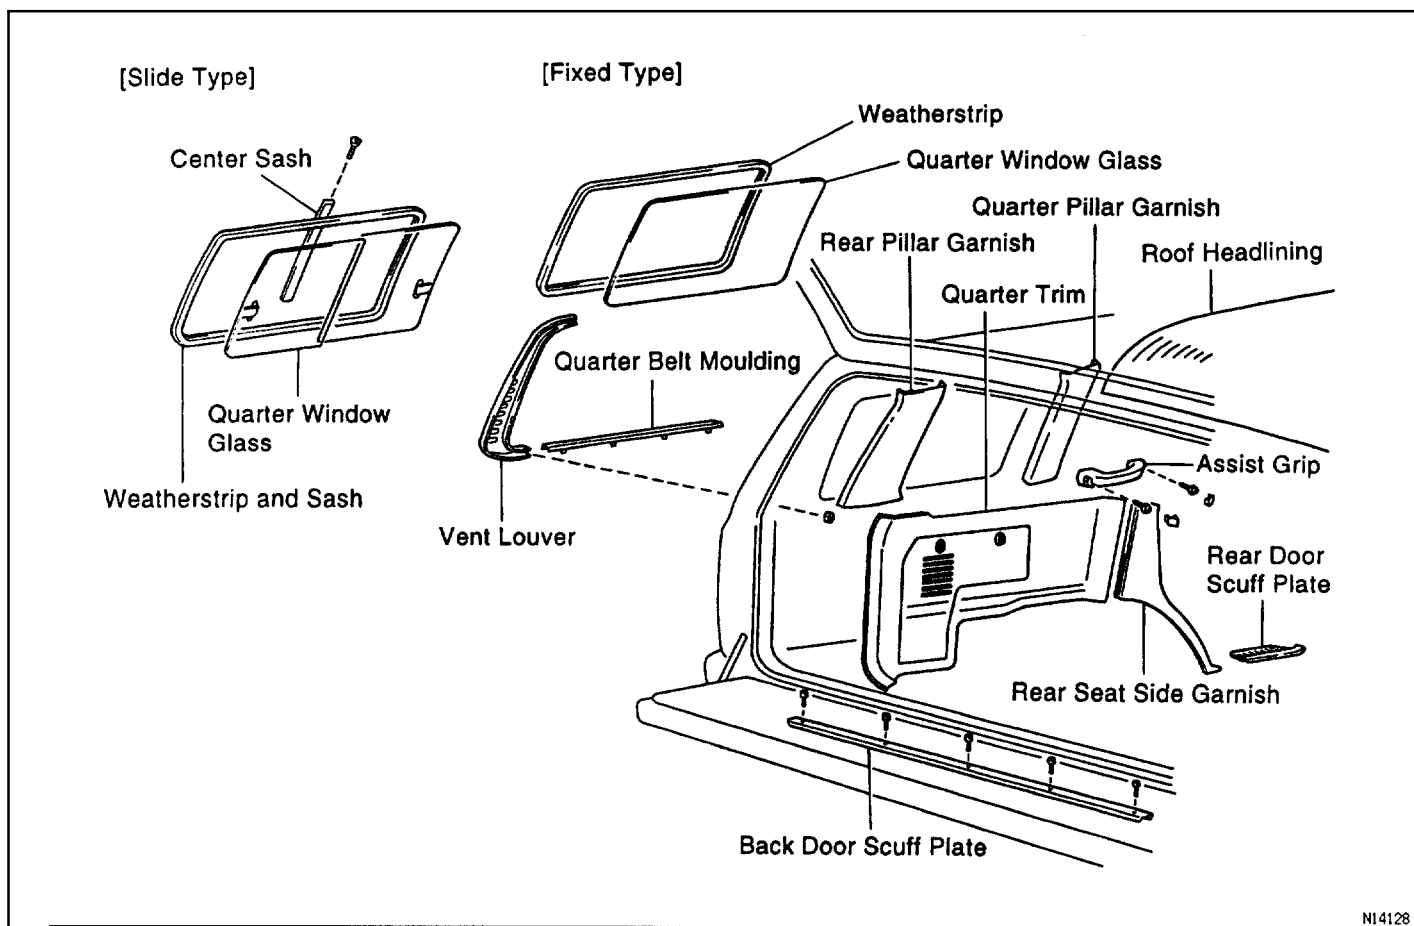


QUARTER WINDOW GLASS REMOVAL

1. REMOVE THESE PARTS:


- (a) w/No.2 Rear Seat
No.2 rear seat
- (b) Back door scuff plate
- (c) Quarter trim
- (d) Rear seat side garnish
- (e) Rear door scuff plate

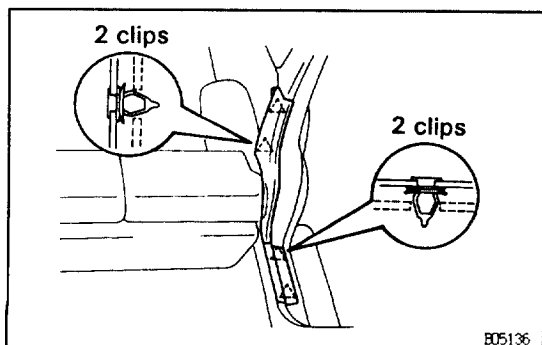

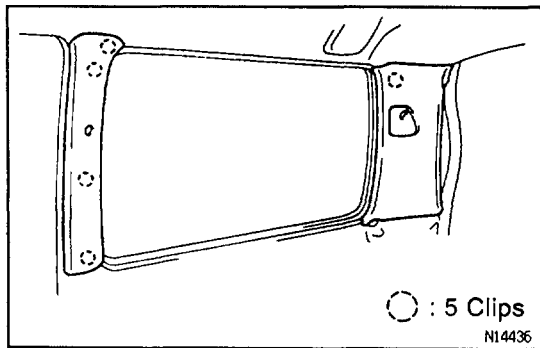


- (f) Quarter pillar garnish
- (g) Rear pillar garnish
- (h) Assist grips

2. LOOSEN ROOF HEADLINING

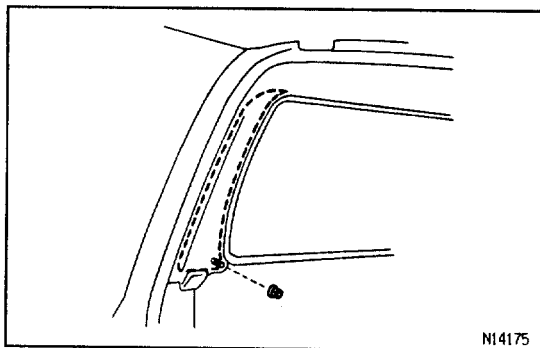

3. REMOVE VENT LOUVER AND QUARTER BELT MOULDING


- (a) Remove the nut from the vent louver.

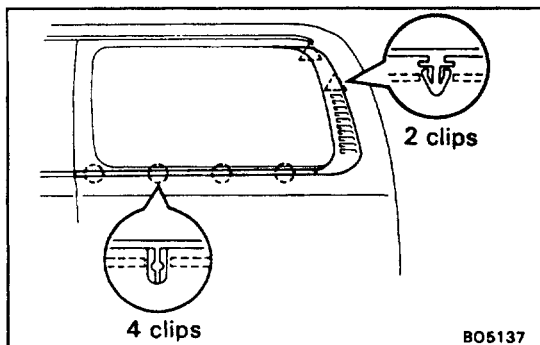

- (b) Insert the screwdriver between the retainers and body to pry it loose.

HINT: Tape a screwdriver tip before use.

- (c) Pull out the vent louver.
- (d) Pull out the clips from the edge of the panel, and remove the moulding.

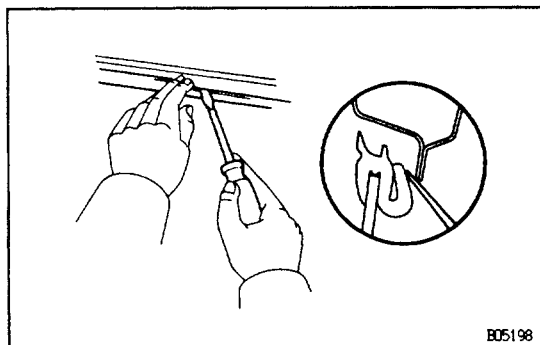


4. REMOVE QUARTER WINDOW GLASS


If reusing the weatherstrip:

- (a) Using a screwdriver loosen the weatherstrip from the body.
NOTICE: Be careful not to damage the body.
- (b) Pry the lip of the weatherstrip outward from the interior part of the body flange.
- (c) Pull the glass outwards and remove it with the weatherstrip.

If using a new weatherstrip:

- (a) From outside of the vehicle, cut off the weatherstrip lip with a knife.
NOTICE: Do not damage the body and the glass.
- (b) Push the glass outwards and remove the glass.
- (c) Remove the remaining weatherstrip.


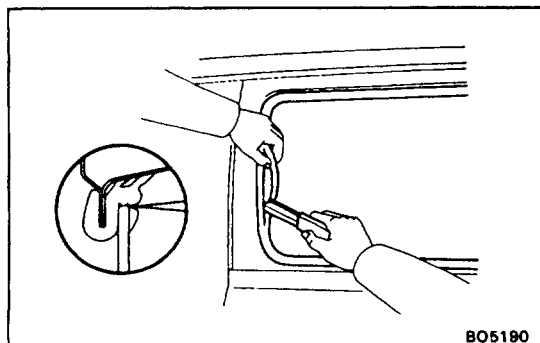


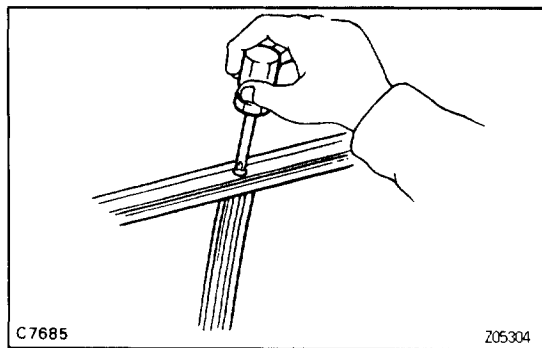

QUARTER WINDOW GLASS DISASSEMBLY

Slide Type:



1. **REMOVE CENTER SASH**
Remove the screw and the weatherstrip.
2. **REMOVE QUARTER WINDOW GLASS**
Pull up the sash and remove the 2 glasses.
3. **REMOVE QUARTER WINDOW GLASS RUN FROM SASH**
4. **REMOVE QUARTER WINDOW WEATHERSTRIP FROM SASH**

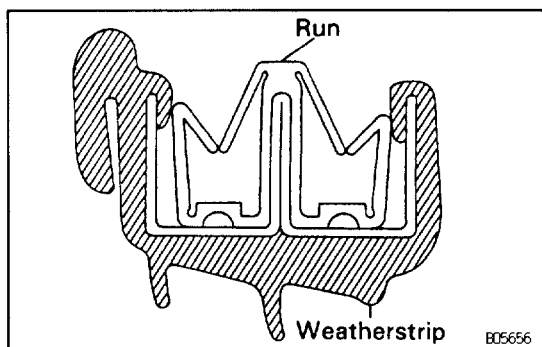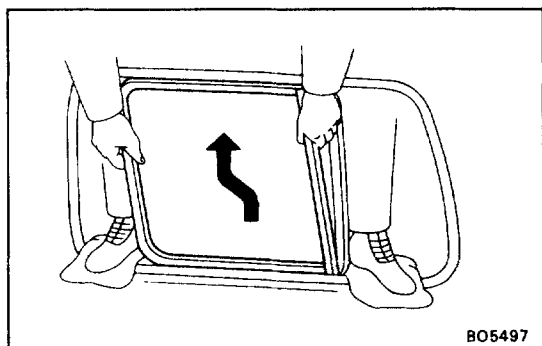

QUARTER WINDOW GLASS ASSEMBLY


Slide Type:

1. **INSTALL QUARTER WINDOW WEATHERSTRIP ON SASH, AS SHOWN**
NOTICE: If the weatherstrip has hardened, it may develop leaks.
Use a new one if possible.
2. **INSTALL QUARTER WINDOW GLASS RUN, AS SHOWN**
3. **INSTALL QUARTER WINDOW GLASS**
Pull up on the sash and install 2 glasses.
4. **INSTALL CENTER SASH**
Install the weatherstrip with the screw.

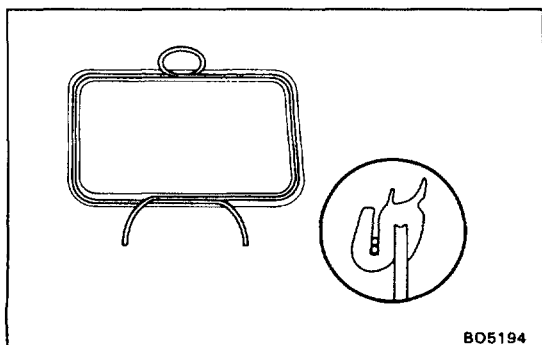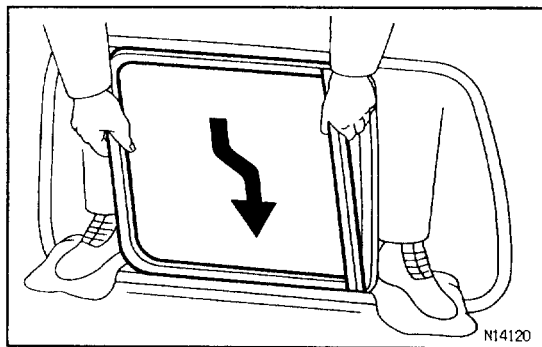

QUARTER WINDOW GLASS INSTALLATION


1. **INSTALL WEATHERSTRIP ON GLASS**
 - (a) Attach the weatherstrip to the glass.
NOTICE: If the weatherstrip has hardened, it may develop leaks. Use a new one if possible.
 - (b) Insert a cord into the groove of the weatherstrip all the way around with the ends overlapping.

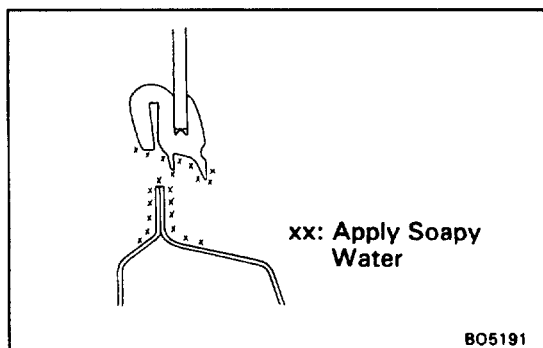


2. INSTALL QUARTER WINDOW GLASS

- (a) Apply soapy water to contact surface of the weatherstrip lip and to the body flange.

HINT: Begin installation in the middle of the lower part of the quarter window glass.

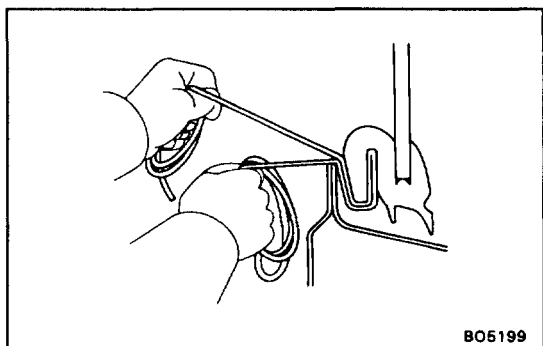

- (b) Hold the glass in position on the body.

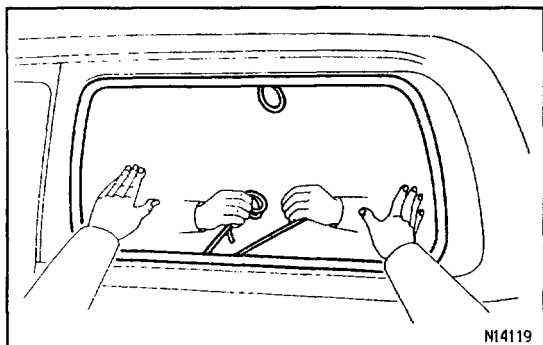


- (c) From the inside, pull on one cord at an angle so it pulls the lip over the flange. From the outside, press the glass along the weatherstrip until the glass is installed.

3. FIX IN GLASS

To make the glass fix snugly, tap from the outside with your open hand.

4. INSPECT FOR LEAKS AND REPAIR

- (a) Do a leak test.
(b) Seal any leak with auto glass sealer.

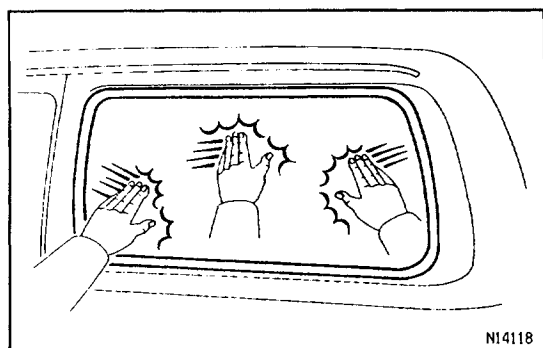

5. INSTALL THESE PARTS:

- (a) Roof headlining
- (b) Assist grips
- (c) Rear pillar garnish
- (d) Quarter pillar garnish
- (e) Rear door scuff plate
- (f) Rear seat side garnish
- (g) Quarter trim
- (h) Back door scuff plate
- (i) w/ No.2 Rear Seat
No.2 rear seat