



REAR DOOR COMPONENTS

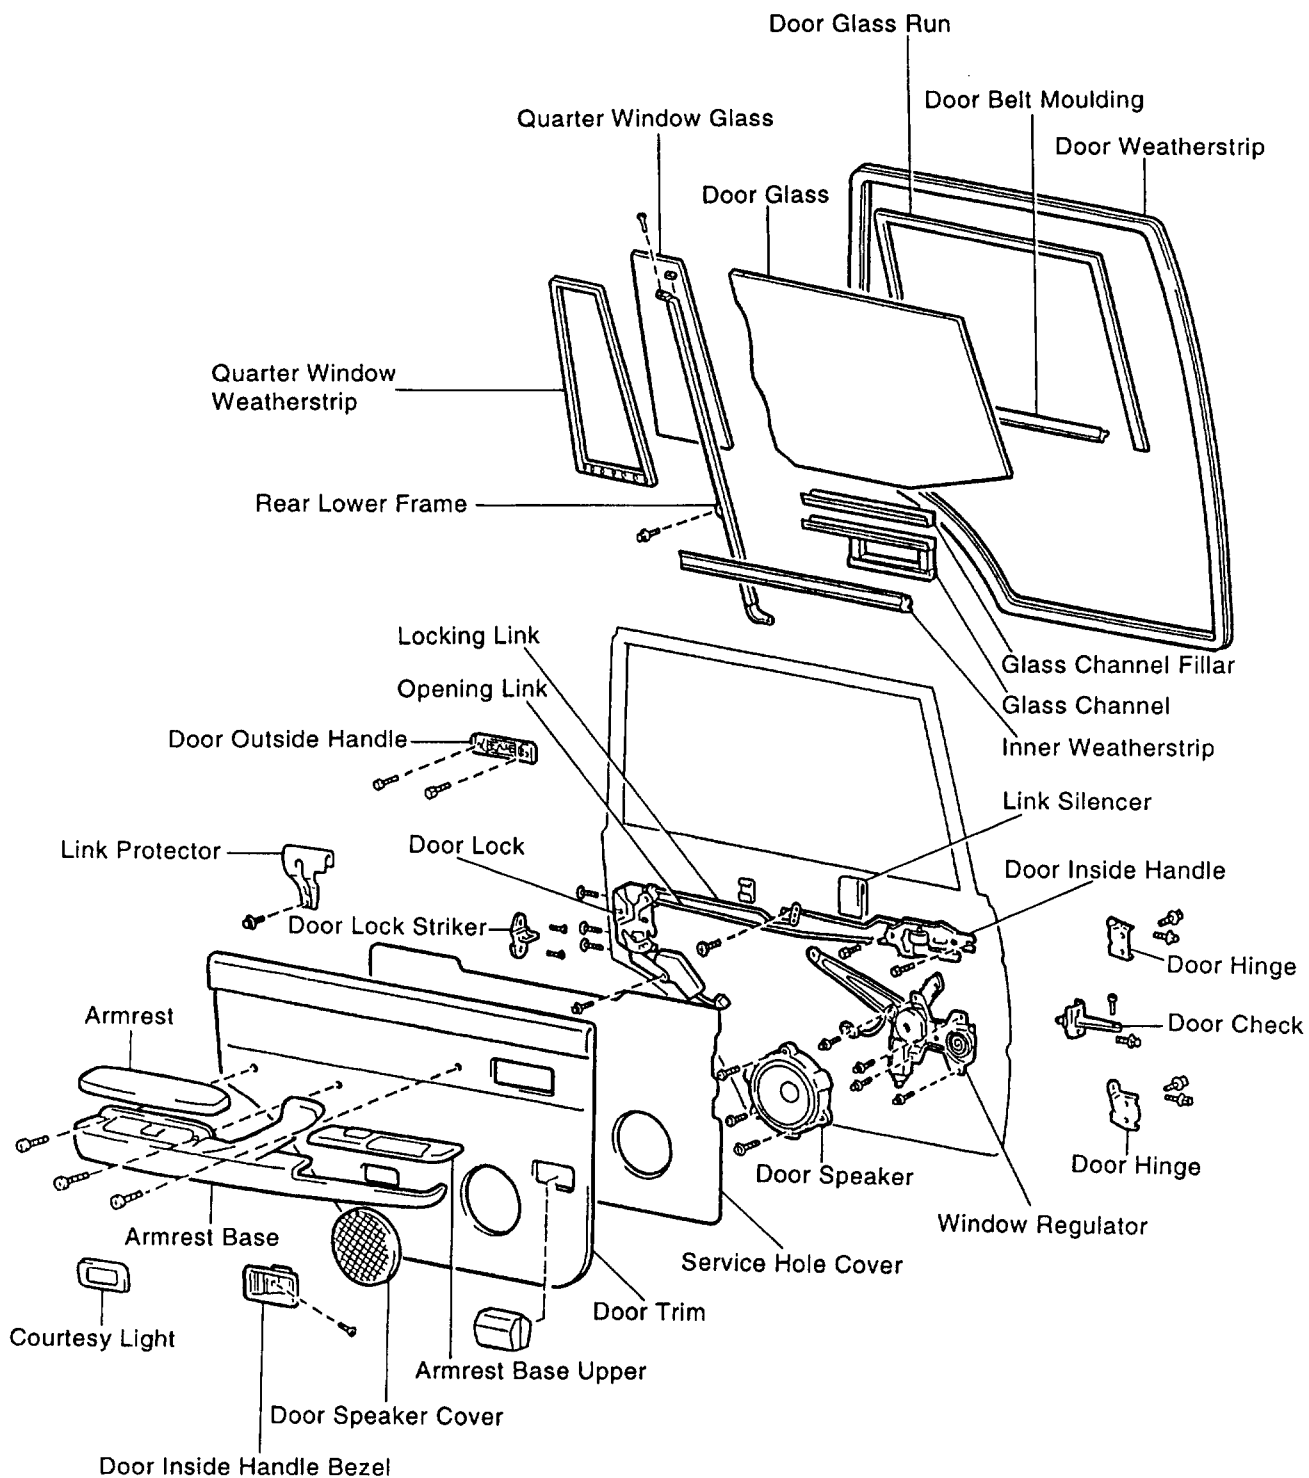

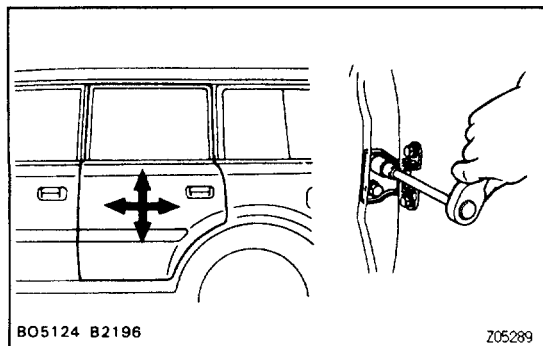


REAR DOOR ADJUSTMENT

1. ADJUST DOOR IN FORWARD / REARWARD AND VERTICAL DIRECTIONS

Adjust the door by loosening the body side hinge bolts.


Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)

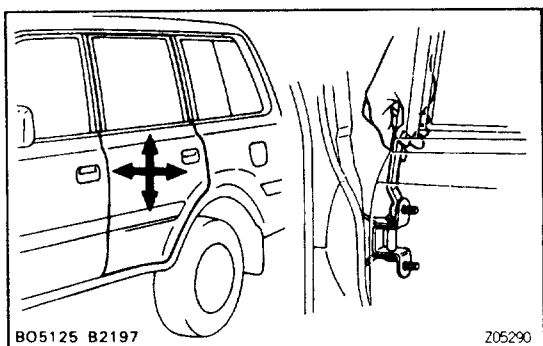

2. ADJUST DOOR IN LEFT /RIGHT AND VERTICAL DIRECTIONS


Adjust the door by loosening the door side hinge bolts.

Torque: 24 N·m (240 kgf·cm, 17 ft·lbf)

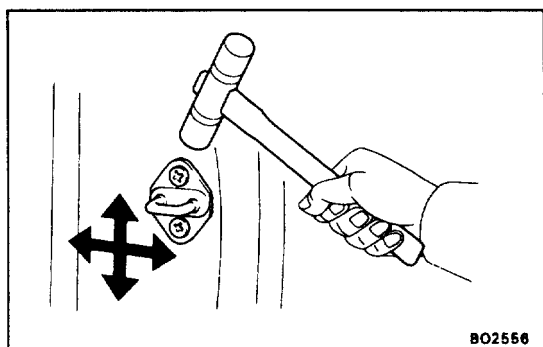

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Loosen the striker mounting screws to adjust.
- Using a plastic hammer, tap the striker to adjust it.

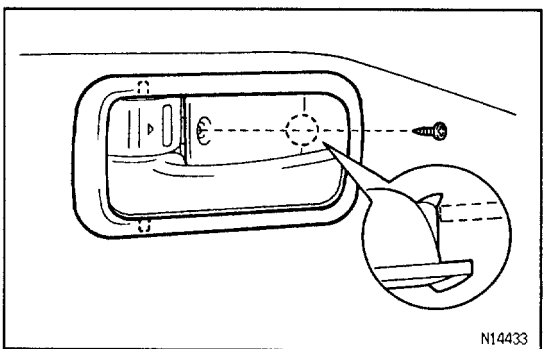


REAR DOOR DISASSEMBLY

Assembly is in the reverse order of disassembly.


1. REMOVE THESE PARTS:

HINT: Tape a screwdriver tip before use.


- Door inside handle bezel

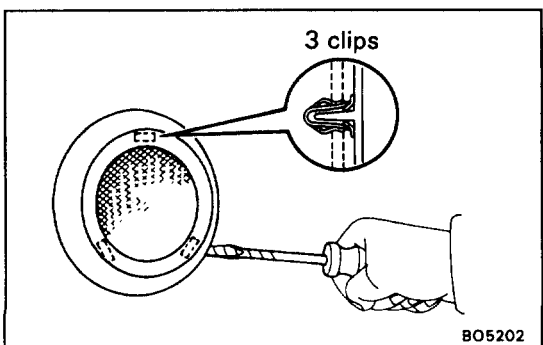

- Door speaker cover

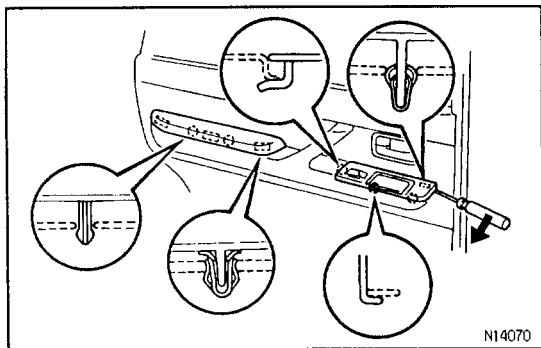


- (c) Ashtray
- (d) Armrest base upper
- (e) Armrest

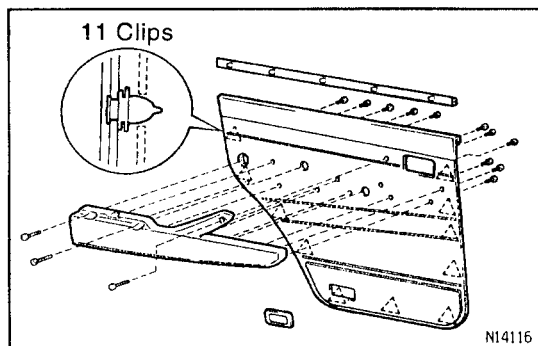

2. REMOVE DOOR TRIM


HINT: Tape a screwdriver tip before use.

- (a) Remove the courtesy light.
- (b) Remove the 3 screws from the door trim.
- (c) Using the screwdriver, remove the clips and remove the trim by pulling all of the trim up.
- (d) Remove the inner weatherstrip from the door trim.
- (e) Remove the 11 screws and the armrest base from the door trim.

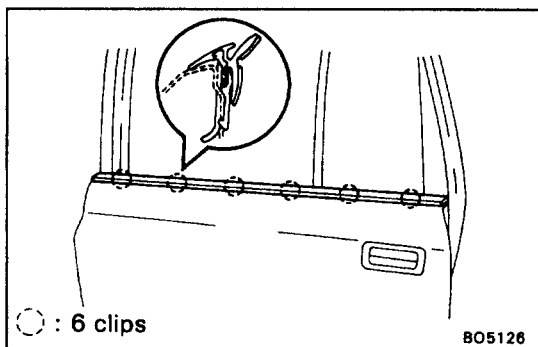



3. REMOVE THESE PARTS:

- (a) Door belt moulding
HINT: Pry out the clip from the edge of the panel, and remove the moulding.
- (b) Door weatherstrip
NOTICE: Do not pull strongly on the weatherstrip as it may tear.
- (c) Door inside handle

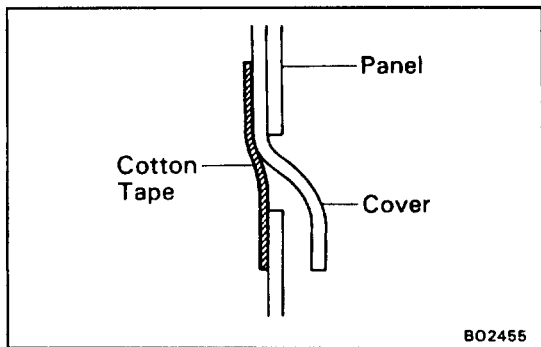


- (d) Service hole cover
ASSEMBLY NOTICE: Do not block the clip sealing with the tape.
- (e) Door speaker
- (f) Link protector
- (g) Locking link and door opening link
- (h) Door glass run
- (i) Rear lower frame
- (j) Quarter window glass with weatherstrip
- (k) Door glass
- (l) Window regulator
Torque: 5.0 N·m (50 kgf·cm, 43 in.-lbf)

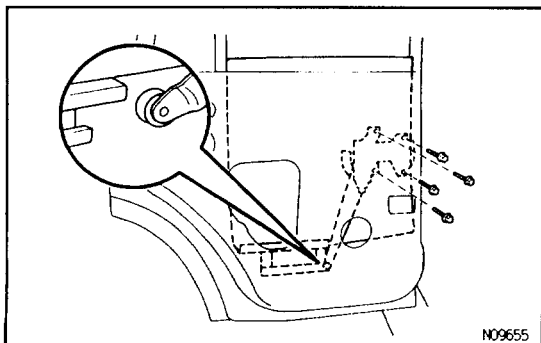

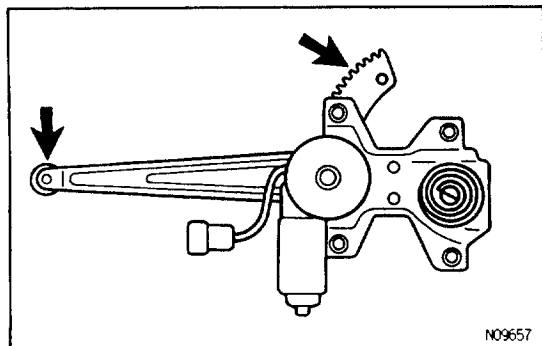

ASSEMBLY HINT: Apply MP grease to the sliding surface and gears of the regulator.

ASSEMBLY NOTICE: Do not apply grease to the spring.

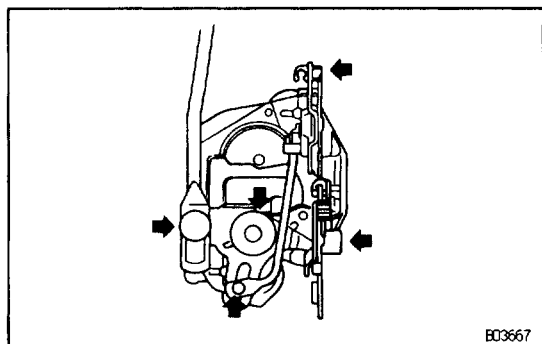

(m) Door lock


ASSEMBLY HINT: Apply adhesive to the 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent.

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

ASSEMBLY HINT: Apply MP grease to the sliding surface of the door lock.

(n) Outside handle

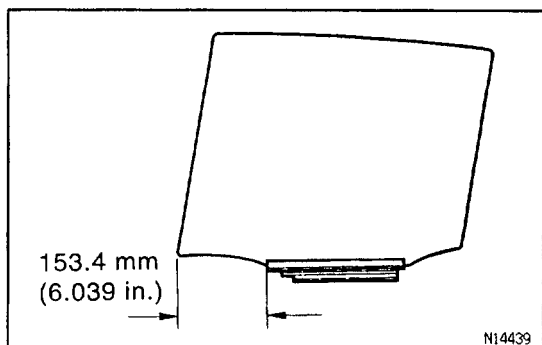

REAR DOOR GLASS REPLACEMENT

1. REMOVE GLASS CHANNEL WITH SCREWDRIVER OR LIKE OBJECT
2. APPLY SOAPY WATER TO INSIDE OF WEATHERSTRIP
3. INSTALL CHANNEL BY TAPPING IT WITH PLASTIC HAMMER