

DTC P1335 Crankshaft Position Sensor Circuit Malfunction (during engine running)

CIRCUIT DESCRIPTION

Refer to Crankshaft position sensor “A” circuit malfunction on page [EG-284](#).

DTC No.	Diagnostic Trouble Code Detecting Condition	Trouble Area
P1335	No crankshaft position sensor signal (NE signal) to ECM with engine speed 1,000 rpm or more	• Open or short in crankshaft position sensor circuit for NE signal • Crankshaft position sensor for NE signal • Starter • ECM

See DTC P0335 for Wiring Diagram and Inspection Procedure.